

OPERATOR'S MANUAL

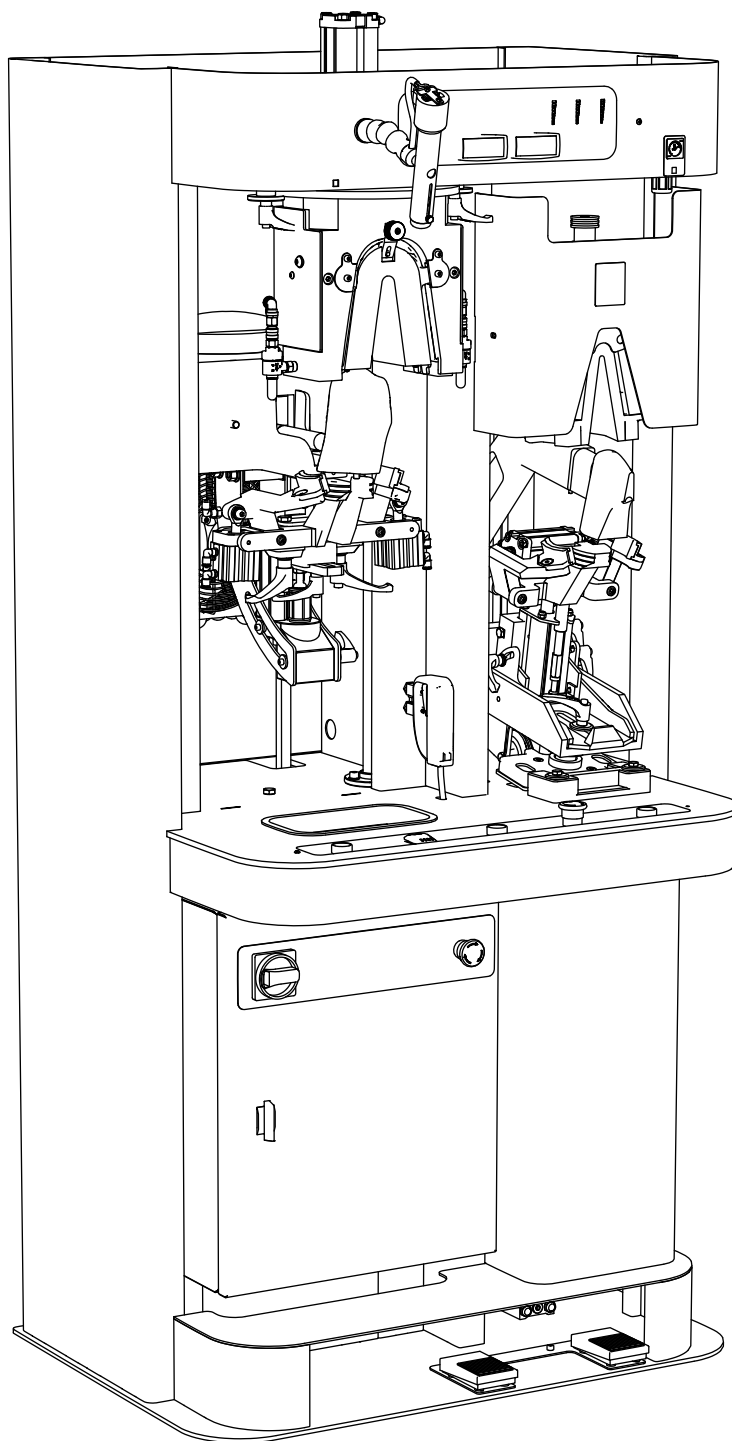


TABLE OF CONTENTS

Introduction	4
Safety regulations	4
Electric and pneumatic connections	4
Transportation	5
Packaging Components	5
Technical data & Dimensioning	5
Pincers Adjustments	6
Aluminum Mould replacement	6
Hot Station's Rubber Mould Replacement	7
Standard mould change	7
Cold Station P.U Mould Replacement	7
Cold station pincer adjustments	8
Extra adjustments	8
Wipers adjustments	8
Cushion rotation	9
Panel adjustments	10
Mould release (optional)	10
Projector adjustments	11
Maintenance of cooling unit	11
Lateral pressure adjustments	11
Lubrication	11
Operation - Hot station	12
Operation - Cold station	12
Multiform Mini Assembling	13
Multiform Mini Hot station cushion with support base	14
Multiform Mini Hot station pincers	15
Multiform Mini Hot station mould support	16
Multiform Mini Cold station pincers	17
Multiform Mini Cold station cylinder	18
Multiform Mini Cold station cushion	19
Multiform Mini Wipers	20
Multiform Mini LED Projector	21
Extra hot station moulds - on demand	21
Multiform Mini Accessories	22
Mini counter parts	23
Multiform Mini Main Pneumatic Diagram	24
Multiform Mini Pneumatic Diagram (inflatable cushion)	25
Several pneumatic assemblies	26
Multiform Mini Electric Diagram	27
Multiform Mini Electronic Boards diagram	28
Multiform Mini Troubleshooting	29

Introduction

The purpose of this manual is to inform the owner of this machine for its operation, its maintenance and for all the safety regulations.

Please read carefully all the instructions and follow them in order to use the machine properly in the production and avoid any case of injuries.

Our company does not have any responsibility for any changes happened on the machine by the owner, or actions which are different to what this manual refers.

SAFETY REGULATIONS

This machine is intended for professional use only.



WARNING!

Only one operator may work on the machine at a time.



WARNING!

Read and follow carefully all the relative instructions to avoid serious injury.

Only qualified and authorized personnel must use the machine.

- Operators are expressly forbidden to use the machine under the influence of alcohol or drugs capable of affecting physical and mental capacity.
- Keep unauthorized persons away from the work area.
- Make sure that the machine has been installed in compliance with the established legislation and standards.
- Always keep this user manual in a place where it can be readily consulted when working on the machine. Consult it whenever you are in need of information or explanation.
- Do not remove or deface the safety, danger, warning or instruction signs. Replace any missing or illegible Danger, Warning or instructions signs.
- Never use the machine if you notice any damaged electric wires.
- Never install the machine outdoors or in any place with a lot of moisture.




WARNING

Use only original spare parts, which can be supplied by the manufacturer or the local agent. Otherwise, your machine will not be a CE product.




WARNING

The machine frame must be earthed using the outside connection point marked according to the CE norms.

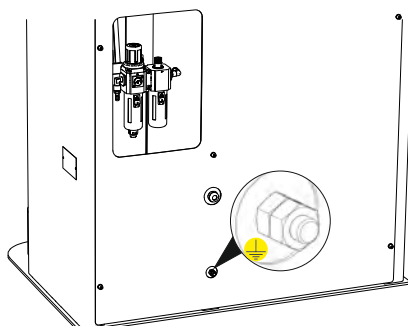


Electric and pneumatic connections

1. Connect the machine (SINGLE PHASE 220V - 50/60Hz).
2. Before plugging in the machine, check that the main supply voltage is the same as that indicated on the label situated on the back side of the machine.

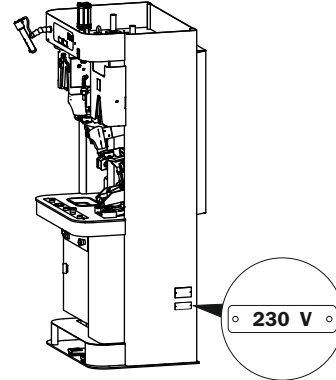


3. Check if the plug and socket have the same technical type. If not, use the suitable adapter after having consulted a certified electrician.

4. To disconnect the machine, turn the main switch off and remove the plug from the outlet.


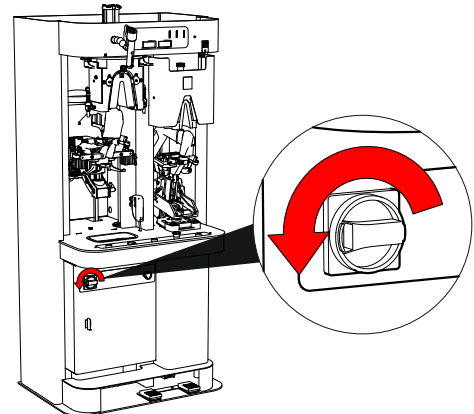


5. Connect the machine to air pressure 6 - 8bar.
6. Connect the proper pneumatic hose. Set the main pressure regulator, which is found, on the back part of the machine to 6 Bar.

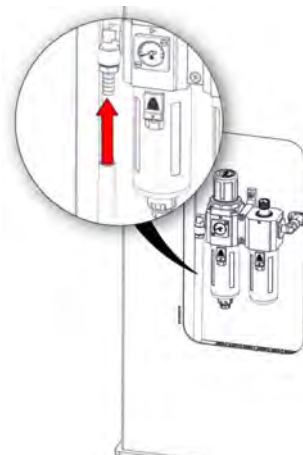


Transportation


1. Use the clevis's existed on the top of the machine with proper belts to lift the machine.
2. Pass the trans-pallet's forks under the pallet as shown in the Figure below.

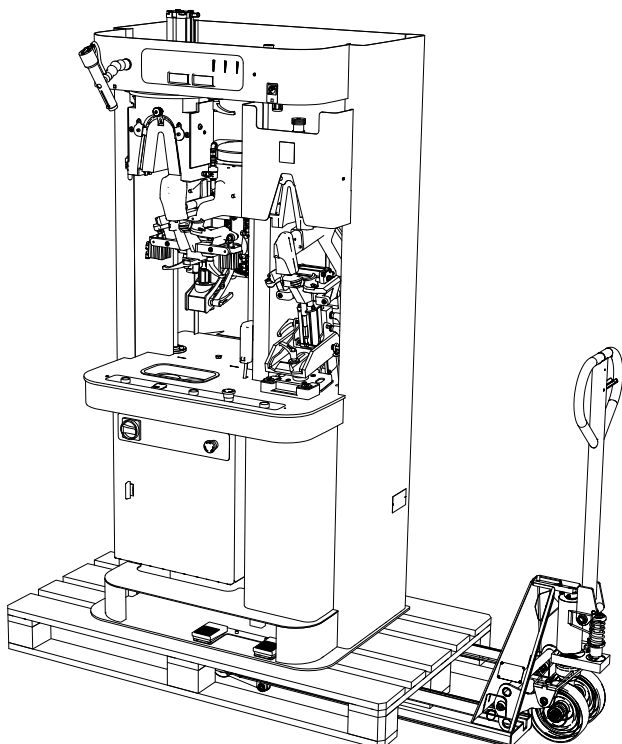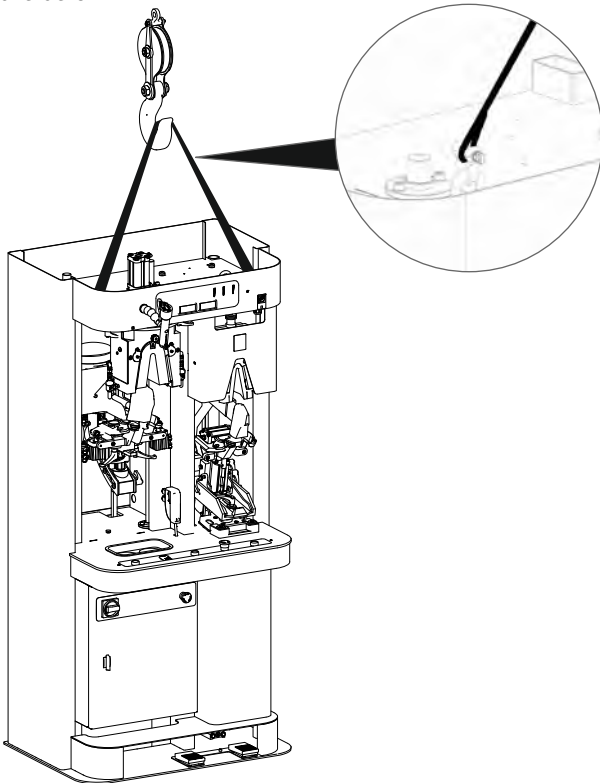

Packaging Components

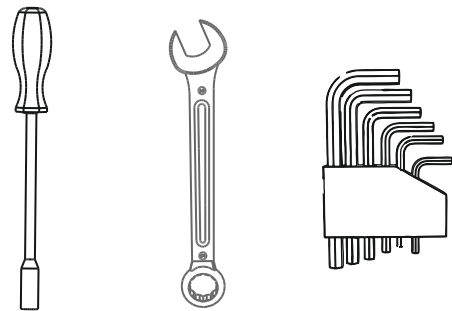

Technical data & Dimensioning

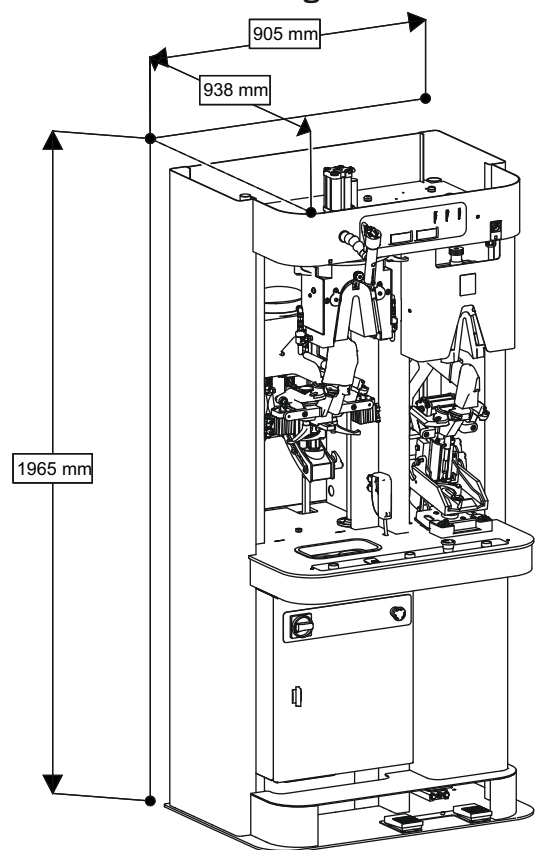

Technical Data

OPERATION	Electro-Pneumatic
PRESSURE	6 Bar
CAPACITY	1200 pairs per 8 hours max.
VOLTAGE	230V single phase 60Hz
POWER CONSUMPTION	1500 W
DIMENSIONS (mm)	905 X 938 X 1965
WEIGHT	330Kgs

Pincers Adjustments


Hot station's pincers adjustments



Loose the handle as shown to move pincers vertically.




Release the handle as shown above, to move pincers horizontally.

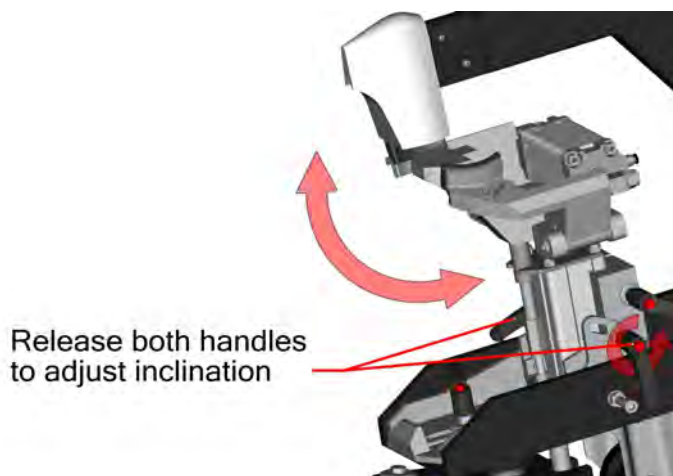


Must be used use it for high heel uppers.

Aluminum Mould replacement

Hot station's aluminum mould replacement

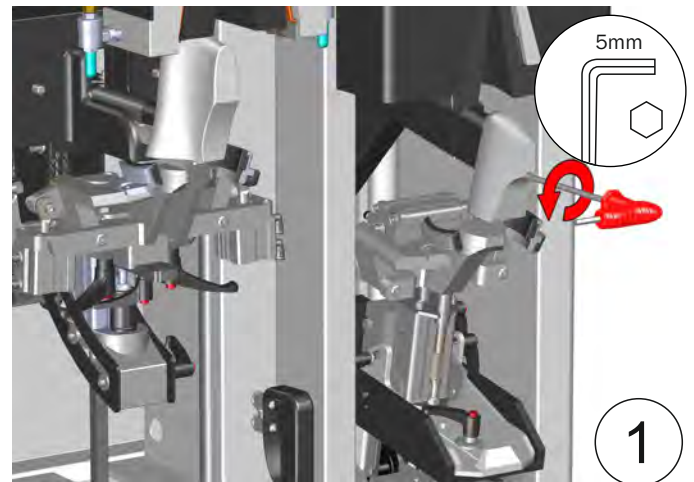


Use a 5mm allen key to loose screw.

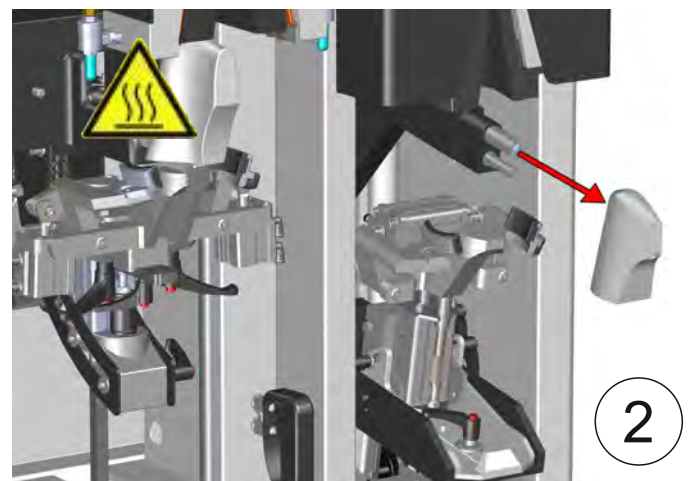


Be careful of the hot surface while removing the last.


Cold station's aluminum mould replacement

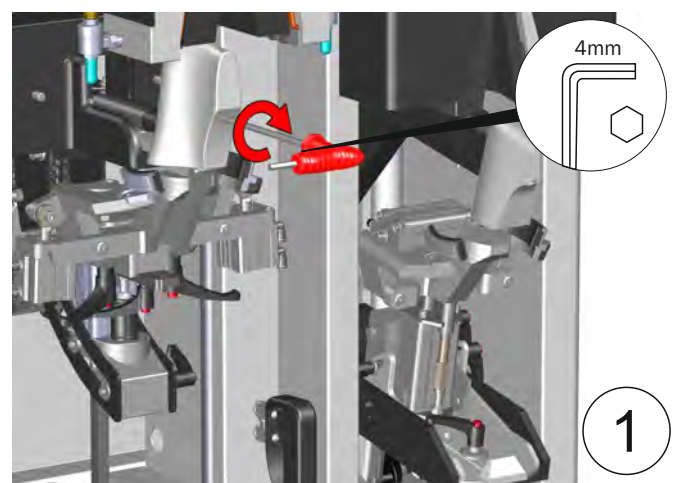

Use a 4mm allen key to loose screw.


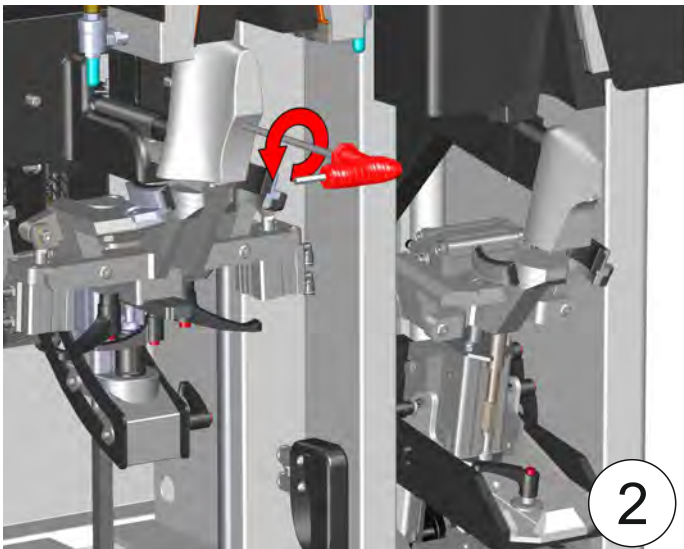


Cold Station P.U Mould Replacement

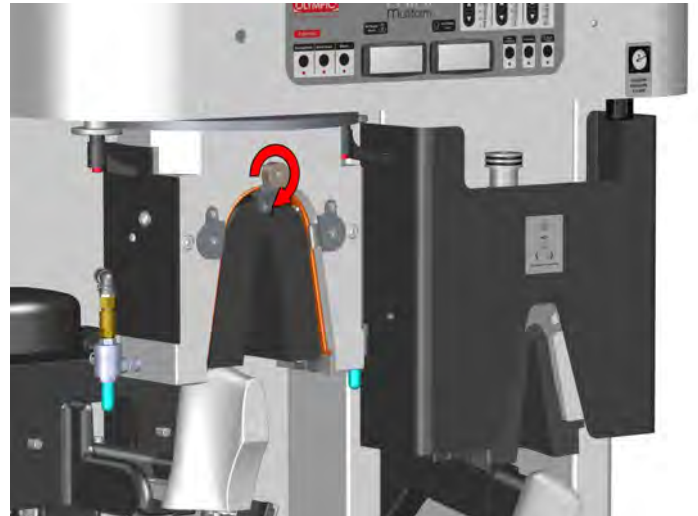


Loose the nut and pull slightly the mould support plate

Hot Station's Rubber Mould Replacement Mould release system (Optional)

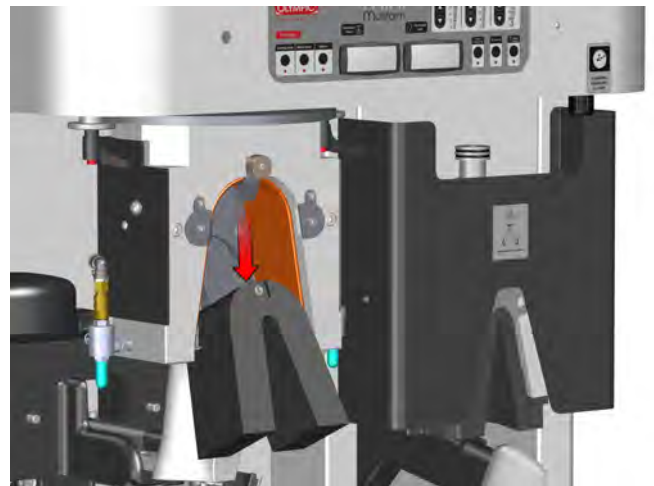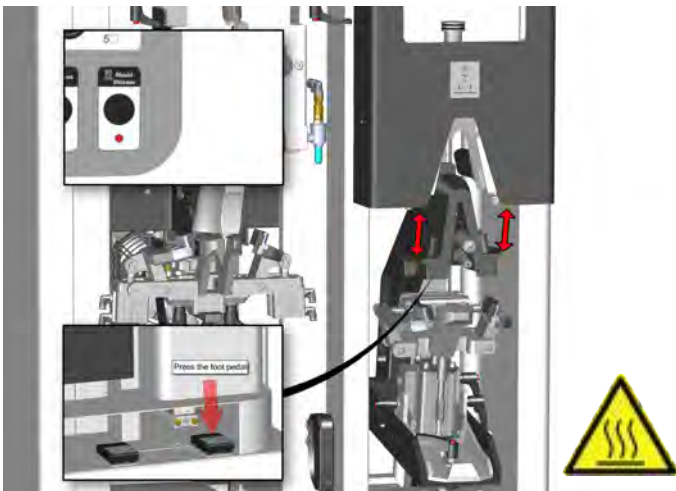


Remove the mould.

Standard mould change

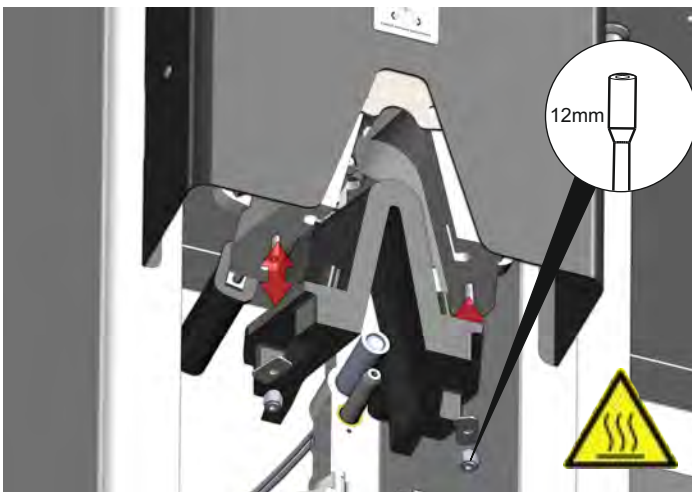


Use a 12mm wrench or nut to remove the mould

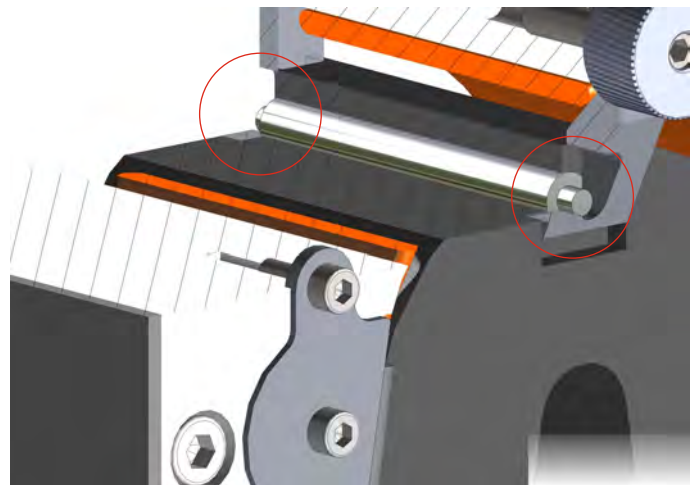


Important: During placement ensure that the pin is will be firmly placed between the two metal plates.


Cold station pincers adjustments

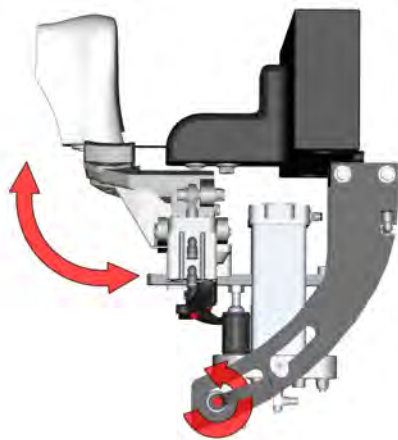


Loose the handle as shown above, and change inclination.

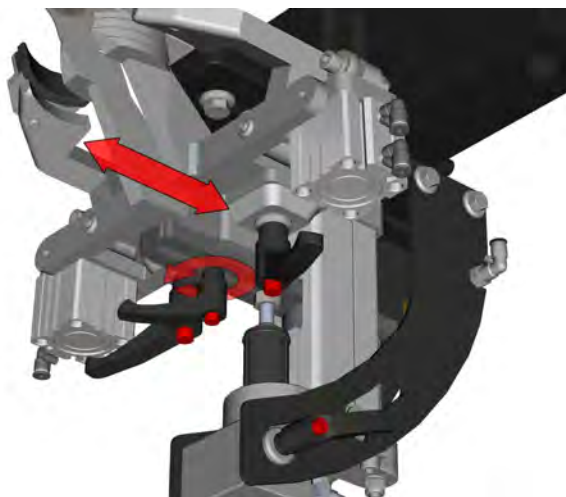

Release the handle as shown above, and move pincers inside-out.

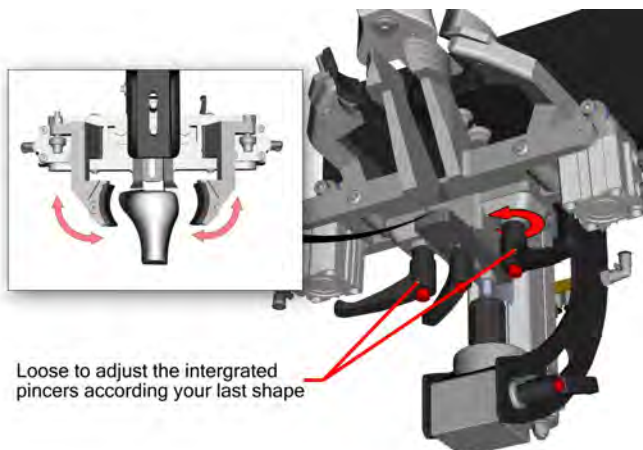

Loose to adjust the intergrated pincers according your last shape

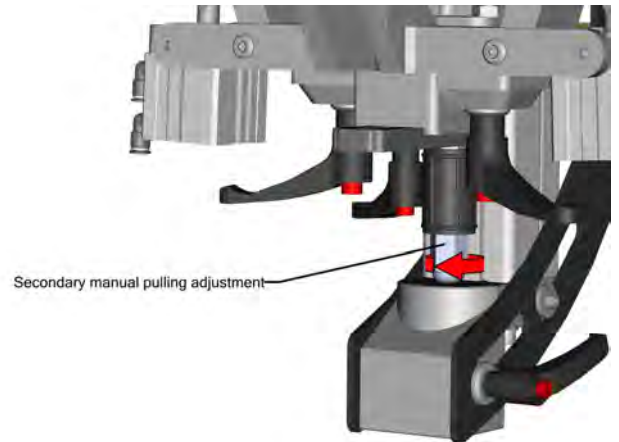


Secondary manual pulling adjustment

Manual pulling adjustment available also.


Extra adjustments

Cushion pressure adjustments (1 - 2,5 bar)

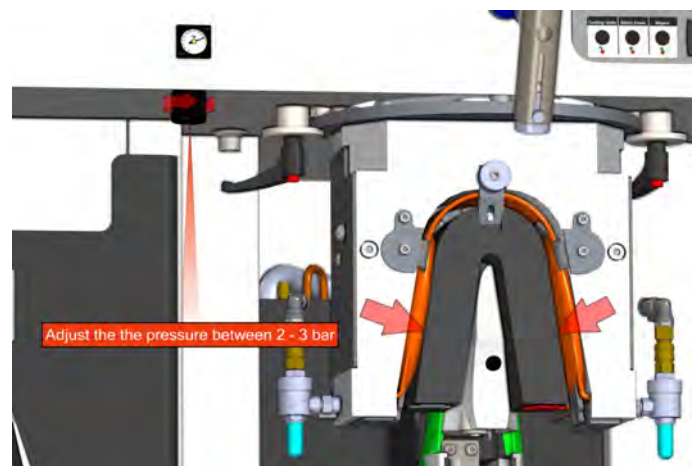

Adjust the the pressure between 2 - 3 bar

Wipers adjustments

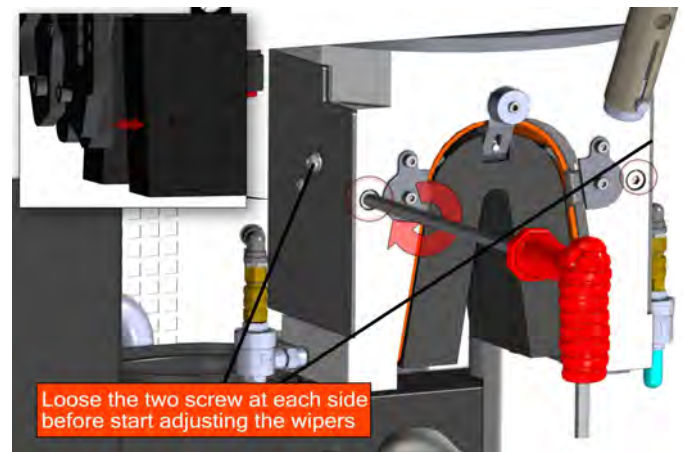


Loose the two screw at each side before start adjusting the wipers


Adjust the wipers by using a 6mm allen key as shown in the picture. Do not forget to loose the side mounted screws.

Cushion Rotation


When the cushion is rotated the machine can perform the below procedures

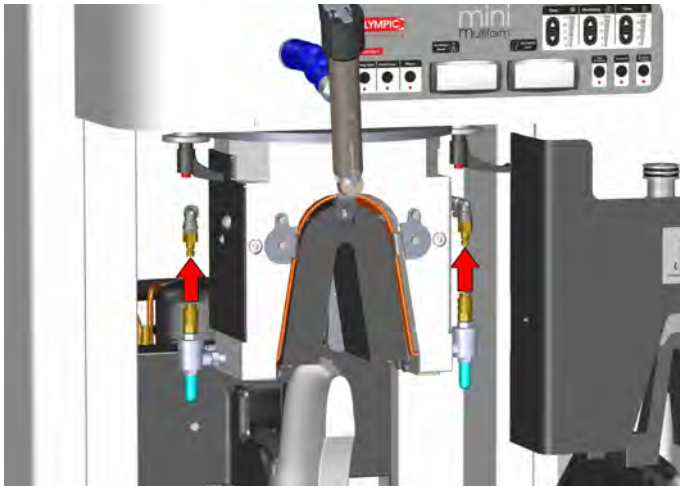

Unplug the side couplings.

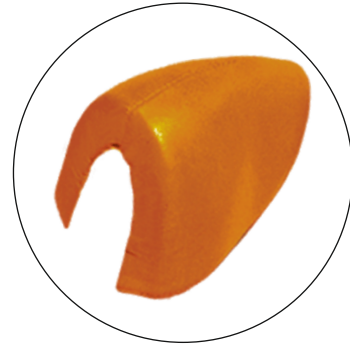


Mini - counter flanging

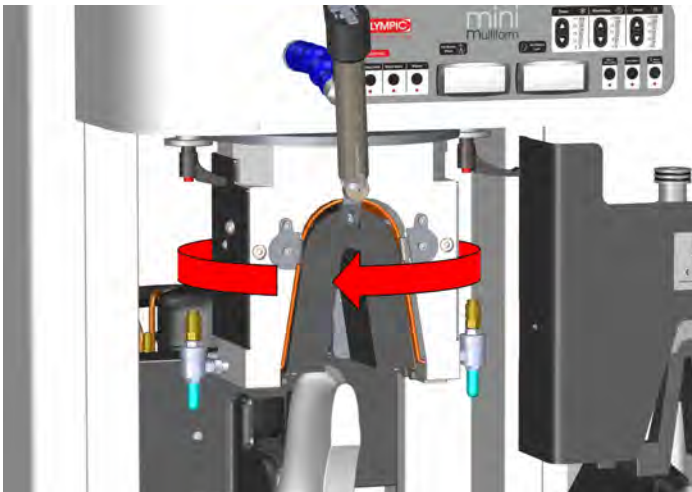

Loose the handles, and rotate the head 180°.



Mocassin attachment (ASM-00376) - ON DEMAND

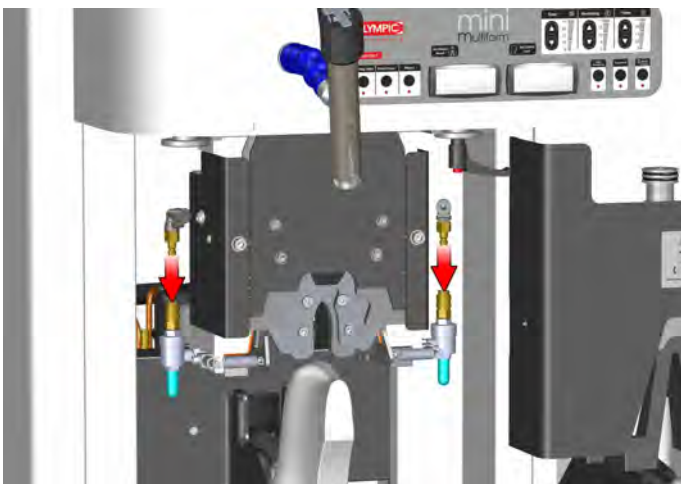

Tight the handles, and plug the couplings.




Check the accessories page


Mocassin Flanging
(On demand)

Panel Adjustments


Warning: when opening the general switch of the machine, wait for the indications on the display panel, to stop blinking.

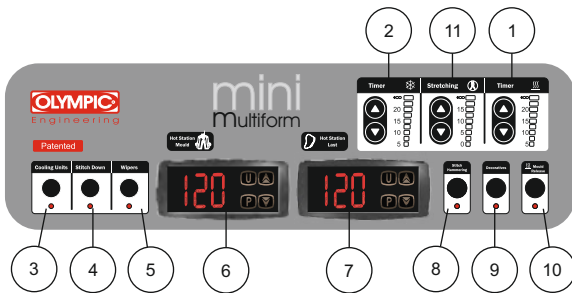


1. Adjust the cycle time of the hot station
2. Adjust the cycle time of the cold station
3. Cooling unit on/off
4. Press to execute the stitch down procedure. The optional stitch down attachment must be installed on the machine.
5. Activate / deactivate the wipers. Activate the wipers in order to succeed flanging in the back-part of the shoe upper.
6. Controls the temperature of silicon rubber in hot station. Range from 130 °C to 170 °C.
7. Controls temperature for aluminum (teflon coated) last in hot station. Range from 80 °C to 150 °C.
8. Stitch Hammering (optional): When activated creates a "hammering simulation" at the end of the hot station's cycle in order to better open the back seam of the upper. Ideal for ladies uppers.
9. Decoratives: When activated the cold station cushions are deactivated in order to avoid decoratives breaking. The upper remain pulled on the cold station pincers until the end of operation cycle.
10. Mould release (optional): Activate / deactivate the auto mould release system of the hot station. See the procedure below.
11. Stretching: adjusts electronically the cold station's pincers pulling. Avoid the repetitive puling of the upper by pressing the pedal and as soon as you press once use the over-stretching button to add extra pulling when necessary.

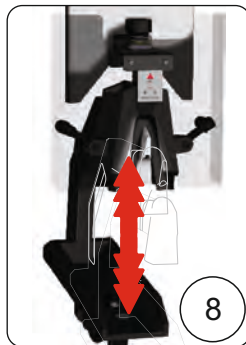


Mould release (optional)

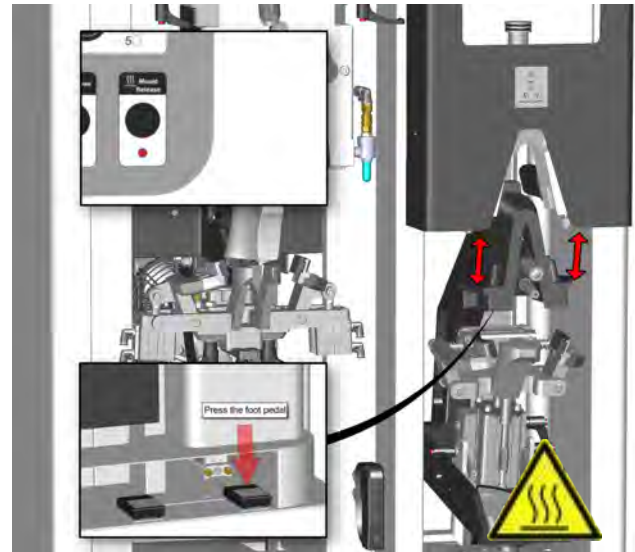

Press the pedal while you have activated the mould release function on the panel.

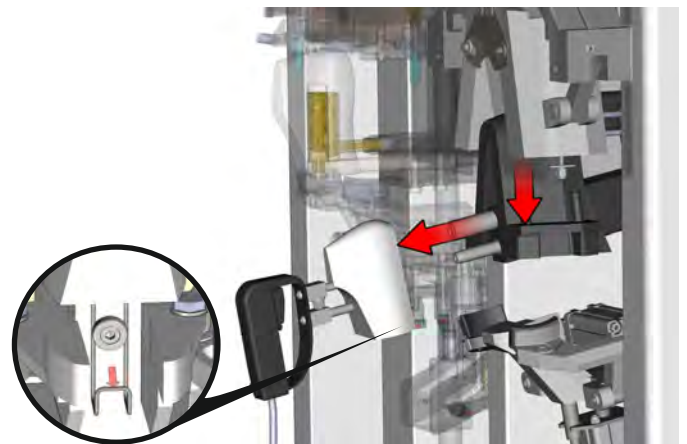


Use the special air gun as shown in the picture while in the same time pull the special wire of the last.

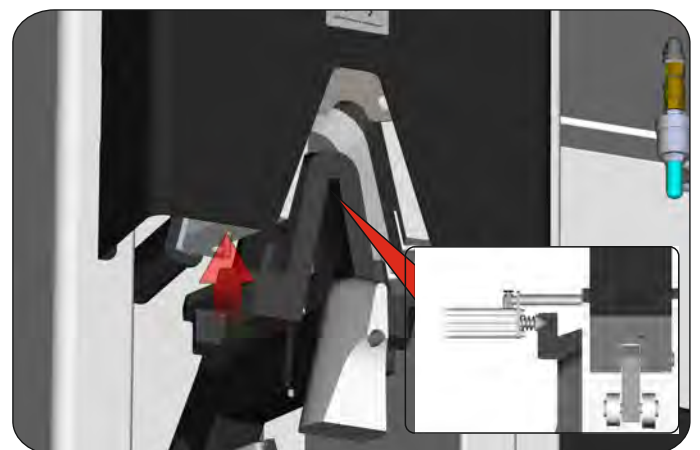

During mould placement ensure that the pin will get in the hole as shown

Projector adjustments

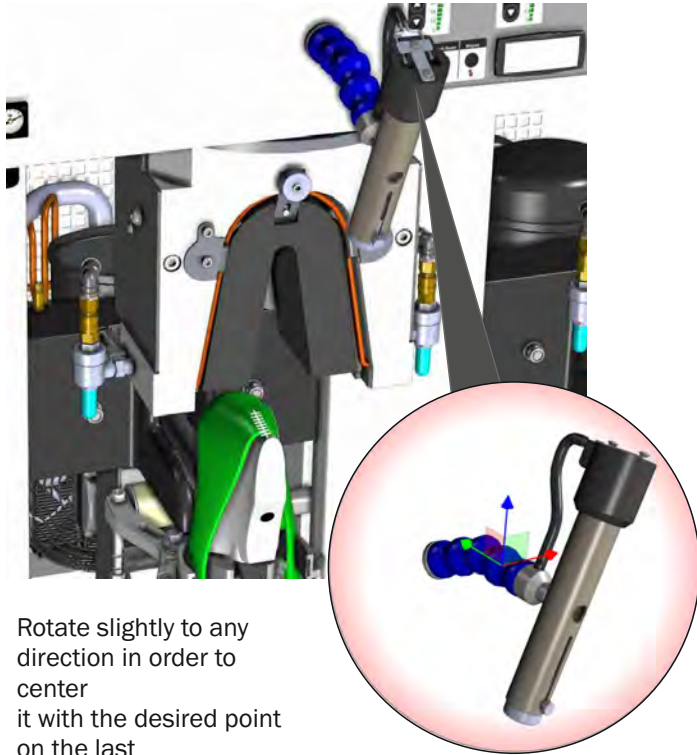

Maintenance of cooling unit

Clean the condenser (radiator) of the cooling unit once per month by using pressure.



COOLING UNIT SPECIFICATIONS

Cooling gas type	R404A
Cooling gas qty	330gr
Compressor Power	1 1/4 Hp

Lubrication


Keep the FRL (air-filter-regulator & lubricator) always filled with oil. We note that with 8 hours of work per day, the lubricator oil is consumed within 20-25 days approximately. If this does not occur, adjust the oil flow using the adjuster on upper part of lubricator. We recommend the use of pneumatic oil. Once per week lubricate all moving parts of the machine.



Lateral pressure adjustments


In case that there are metal decoratives on your uppers:

1. Use the Decoratives function on control panel.
2. In the hot station you can adjust the cushion movement as shown in the picture below.

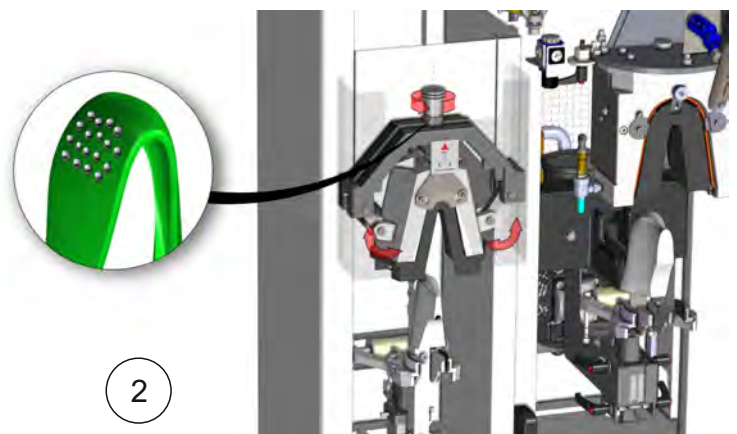

Operation

Cold Station

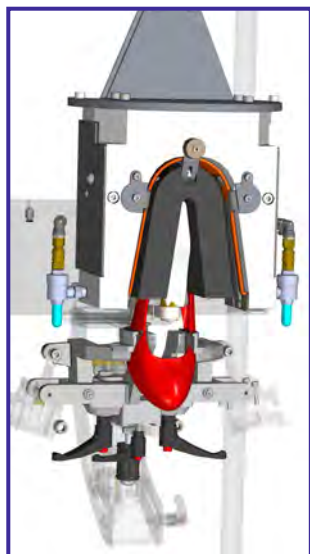

1. Press and keep your foot on the pedal to pull the upper



2. Press simultaneously in order to press the upper and complete the operation cycle




OVER STRETCHING

In case an upper needs pulling, use the OVERSTRETCHING JOYSTICK.

It stretches the upper 1mm every time is pressed


By using this method we avoid repetitive pulling of the upper which may cause upper deformation.

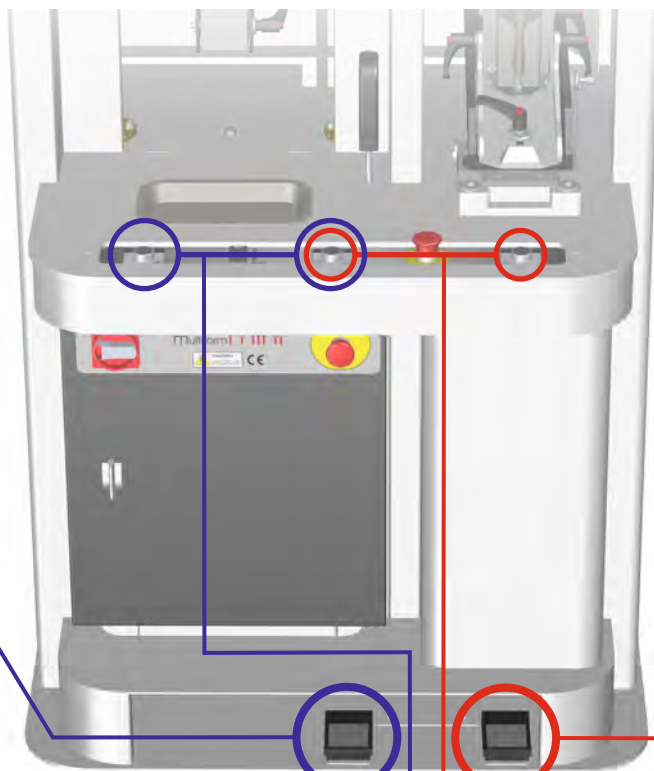

Hot Station



1. Press and keep your foot on the pedal to pull the upper

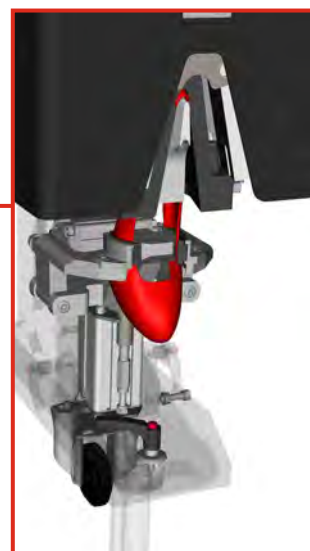

2. Press simultaneously in order to press the upper and complete the operation cycle

Final Result



In case of emergency press the emergency stop button

ASSEMBLING Multiform Mini

Hot Station Cushion with Support Base (Page 14)

Hot Station Pincers (Page 15)

Hot Station Mould Support (Page 16)

Cold Station Pincers (Page 17)


Cold Station Cylinder (Page 18)

Cold Station Cushion (Page 19)


Wipers (Page 20)

LED Projector (Page 21)

Pneumatics (Page 26)

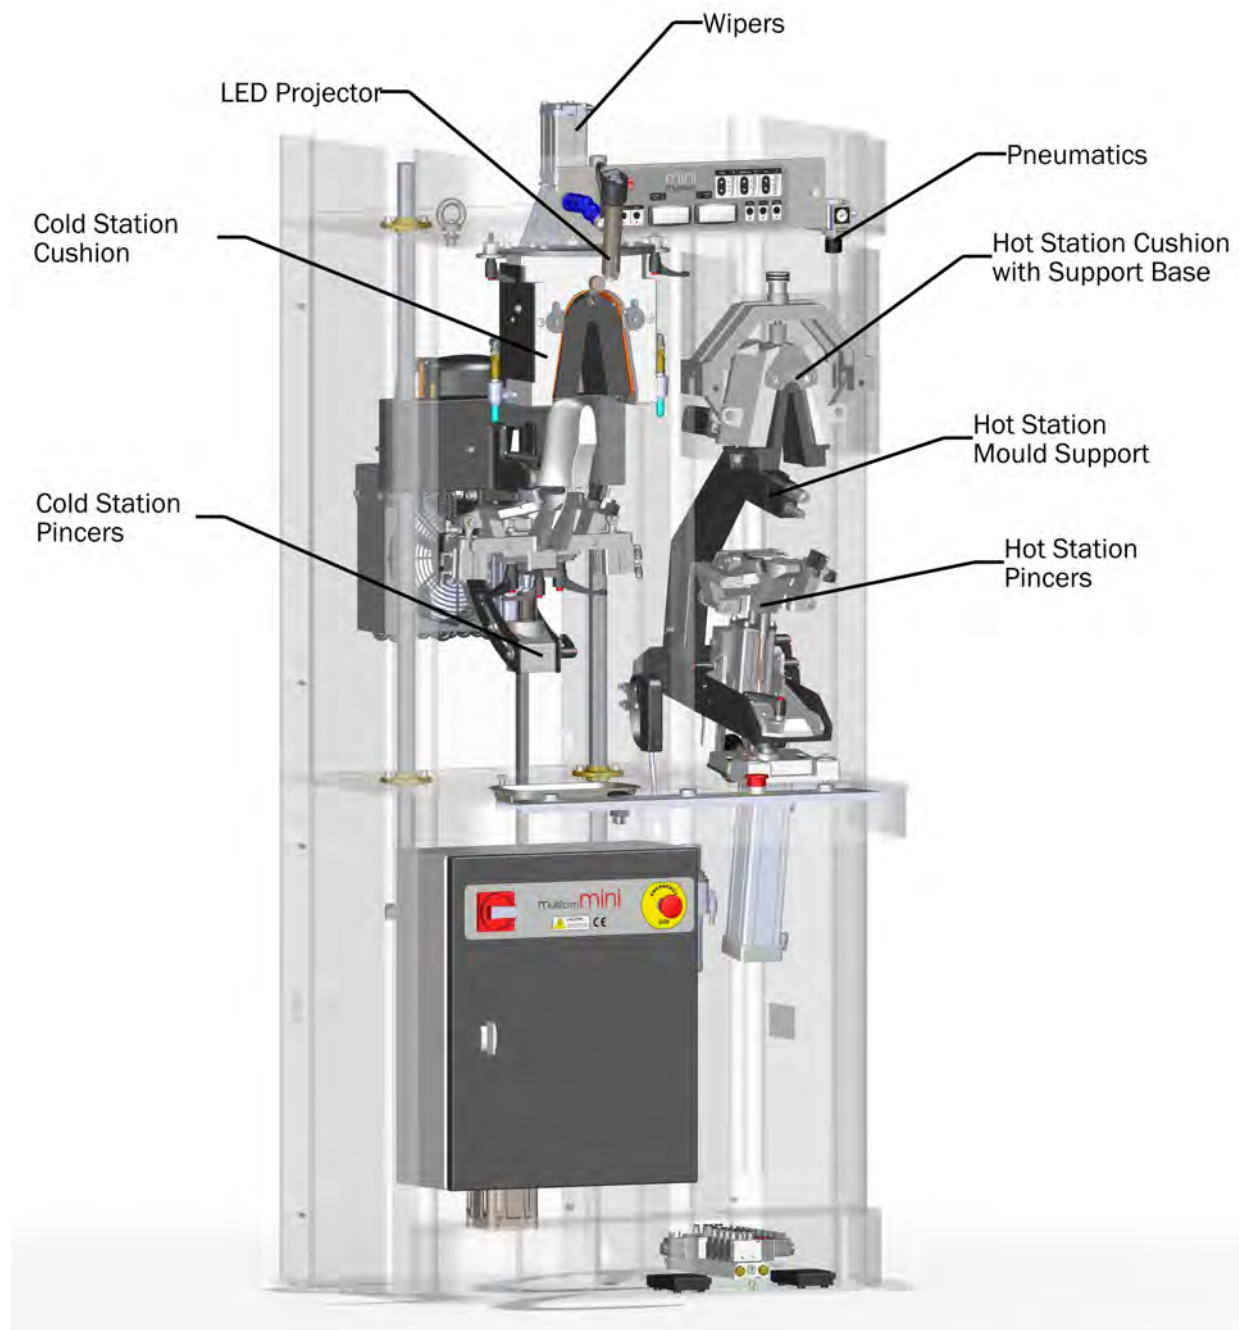

ASM-00479 (HOT STATION CUSHION WITH SUPPORT BASE)

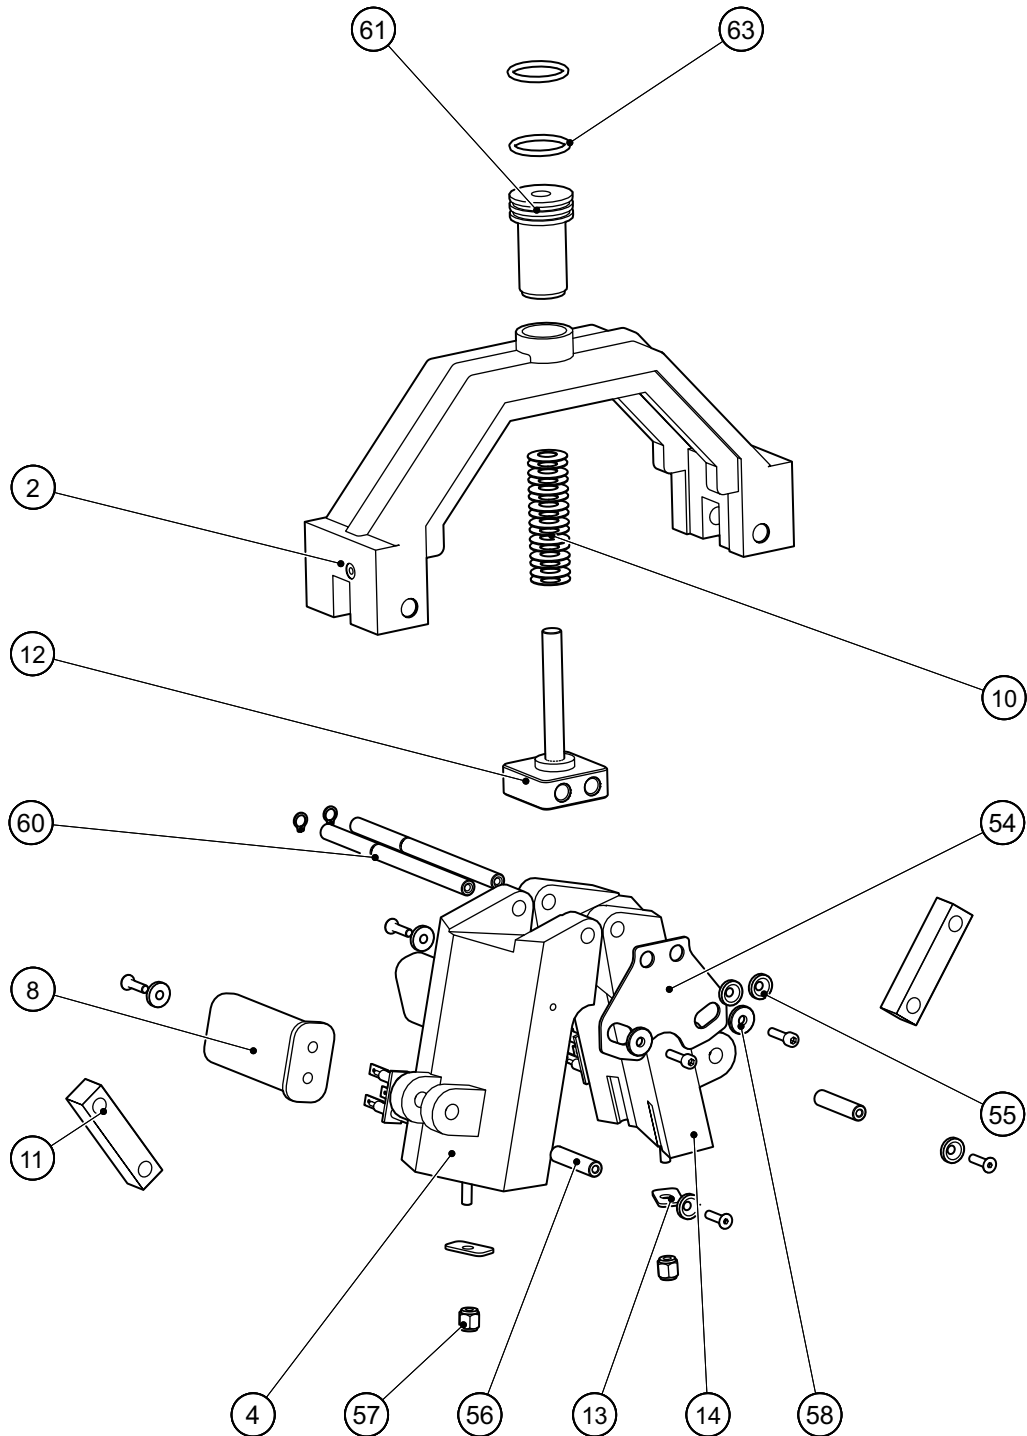


BOM ID	PartNo	Description	Qty
2	CAS-00102	CUSHION SUPPORT	1
4	ASM-00476	HEATED CUSHION (LEFT), MF-3 & MF-4	1
8	ELE-00016	ELECTRIC ELEMENT ISOLATOR	2
10	FAS-00003	WASHER, SPRING, DIN9023, 28X12.2X1	16
11	GEN-00245	BRACKET	2
12	ASM-00434	GUIDE	1
13	LAS-00051	WASHER RECTANGULAR $\Phi 7 \times 16$	2
14	ASM-00475	HEATED CUSHION (RIGHT), MF-3 & MF-4	1
54	LAS-00453	HOT CUSHION COVER	1

BOM ID	PartNo	Description	Qty
55	REV-00029	$\Phi 5$ WASHER FOR CUSHION PINS	6
56	REV-00067	PIN	2
57	REV-00074	NUT, CUSTOM, M6	2
58	REV-00078	WASHER, CUSTOM, FLAT, $\Phi 6$	2
60	REV-00245	AXLE	2
61	REV-00255	STROKE ADJUSTER	1
63	RUB-00089	ORING, NBR, 35x3.5	2


HOT STATION PINCERS

BOM ID	PartNo	Description	Qty
1	CAS-00017	PINCER	2
2	CAS-00050	CASTED ARM BODY (LEFT)	1
3	CAS-00051	CASTED ARM BODY (RIGHT)	1
4	CAS-00069	CBS PISTON CAP, FRONT, Φ40	2
5	CAS-00082	CYLINDER SLIDING BASE	1
6	CAS-00083	SLIDING PINCER'S BASE	1
8	RUB-00072	BRAKE, FRONT, Φ40	1
9	RUB-00068	BRAKE RUBBER, BACK, Φ40	1
10	CBSXX-99	BRASS RING FOR ØXX CAP	2
11	CYL-00027	CYLINDER Φ50X115	1
13	CYL-00029	CYLINDER Φ40 FOR PINCERS	1
14	GEN-00067	CL. LEVER, MALE, ELES, M6X20	2
16	GEN-00068	CL. LEVER, MALE, ELES, M8X20	1
48	GEN-00070	CL. LEVER, FEMALE, ELES, M8	1
49	GEN-00072	DKN Ø40	2
50	GEN-00175	PISTON SEAL RING 44.5x49.5x5.4	1
51	GEN-00226	OAK PISTON INTERNAL SEAL (MF)	1
52	GEN-00250	THREAD ROD M8	1
53	LAS-00159	Ø50 PISTON CAP	1
54	LAS-00160	Ø50 PISTON CAP	1
55	PNE-00028	FITTING, PARALLEL, 1/8 - Ø4	2
56	PNE-00030	FITTING, ANGLE, M5 - Φ4	1
57	PNE-00971	M5 BANJO STEM SINGLE LIGHT	1
58	PNE-00972	SINGLE BANJO BODY	1
59	REV-00028	MF88-99 BRACKET PINS	2
62	REV-00078	WASHER, CUSTOM, FLAT, Φ6	2
63	REV-00079	WASHER, CUSTOM, FOR Φ8	1
64	REV-00113	WASHER, CUSTOM	1
65	REV-00133	WASHER, CUSTOM, Ø14X2.5	4
66	REV-00136	NUT, CUSTOM, M8, CUT EDGES	2
67	REV-00138	CBS SCREW, M6	8
68	REV-00192	STEEL TUBE Φ10-Φ12	2
69	REV-00197	BRASS BEARING Φ50	1
70	REV-00198	PISTON	1
71	REV-00201	SPACER	2
72	REV-00202	ROD	2
73	REV-00234	PULLING REGULATOR	1
74	REV-00295	FITTING, CUSTOM	1
75	REV-00296	M10 THREADED PIN	2
76	RUB-00012	PISTON SEAL Ø50	2
77	RUB-00015	ROD WIPER	1
78	RUB-00062	ORING, NBR, 44X3	1
79	RUB-00092	PINCER RUBBER (v.2014)	2
80	SPR-00018	COMPRESSION SPRING	2
222	ASM-00316	CASTED PINCER SUPPORT	1

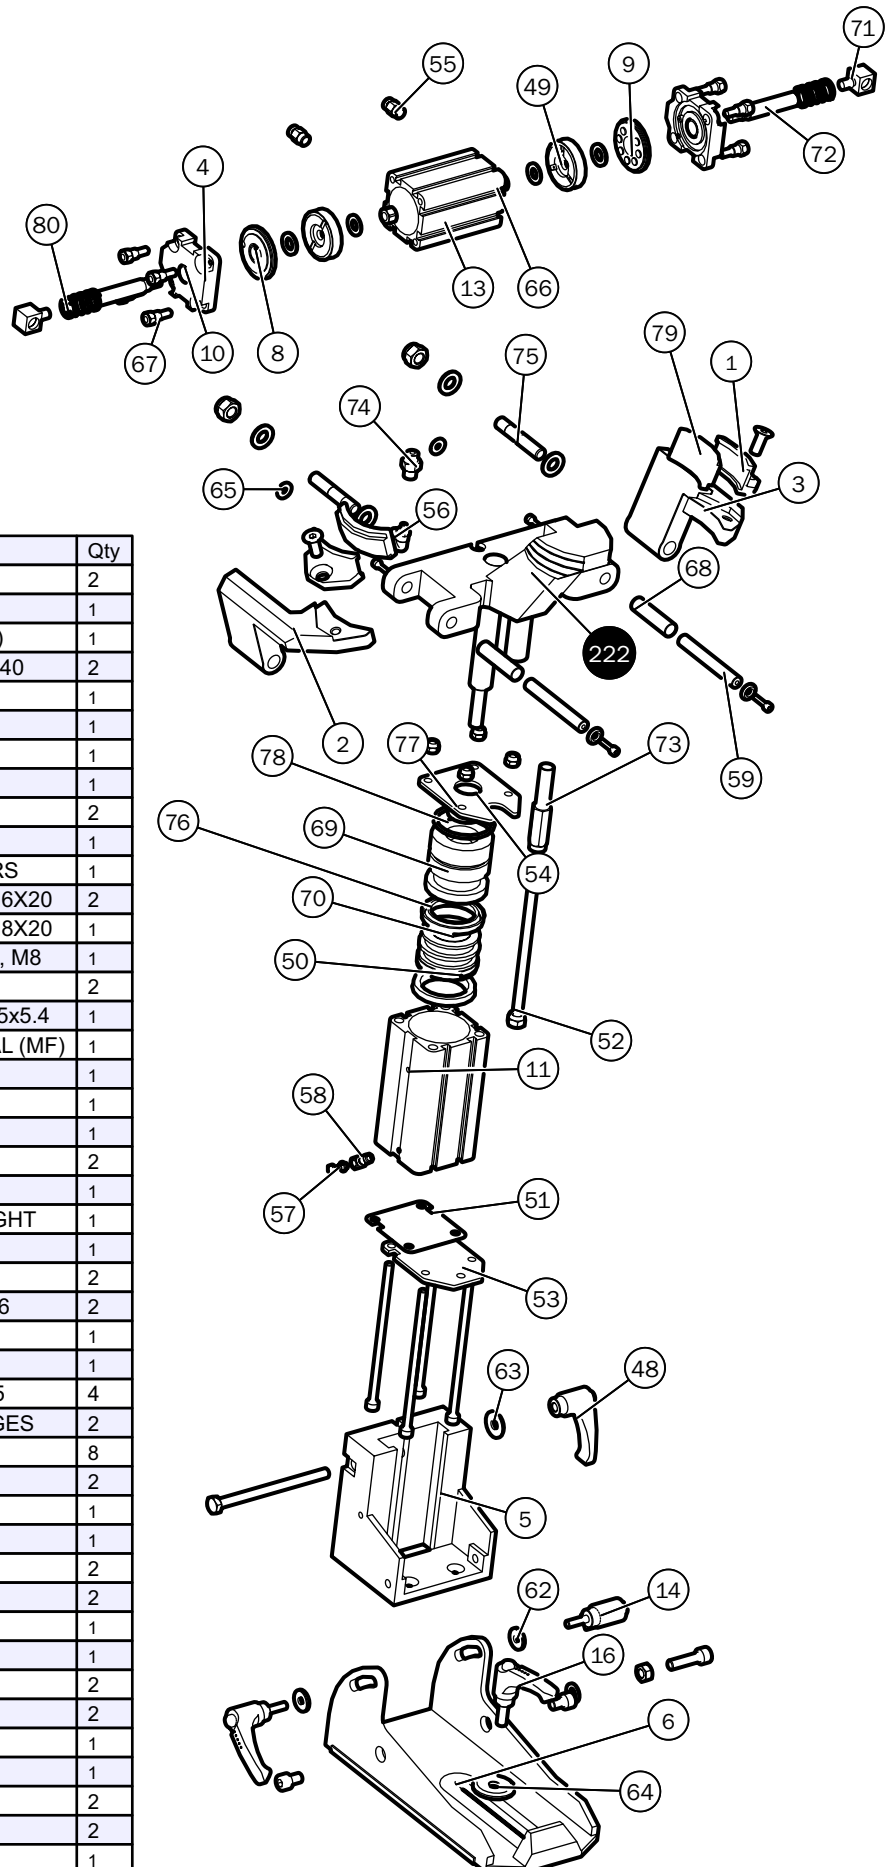


ASM-00354 (HOT STATION MOULD SUPPORT)

BOM ID	PartNo	Description	Qty
12	REV-00054	SPACER $\Phi 28 \times L23$	1
15	GEN-00225	AXLE $\Phi 10 \times 142$	1
81	CAS-00081	ARTICULATION	1
82	ASM-00325	WHEEL	1
83	ASM-00322	END CAP	1
84	CAS-00099	END CAP, $\Phi 63$	1
85	CYL-00028	CYLINDER $\Phi 63 \times 295$	1
86	ELE-00217	RESISTANCE $\Phi 16 \times 85$ 48V450W S400 M/M	1
91	ASM-00317	HOT STATION MOULD	1
92	GEN-00294	DKN $\Phi 63$, NORMAL	1
93	PNE-00043	FITTING, ELBOW, 1/4 - $\Phi 6$	1
94	PNE-00044	FITTING, ELBOW, 1/8 - $\Phi 6$	1
95	REV-00056	THERMISTOR BRACKET	1
97	REV-00076	WASHER	1
98	REV-00113	WASHER, CUSTOM	2
99	REV-00193	WASHER, CUSTOM, TAPER, $\Phi 23 \times \Phi 10 \times 5$	1
100	RUB-00005	PISTON RUBBER $\Phi 63$	1
101	RUB-00018	RUBBER	1
102	RUB-00019	STOPPER	1
103	RUB-00060	SHOCK ABSORBING RUBBER	2


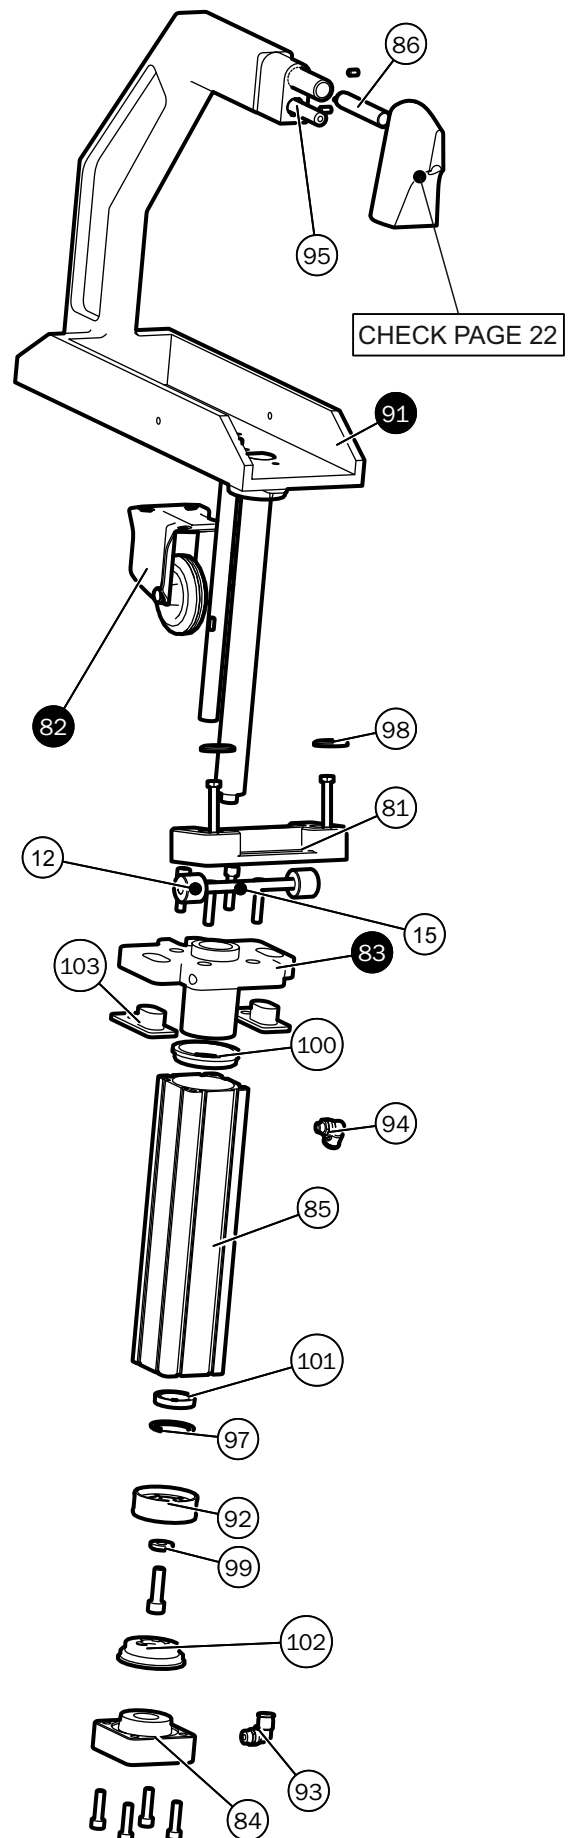


COLD STATION PINCERS

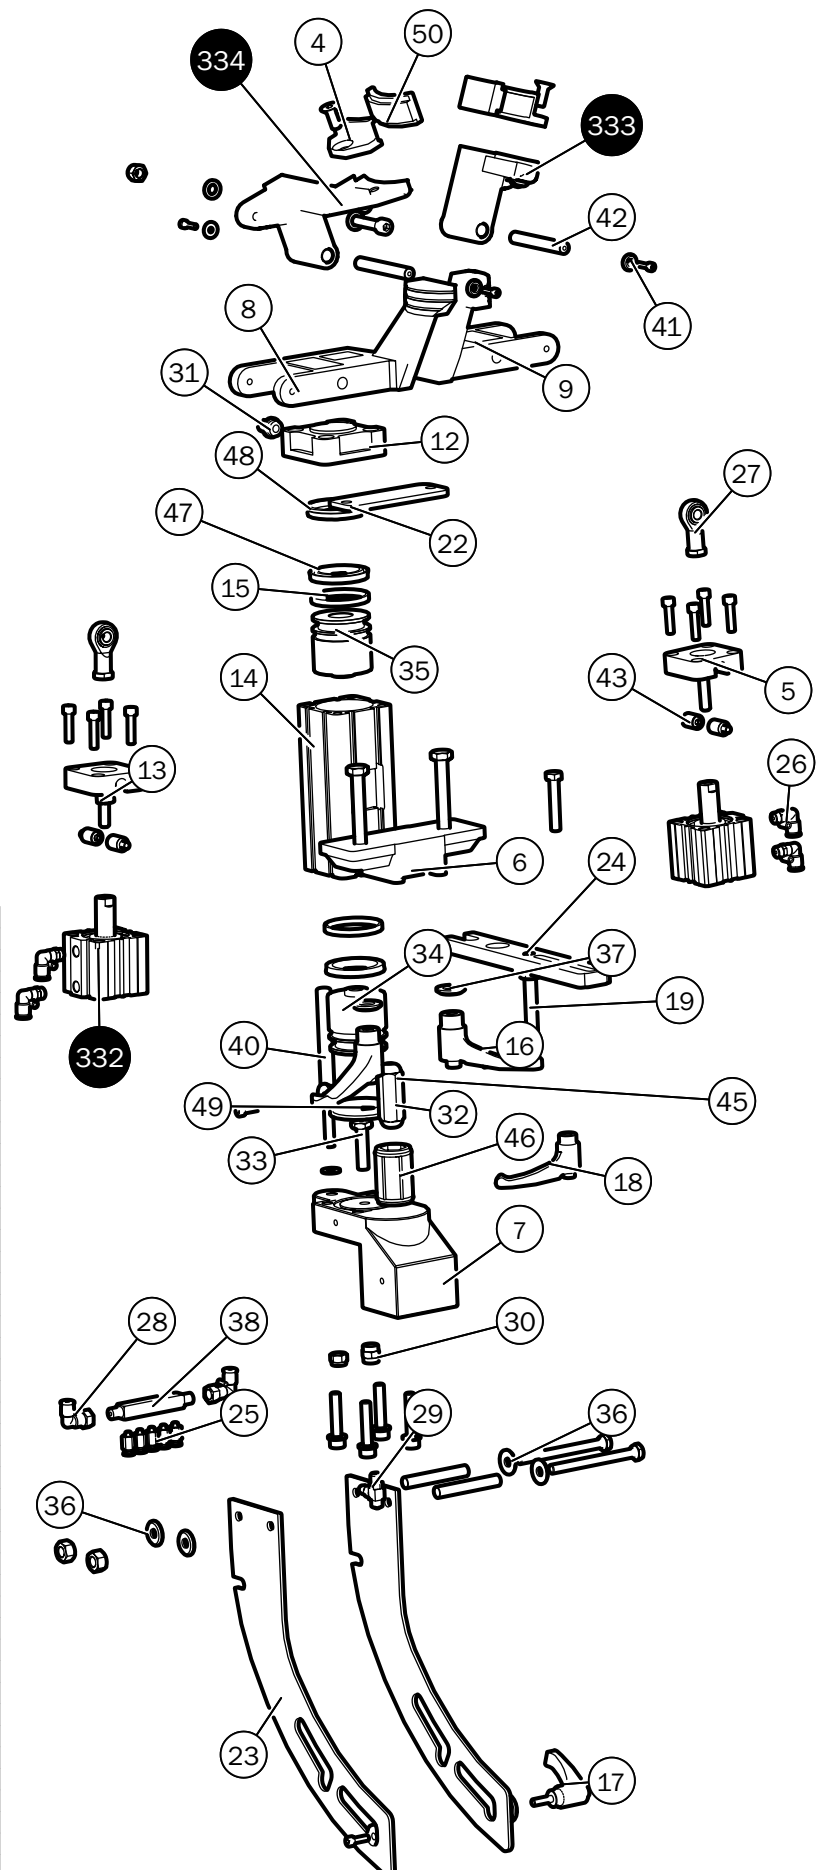


BOM ID	PartNo	Description	Qty
4	CAS-00017	PINCER	2
5	CAS-00039	TOP CAP PLATE	2
6	CAS-00040	BASE	1
7	CAS-00041	CAS-00041	1
8	CAS-00042	BRACKET SUPPORT (LEFT)	1
9	CAS-00043	PINCER BRACKET SUPPORT (RIGHT)	1
12	CAS-00054	PISTON END CAP Ø63	1
13	CBSXX-99	BRASS RING FOR ØXX CAP	1
14	CYL-00013	CYLINDER Ø50 X 144	1
15	GEN-00013	PISTON SEAL RING 45.2x50.1x5.37	2
16	GEN-00066	CL. LEVER, FEMALE, ELES, M10	2
17	GEN-00067	CL. LEVER, MALE, ELES, M6X20	1
18	GEN-00070	CL. LEVER, FEMALE, ELES, M8	1
19	GEN-00076	THREADED ROD M10	1
22	LAS-00142	PINCER MOUNTING PLATE (FASTENING PLATE)	1
23	LAS-00148	BRACKET INOX REAR FLANGE	2
24	LAS-00158	GUIDE BRACKET	1
25	PNE-00013	FITTING, STRAIGHT, M5 - Ø4	5
26	PNE-00029	FITTING, ELBOW, 1/8 - Ø4	4
27	PNE-00061	FISH, UNIVERSAL JOINT, M8	2
28	PNE-00078	FITTING, ELBOW, FEMALE, 1/8 - Ø4	2
29	PNE-00666	FLOW REGULATOR, ANGLE, 1/8 - Ø4	1
30	PNE-00713	SLEEVE, 1/8 (F) - 1/8 (F)	1
31	PNE-00084	FITTING, STRAIGHT, 1/4 - Ø6, SMALL HEXAGON	1
32	REV-00023	REGULATOR	1
33	REV-00063	SCREW, CUSTOM, BRASS, HEX16L42 BRASS	1
34	REV-00065	Multiform dia 50mm cylinder back cap	1
35	REV-00072	UPPER PISTON	1
36	REV-00079	WASHER, CUSTOM, FOR Ø8	4
37	REV-00080	WASHER, CUSTOM, FOR Ø10	2
38	REV-00130	5-INPUTS DISTRIBUTION FITTING	1
40	REV-00132	GUIDE	1
41	REV-00133	WASHER, CUSTOM, Ø14X2.5	4
42	REV-00028	MF88-99 BRACKET PINS	2
43	REV-00137	ROTATION RING	4
45	REV-00275	MOUNTING BRACKET'S WASHER	3
46	RUB-00009	REGULATOR COVER	1
47	RUB-00012	PISTON SEAL Ø50	2
48	RUB-00032	Ø50 STOPPER	1
49	RUB-00066	PISTON RUBBER Ø50	1
50	RUB-00092	PINCER RUBBER (v.2014)	2
332	ASM-00417	PISTON Ø40X20	2
333	ASM-00301	PINCER BRACKET (RIGHT)	1
334	ASM-00300	PINCER BRACKET (LEFT)	1

ASM-00364 (COLD STATION CYLINDER)

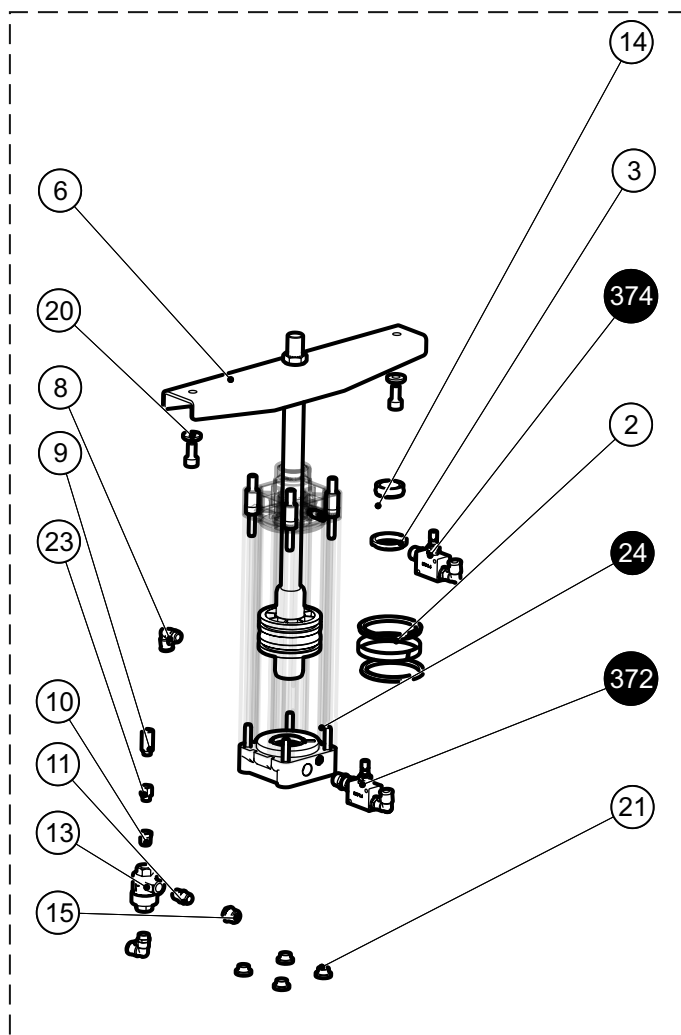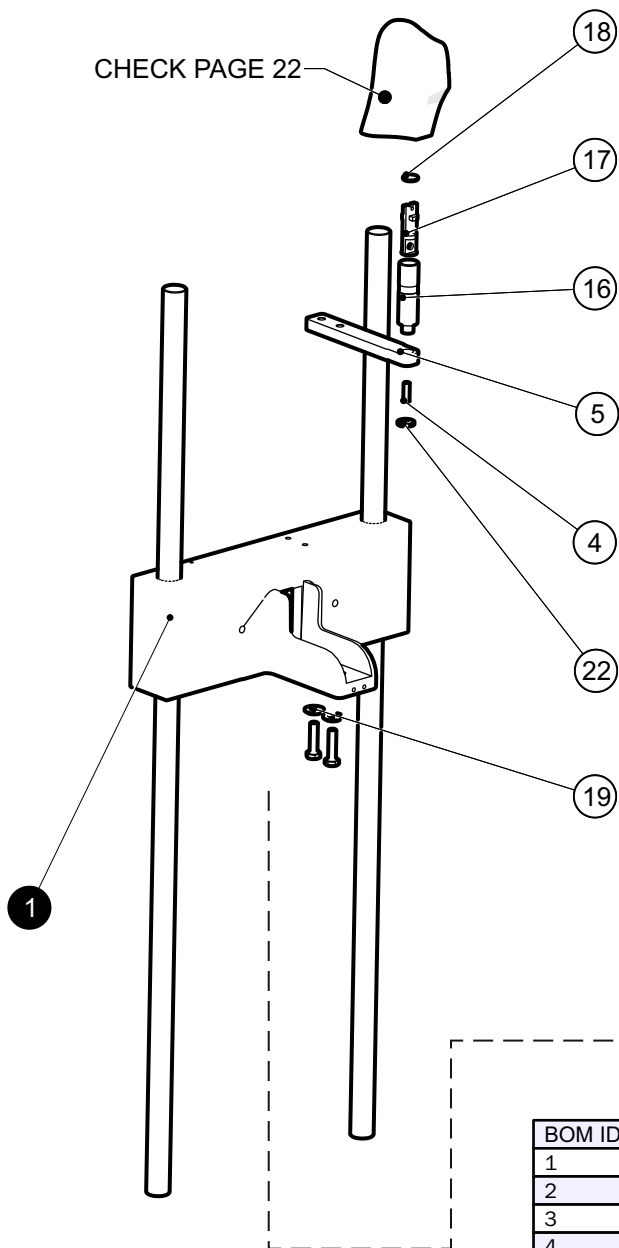

BOM ID	PartNo	Description	Qty
1	ASM-00364	MAIN SUPPORT, MF3 & MF4	1
2	RUB-00101	PISTON SEAL FOR Ø80	2
3	RUB-00099	CAP SEAL FOR PISTON Ø80	1
4	GEN-00295	THREADED ROD, INOX, M8X25	1
5	LAS-00140	COOLING PIPE MOUNTING BASE	1
6	LAS-00385	TOP PISTON MOUNTING BASE, COLD STATION	1
8	PNE-00008	FITTING, ELBOW, 1/4 - Ø8	2
9	PNE-00018	SILENCER, 1/8, PLASTIC, BLUE	1
10	PNE-00037	ADAPTOR, 1/4(M) - 1/8(F)	1
11	PNE-00059	NIPPLE, TAPER, 1/4 (M) - 1/4 (M)	1
13	PNE-00089	QUICK EXHAUST VALVE, 1/4	1
14	RUB-00100	AXLE SEAL FOR Ø80	1
15	PNE-00895	ADAPTOR, TAPER, 3/8-1/4	1
16	REV-00019	84N MALE METAL MOLD SHAFT	1
17	REV-00020	84N EVAPORATOR INSERT	1
18	REV-00021	FRIDGE SHAFT CAP	1
19	REV-00080	WASHER, CUSTOM, FOR Ø10	2
20	REV-00193	WASHER, CUSTOM, TAPER, Ø23xØ10x5	2
21	REV-00254	CYLINDER WASHER	4
22	REV-00281	WASHER, CUSTOM, FOR PIPE MOUNTING BASE	1
23	REV-00298	ADAPTOR MALE G1/8 - FEMALE G1/4 - HOLE Ø2 (FLOW REDUCTOR)	1
24	ASM-00416	CYLINDER Ø80x250	1
372	ASM-00824	FLOW REGULATOR WITH PNEUMATIC COMPONENTS	1
374	ASM-00825	FLOW REGULATOR WITH PNEUMATIC COMPONENTS	1


ASM-00365 (COLD STATION CUSHION)

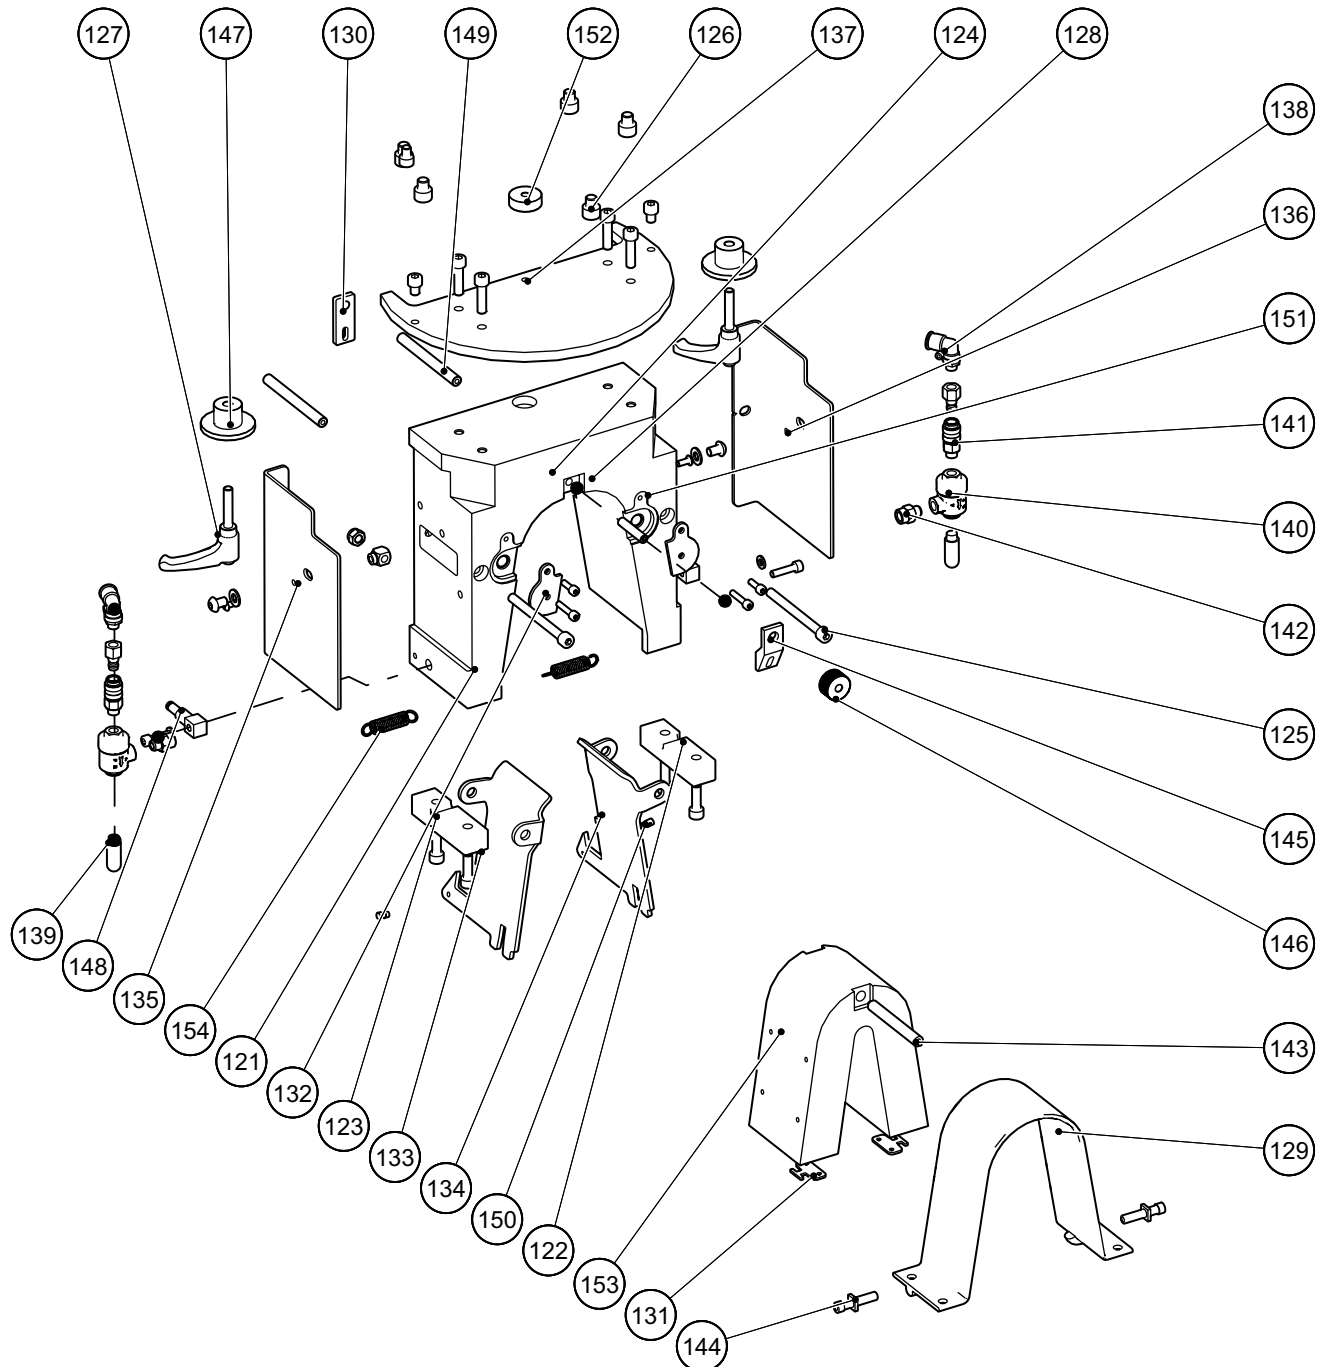

BOM ID	PartNo	Description	Qty
121	ASM-00318	HEAD CASTED BODY	1
122	CAS-00011	CLAMP CONNECTOR	1
123	CAS-00061	CLAMP CONNECTOR, RIGHT	1
124	CAS-00087	HEAD BASE	1
125	FAS-00031	BIΔA, AΛΛEN, M.K., MAYPH, DIN 912 M8 x 90	2
126	FAS-00440	HEX SOCKET HEAD SCREW, DIN 912, M10 x 10	5
127	GEN-00069	CL. LEVER, MALE, ELESΑ, M8X40	2
128	GEN-00213	CASTED BODY HEAD TUBE	2
129	GEN-00227	TUBULAR, COLD STATION, POLYFORM 84N	1
130	LAS-00049	MOULD SUPPORT PLATE	1
131	LAS-00200	PLATE	2
132	LAS-00202	ROD'S HOLDING CAP	2
133	LAS-00391	CONNECTING PLATE (LEFT)	1
134	LAS-00392	CONNECTING PLATE (RIGHT)	1
135	LAS-00415L	CUSHION'S LEFT FLANGE	1
136	LAS-00415R	CUSHION'S RIGHT FLANGE	1
137	LAS-00445	UPPER CUSHION PLATE, MF-4	1
138	PNE-00044	FITTING, ELBOW, 1/8 - Ø6	2

BOM ID	PartNo	Description	Qty
139	PNE-00050	SILENCER, 1/8, PA	2
140	PNE-00098	QUICK EXHAUST VALVE, 1/8	2
141	PNE-00109	COUPLING, MINI, SINGLE SHUT-OFF, RECTUS, 1/8	2
142	PNE-00722	REDUCER, TAPER, 1/8(M)-1/8(F)	2
143	REV-00012	MOULD SUPPORT CONNECTION PIN	1
144	REV-00016	FITTING	2
145	REV-00022	MOULD SUPPORT	1
146	REV-00024	HANDLE	1
147	REV-00050	ELESΑ HOLDER	2
148	REV-00203	CONNECTING ARM	2
149	REV-00204	CUSHION M5 AXLE	2
150	REV-00205	CONNECTING PIN	2
151	REV-00225	GUIDE	2
152	REV-00273	MF-4 HEAD ROTATION BASE	1
153	RUB-00016	MOULD POLYURETHANE GENERAL	1
154	SPR-00017	CONNECTING SPRING	2


WIPERS

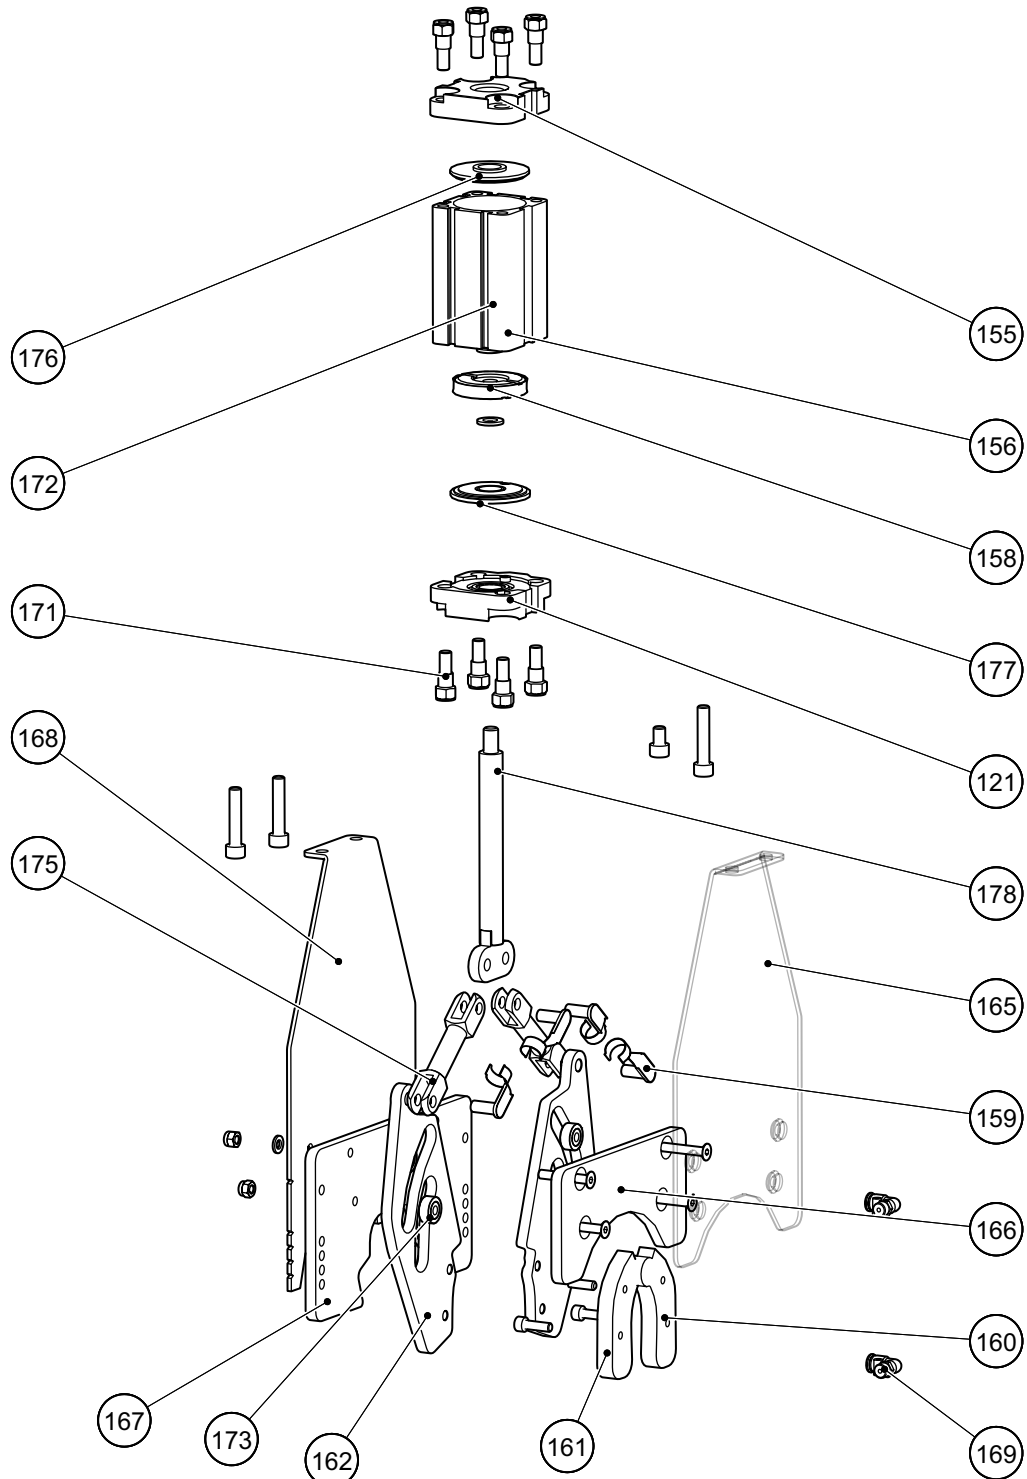

BOM ID	PartNo	Description	Qty
121	CAS-00070	CBS PISTON CAP, FRONT, Ø50	1
155	CAS-00078	CBS PISTON CAP, BACK, Ø50	1
156	CYL-00030	CYLINDER Ø50X95	1
158	GEN-00229	DKN Ø50	1
159	GEN-00230	JOINT PIN	4
160	LAS-00151	PINCER, NORMAL, (MALE PART)	1
161	LAS-00152	PINCER, NORMAL, (FEMALE PART)	1
162	LAS-00154L	WIPER PLATE, LEFT	1
165	LAS-00227	OUTER FRONT PLATE	1
166	LAS-00356	INNER FRONT PLATE	1
167	LAS-00442	HEAD INNER REAR PLATE, MF3 & MF4	1

BOM ID	PartNo	Description	Qty
168	LAS-00466	OUTER REAR PLATE	1
169	PNE-00007	FITTING, ELBOW, 1/8 - Ø4	2
171	REV-00206	M8 CBS SCREW	8
172	REV-00207	NUT, CUSTOM, M10, CUT EDGES	1
173	REV-00238	RING	4
175	REV-00282	FORK JOINT	2
176	RUB-00069	BRAKE RUBBER, BACK, Ø50	1
177	RUB-00073	BRAKE RUBBER, FRONT, Ø50	1
178	ASM-00321	MOVEMENT ROD ASSEMBLY	1

ASM-00492 (LED PROJECTOR)

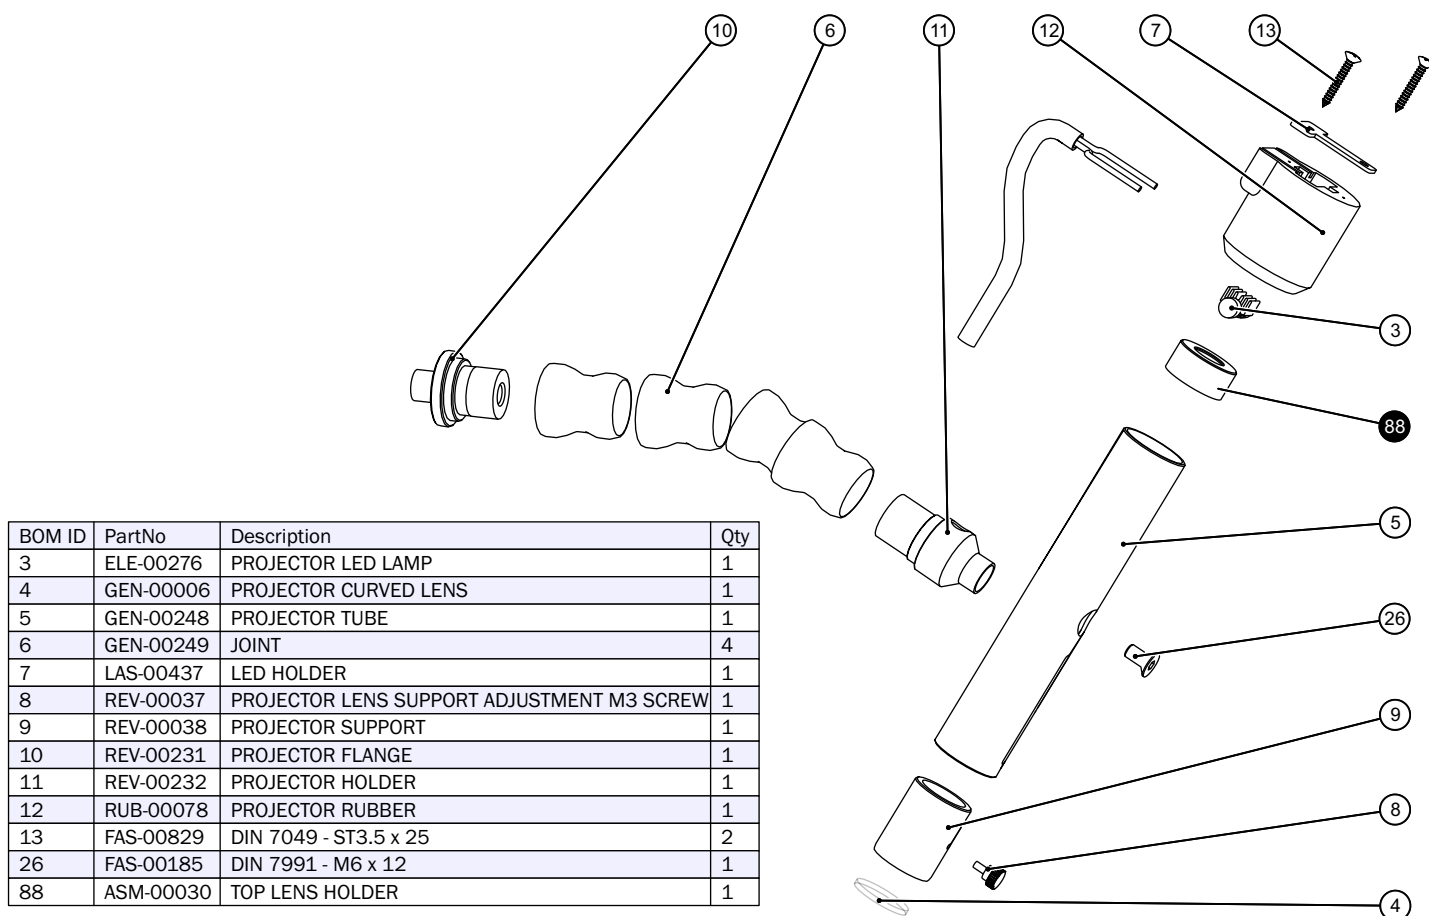

EXTRA HOT STATION MOULDS - ON DEMAND

	LADIE'S HIGH HEEL	BOOTS - STITCH DOWN	MEN'S	PREMOULDED COUNTERS	UNIVERSAL	MEDIUM, LOW BOOTS
AUTO RELEASE	 STL-00085 (No15)	 STL-00086 (No02)	 STL-00081 (No22)	 STL-00079 (No14)	 STL-00078 (No11)	 STL-00080 (No13)
STANDARD MOULDS	 STL-00016 (No15)	 STL-00020 (No02)	 STL-00083 (No22)	 STL-00014 (No14)	 STL-00015 (No11)	 STL-00017 (No13)
	 STL-00027 (No15)	 STL-00023 (No02)	 STL-00082 (No22)	 STL-00026 (No14)	 STL-00025 (No11)	 STL-00029 (No13)

Multiform Mini Accessories

Baby attachment - ON DEMAND



Goodyear attachment (ASM-00389) - ON DEMAND



Mocassin attachment (ASM-00376) - ON DEMAND




Pincer mini counter attachment (ASM-00391) - ON DEMAND




Stitch down attachment - ON DEMAND (Half pair)




Blower (for uppers with decoratives)

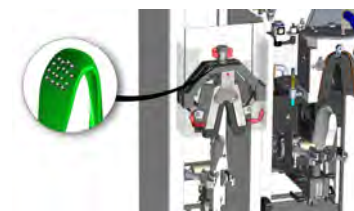

Blower for the cold station cushion.
Ideal for uppers with decoratives.
It is installed on the cushion and blows the upper when the "decoratives" operation is chosen

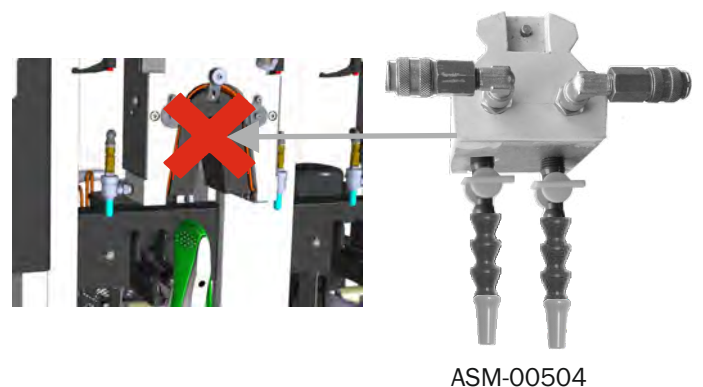



Mini Counter parts

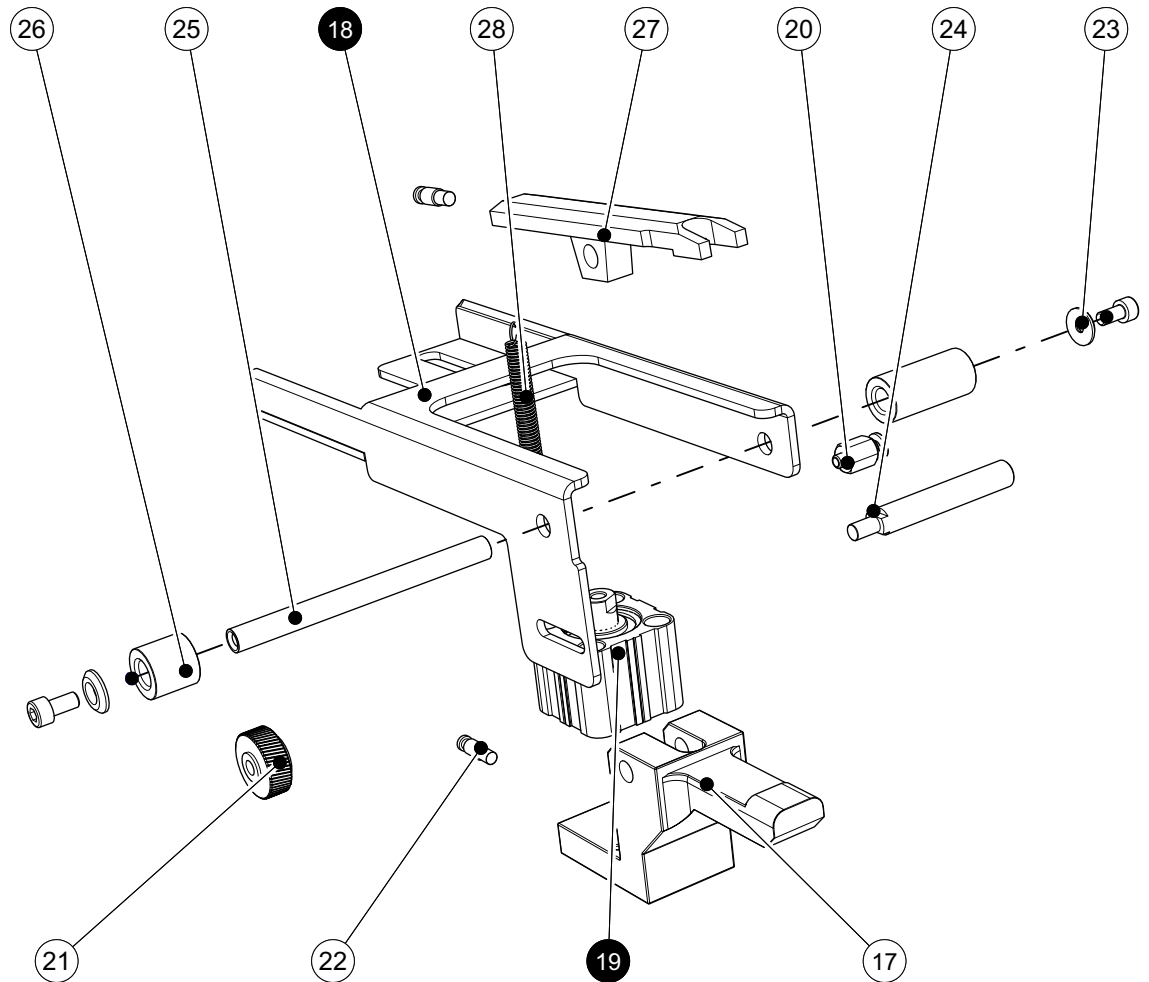


BOM ID	PartNo	Description	Qty
18	ASM-00392	MINI COUNTER BASE	1
19	ASM-00497	CYLINDER ACQ25X10 FOR MINI COUNTER	1
17	CAS-00106	BASE FOR MINI COUNTER'S PISTON & Pincer	1
20	PNE-00013	FITTING, STRAIGHT, M5 - Ø4	1
21	REV-00024	HANDLE	1
22	REV-00032	WIPER SPRING PIN	2
23	REV-00133	WASHER, CUSTOM, Ø14X2.5	2

BOM ID	PartNo	Description	Qty
24	REV-00247	PIN	1
25	REV-00248	INTERNAL PIN	1
26	REV-00250	SPACER	2
27	REV-00283	MINI COUNTER Pincer	1
28	SPR-00021	SPRING, MINI COUNTER TILTING Pincer	1


MULTIFORM MINI PNEUMATIC DIAGRAM

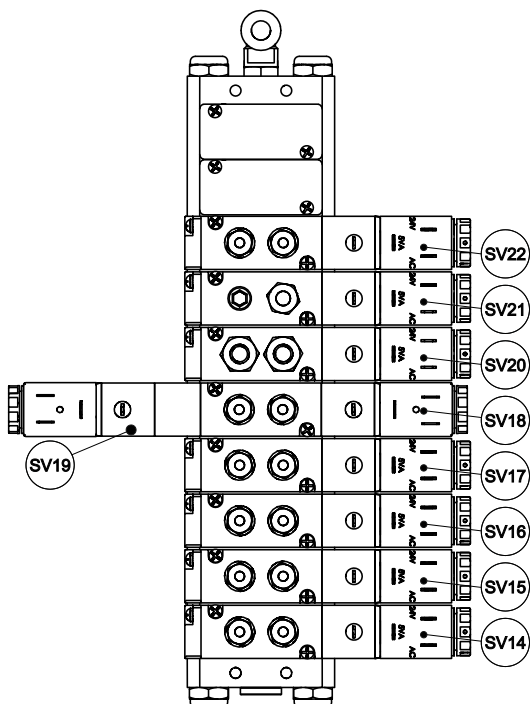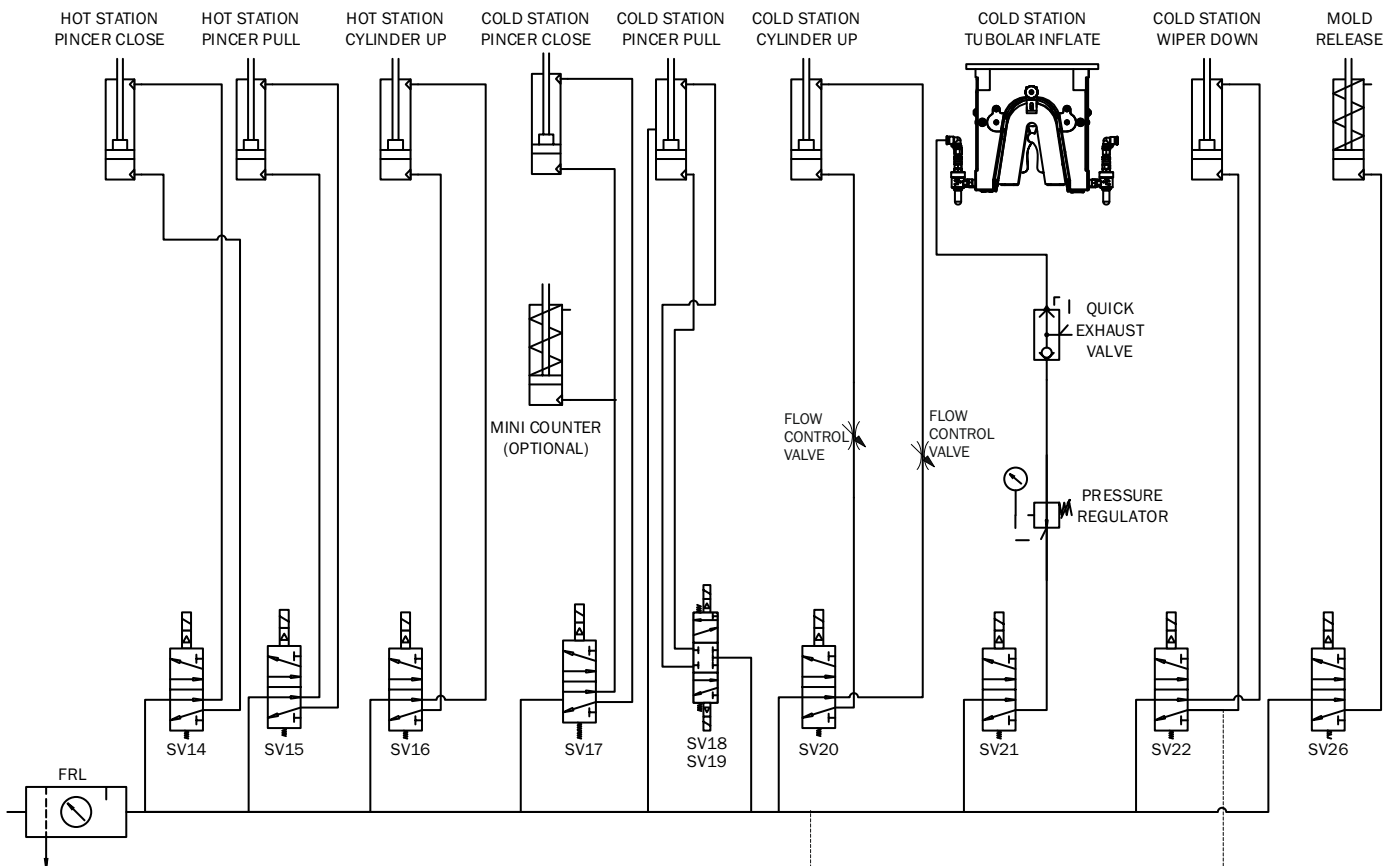


MULTIFORM-4 STITCH DOWN DEVICE PNEUMATIC DIAGRAM

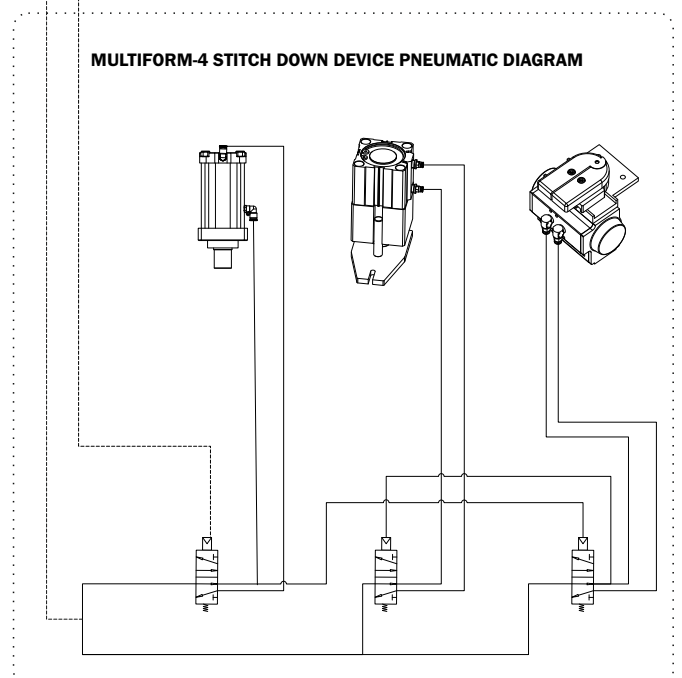

MULTIFORM MINI MAIN PNEUMATIC DIAGRAM (INFLATABLE CUSHION)

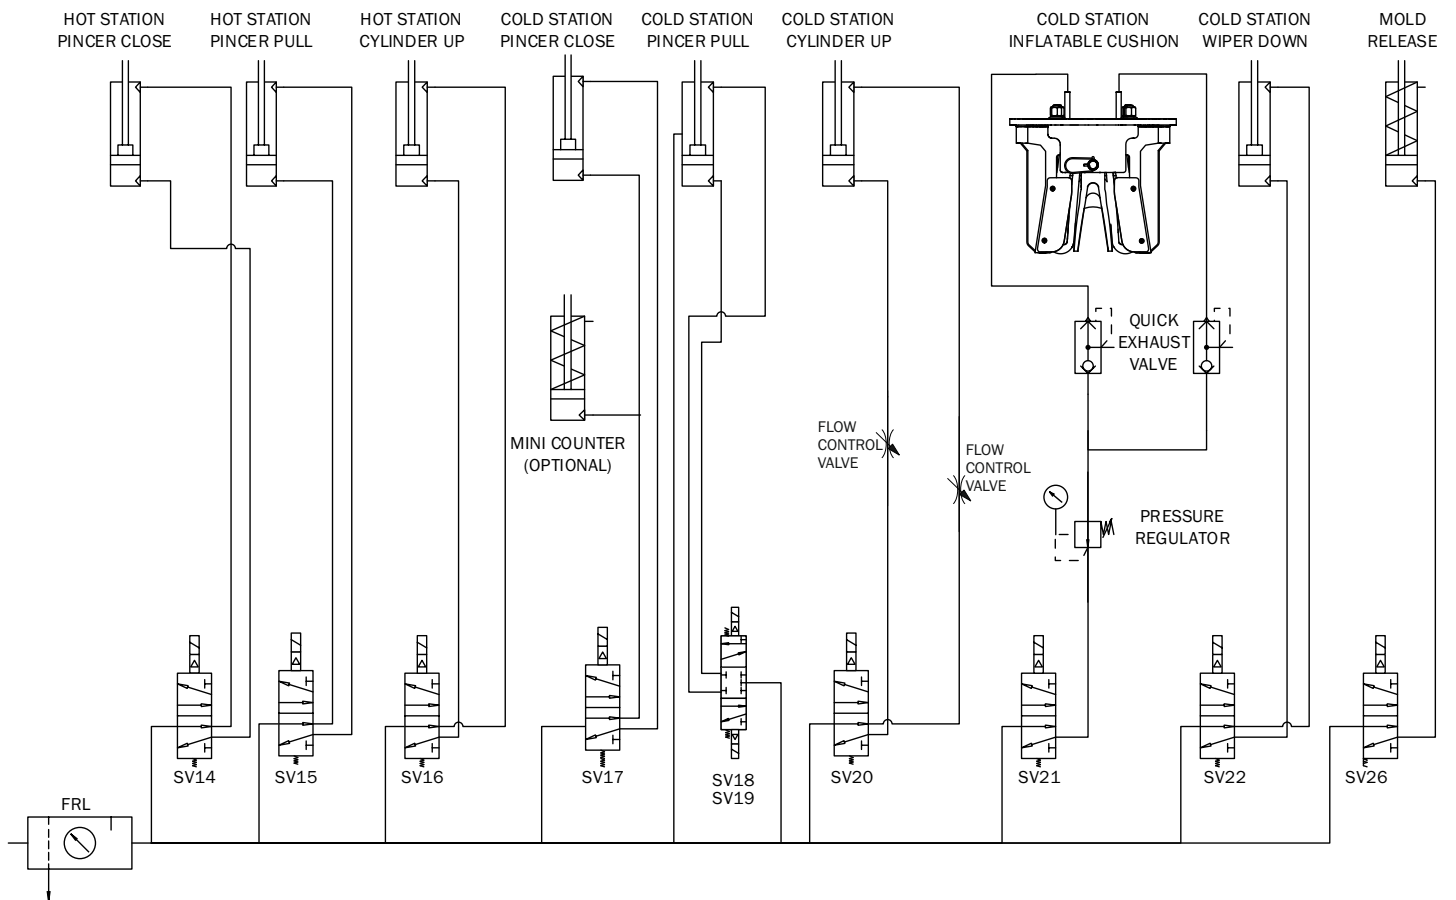

Pneumatics

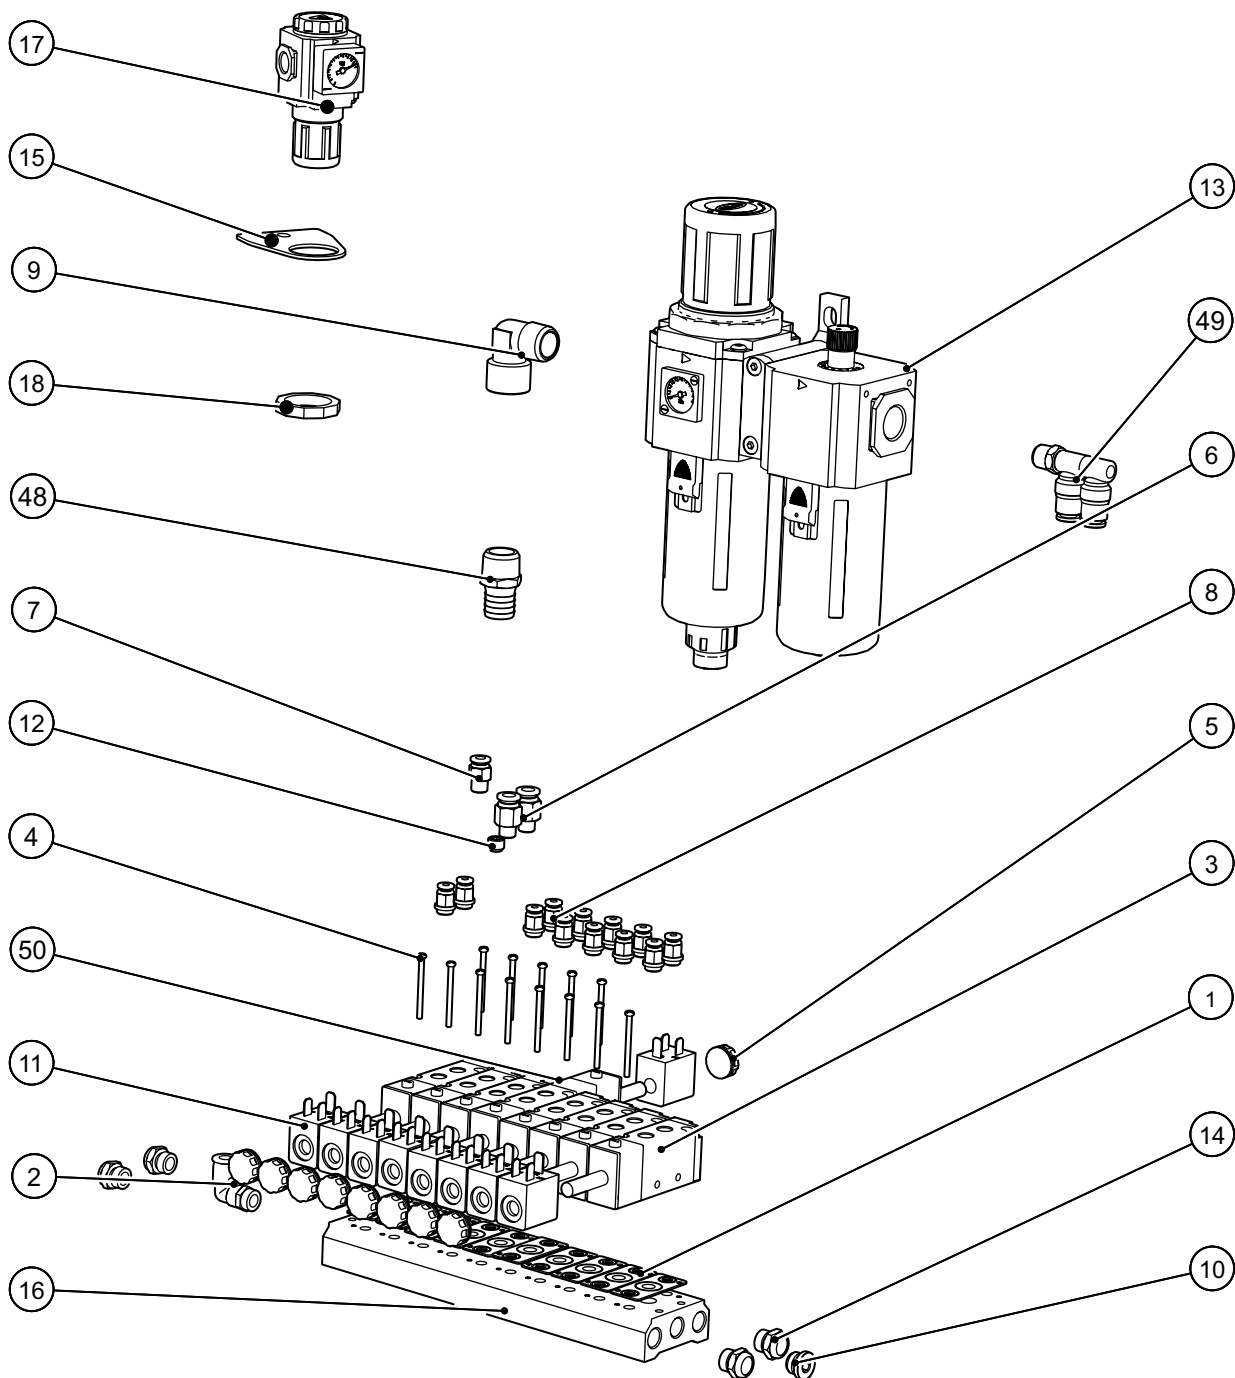

NOTICE:


Rest of pneumatic components can be found in the previous assembly pages.

BOM ID	PartNo	Description	Qty
1	GEN-00093	RUBBER BOTTOM	11
15	GEN-00253	REGULATOR MOUNTING BASE	1
2	PNE-00008	FITTING, ELBOW, 1/4 - Ø8	1
12	PNE-00009	CAP 1/8	1
3	PNE-00016	VALVE BODY ELECTRIC PILOT 5/2 G1/8, NO COIL	8
4	PNE-00016C	SCREW M3 FOR 5/2 VALVE	20
5	PNE-00021	COIL NUT, G1/8	9
6	PNE-00027	FITTING, PARALLEL, 1/8 - Ø8	2
7	PNE-00039	FITTING, STRAIGHT, MALE, 1/8 - Ø6	1
8	PNE-00084	FITTING, STRAIGHT, 1/8 - Ø4, SMALL HEXAGON	13
9	PNE-00201	FITTING, ANGLE, 1/2 (M) - 1/2 (F)	1

BOM ID	PartNo	Description	Qty
10	PNE-00213	CAP ALLEN, +OR 1/4	1
17	PNE-00543	PRESSURE REGULATOR 1/4	1
18	PNE-00543B	REGULATOR NUT	1
11	PNE-00752	COIL Ø9 - 24VAC, 5W	9
13	PNE-00771	FRL G1/2 SIZE 400	1
14	PNE-00896	SILENCER 1/4	4
16	PNE-00898	MANIFOLD, 1/4, 10 STATION, 200M10F	1
48	PNE-00909	HOSE ADAPTER, RG, MALE, TAPER, 1/1 - Ø18	1
49	PNE-00973	FITTING, ELBOW, 2-TAPERED SWIVEL, 1/4 - Ø8	1
50	PNE-00976	VALVE BODY ELECTRIC PILOT 5/2 G1/8, WITH DOUBLE 24V COIL	1

MULTIFORM MINI ELECTRICAL DIAGRAM

MULTIFORM MINI VERSION 2016 ELECTRIC DIAGRAM

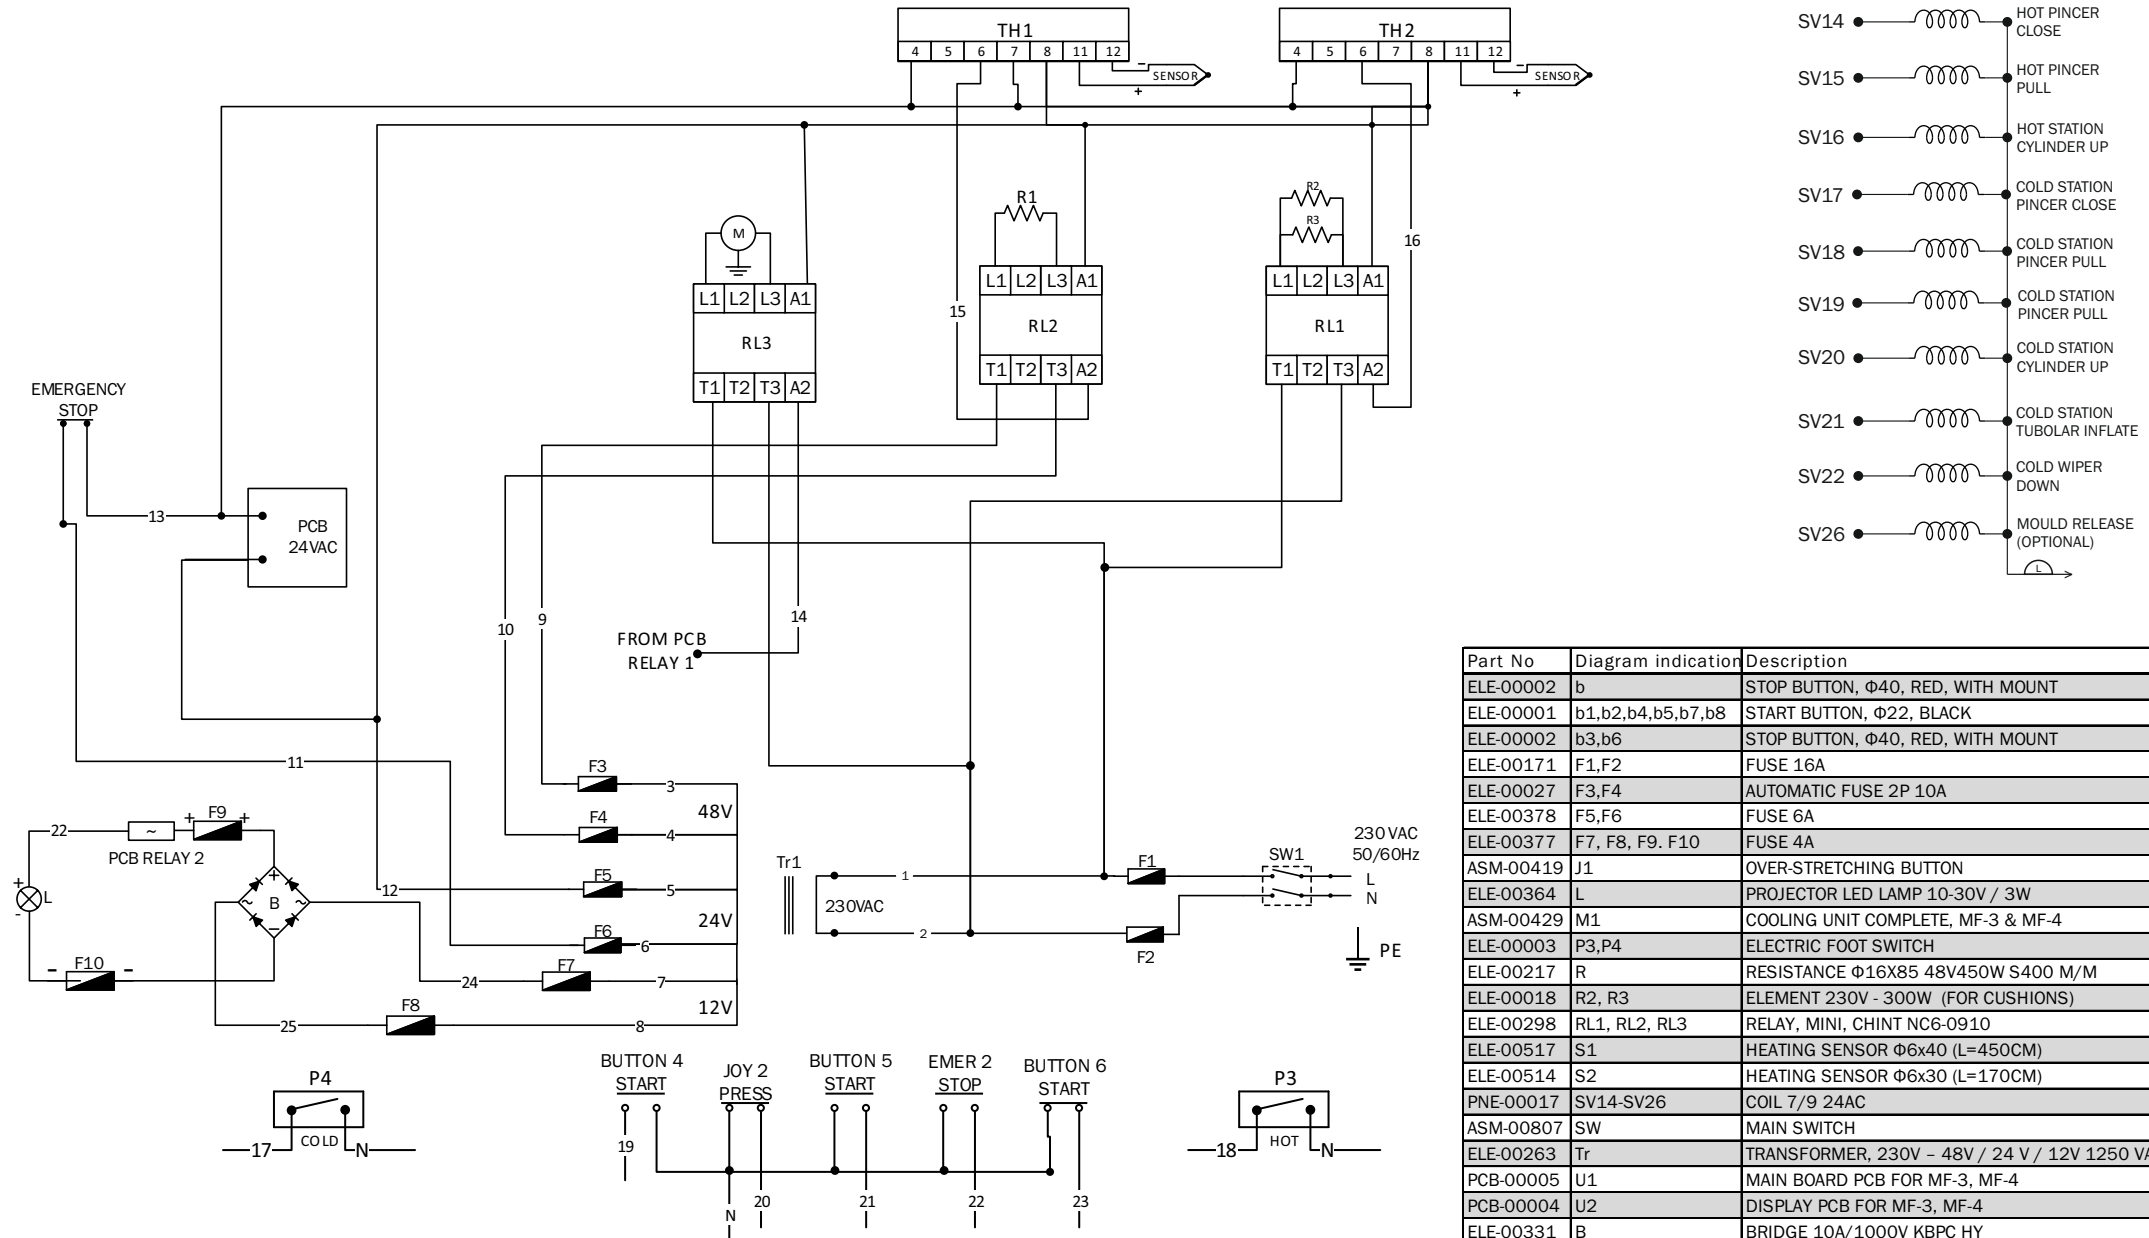


Pneumatics




PCB-00004: DISPLAY BOARD

ELE-00365
ETHERNET MAIN BOARD CONNECTION (MF-3, MF-4)

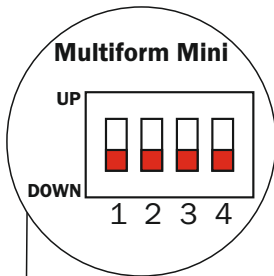

IMPORTANT:
THE SWITCHES MUST BE
STRICTLY SET AS SHOWN
(ALL DOWN)

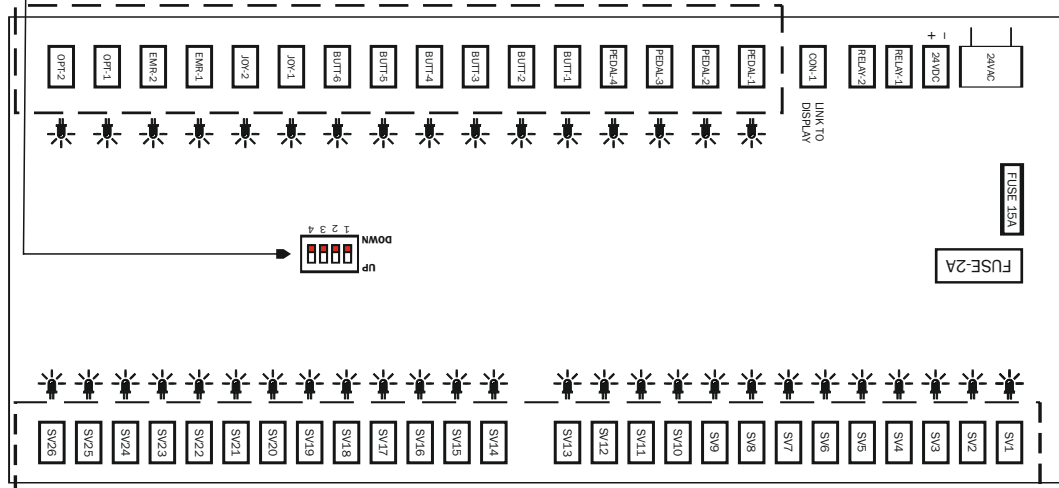

PCB-00005 : MAIN BOARD

INPUTS			
LEFT SIDE		RIGHT SIDE	
PEDAL1	<NOT USED>	PEDAL3	RIGHT HOT
PEDAL2	<NOT USED>	PEDAL4	RIGHT COLD
BUTTON1	<NOT USED>	BUTTON4	RIGHT COLD
BUTTON2	<NOT USED>	BUTTON5	RIGHT COLD & HOT
BUTTON3	<NOT USED>	BUTTON6	RIGHT HOT
JOY1	<NOT USED>	JOY2	RIGHT COLD
EMR1	<NOT USED>	EMR2	RIGHT CANCEL (HOT & COLD)
OPT1	<NOT USED>	OPT2	<NOT USED>

OUTPUTS	
LEFT SIDE	
SV1	<NOT USED>
SV2	<NOT USED>
SV3	<NOT USED>
SV4	<NOT USED>
SV5	<NOT USED>
SV6	<NOT USED>
SV7	<NOT USED>
SV8	<NOT USED>
SV9	<NOT USED>
SV10	
SV11	
SV12	
SV13	<NOT USED>
RELAY 1	COOLING UNIT
RELAY 2	AUX

RIGHT SIDE	
SV14	HOT STATION PINCER CLOSE
SV15	HOT STATION PINCER PULL
SV16	HOT STATION CYLINDER UP
SV17	COLD STATION PINCER CLOSE
SV18	COLD STATION PINCER PULL
SV19	COLD STATION PINCER PULL
SV20	COLD STATION CYLINDER UP
SV21	COLD STATION TUBULAR INFLATE
SV22	COLD STATION WIPER DOWN
SV23	
SV24	
SV25	
SV26	MOULD RELEASE

Troubleshooting



OPERATOR'S MANUAL

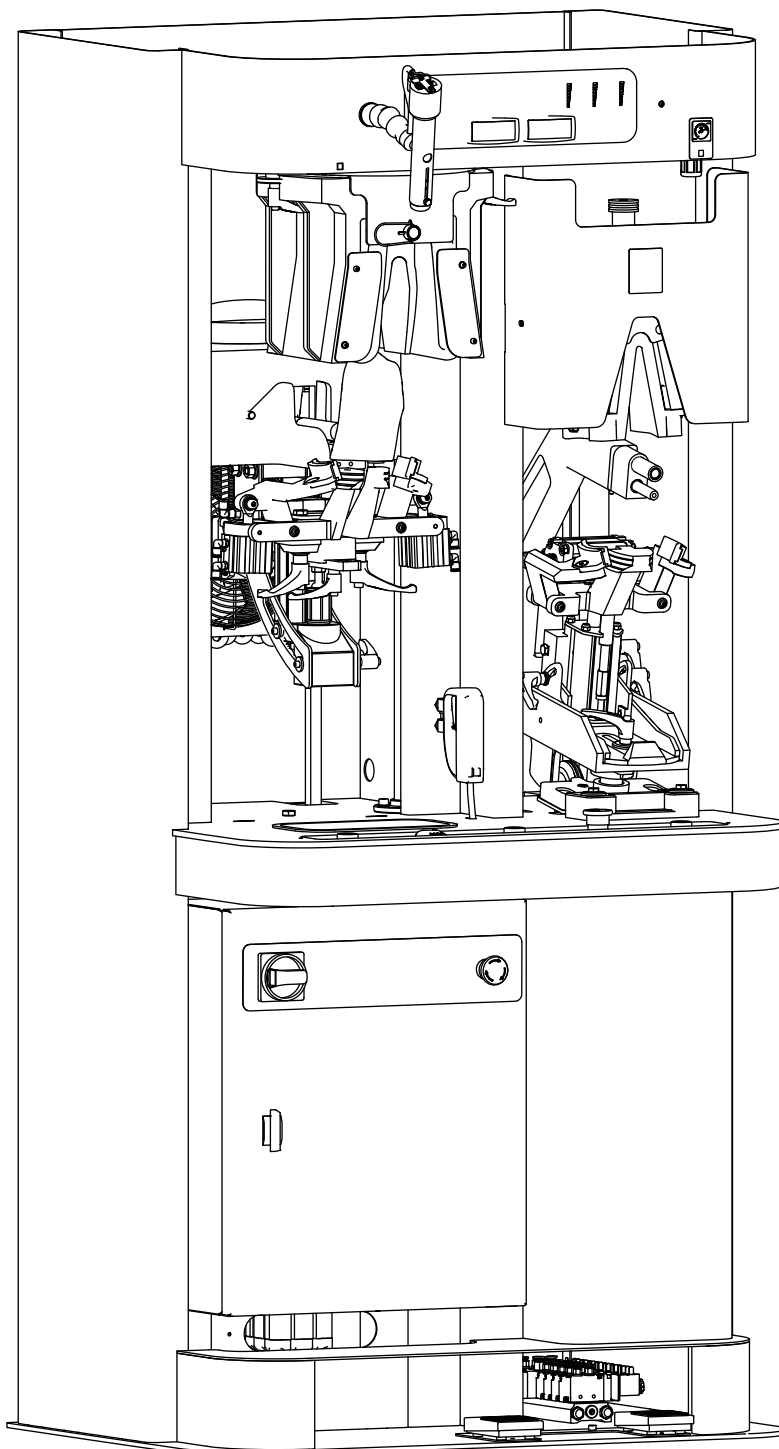


TABLE OF CONTENTS

Introduction	4
Safety regulations	4
Electric and pneumatic connections	4
Transportation	5
Packaging Components	5
Technical data & Dimensioning	5
Pincers Adjustments	6
Aluminum Mould replacement	6
Hot Station's Rubber Mould Replacement	7
Standard mould change	7
Cold Station P.U Mould Replacement	7
Cold station pincer adjustments	8
Extra adjustments	8
Wipers adjustments	8
Cushion rotation	9
Panel adjustments	10
Mould release (optional)	10
Projector adjustments	11
Maintenance of cooling unit	11
Lateral pressure adjustments	11
Lubrication	11
Operation - Hot station	12
Operation - Cold station	12
Multiform Mini Assembling	13
Multiform Mini Hot station cushion with support base	14
Multiform Mini Hot station pincers	15
Multiform Mini Hot station mould support	16
Multiform Mini Cold station pincers	17
Multiform Mini Cold station cylinder	18
Multiform Mini Cold station Airbag cushion	19
Multiform Mini Wipers	20
Multiform Mini LED Projector	21
Extra hot station moulds - on demand	21
Multiform Mini Accessories	22
Mini counter parts	23
Multiform Mini Main Pneumatic Diagram	24
Multiform Mini Pneumatic Diagram (inflatable cushion)	25
Several pneumatic assemblies	26
Multiform Mini Electric Diagram	27
Multiform Mini Electronic Boards diagram	28
Multiform Mini Troubleshooting	29

Introduction

The purpose of this manual is to inform the owner of this machine for its operation, its maintenance and for all the safety regulations.

Please read carefully all the instructions and follow them in order to use the machine properly in the production and avoid any case of injuries.

Our company does not have any responsibility for any changes happened on the machine by the owner, or actions which are different to what this manual refers.

SAFETY REGULATIONS

This machine is intended for professional use only.



WARNING!

Only one operator may work on the machine at a time.



WARNING!

Read and follow carefully all the relative instructions to avoid serious injury.

Only qualified and authorized personnel must use the machine.

- Operators are expressly forbidden to use the machine under the influence of alcohol or drugs capable of affecting physical and mental capacity.
- Keep unauthorized persons away from the work area.
- Make sure that the machine has been installed in compliance with the established legislation and standards.
- Always keep this user manual in a place where it can be readily consulted when working on the machine. Consult it whenever you are in need of information or explanation.
- Do not remove or deface the safety, danger, warning or instruction signs. Replace any missing or illegible Danger, Warning or instructions signs.
- Never use the machine if you notice any damaged electric wires.
- Never install the machine outdoors or in any place with a lot of moisture.




WARNING

Use only original spare parts, which can be supplied by the manufacturer or the local agent. Otherwise, your machine will not be a CE product.




WARNING

The machine frame must be earthed using the outside connection point marked according to the CE norms.

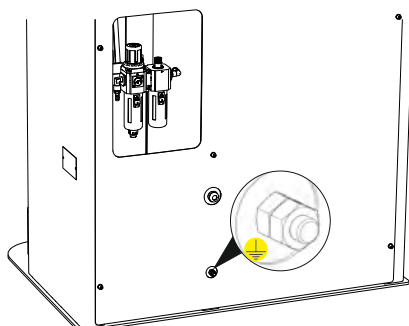


Electric and pneumatic connections

1. Connect the machine (SINGLE PHASE 220V - 50/60Hz).
2. Before plugging in the machine, check that the main supply voltage is the same as that indicated on the label situated on the back side of the machine.

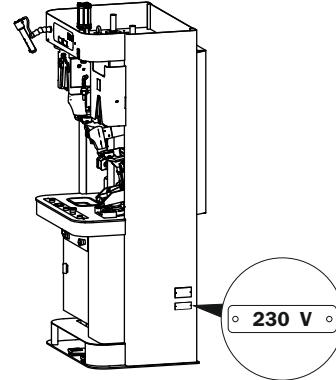


3. Check if the plug and socket have the same technical type. If not, use the suitable adapter after having consulted a certified electrician.

4. To disconnect the machine, turn the main switch off and remove the plug from the outlet.


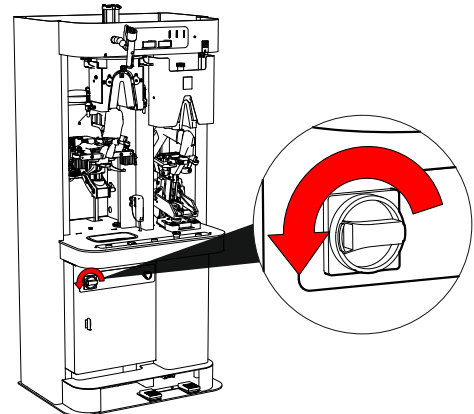


5. Connect the machine to air pressure 6 - 8bar.
6. Connect the proper pneumatic hose. Set the main pressure regulator, which is found, on the back part of the machine to 6 Bar.

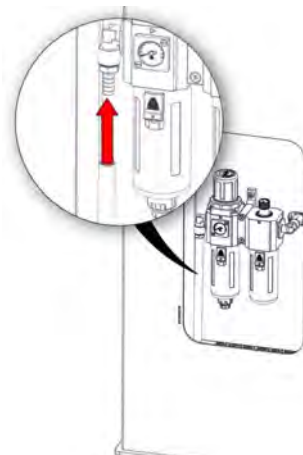


Transportation


1. Use the clevis's existed on the top of the machine with proper belts to lift the machine.
2. Pass the trans-pallet's forks under the pallet as shown in the Figure below.

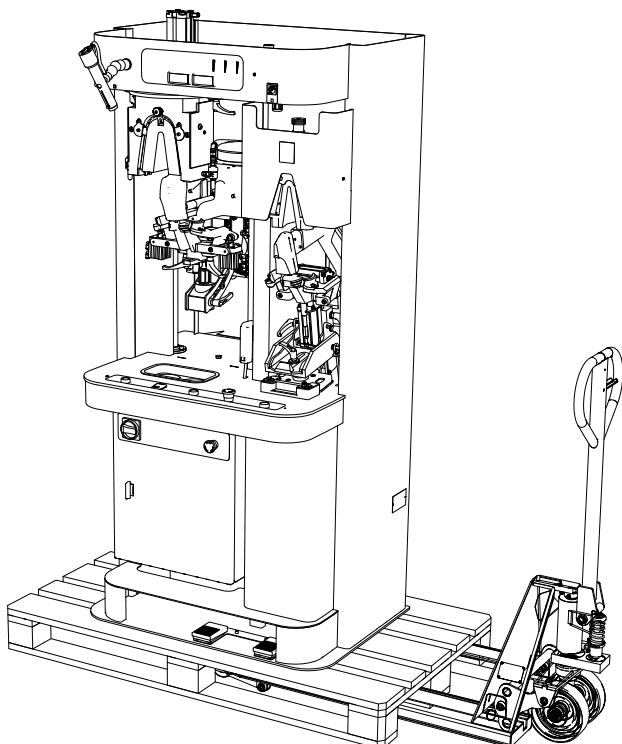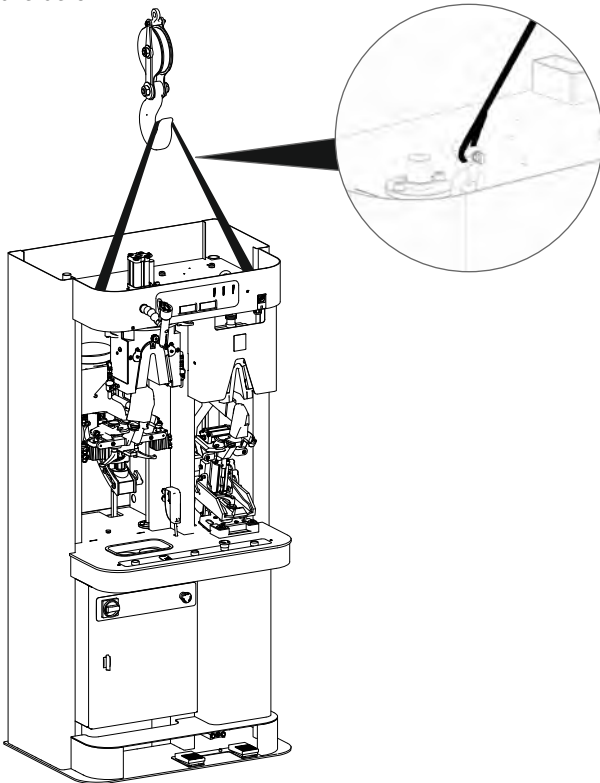

Packaging Components

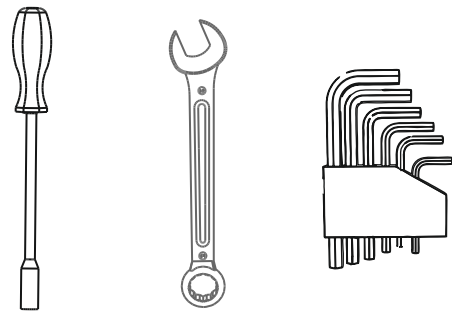

Technical data & Dimensioning

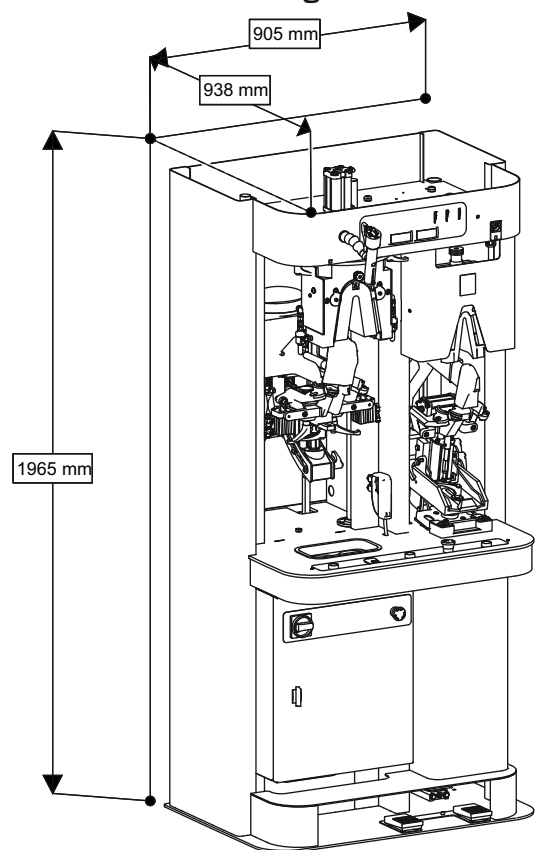

Technical Data

OPERATION	Electro-Pneumatic
PRESSURE	6 Bar
CAPACITY	1200 pairs per 8 hours max.
VOLTAGE	230V single phase 60Hz
POWER CONSUMPTION	1500 W
DIMENSIONS (mm)	905 X 938 X 1965
WEIGHT	330Kgs

Pincers Adjustments


Hot station's pincers adjustments



Loose the handle as shown to move pincers vertically.



Release the handle as shown above, to move pincers horizontally.

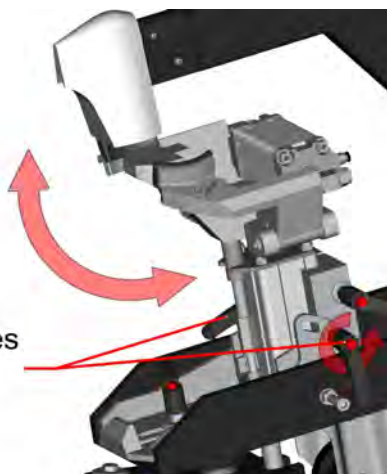


Release both handles
to adjust inclination


Must be used use it for high heel uppers.

Aluminum Mould replacement

Hot station's aluminum mould replacement

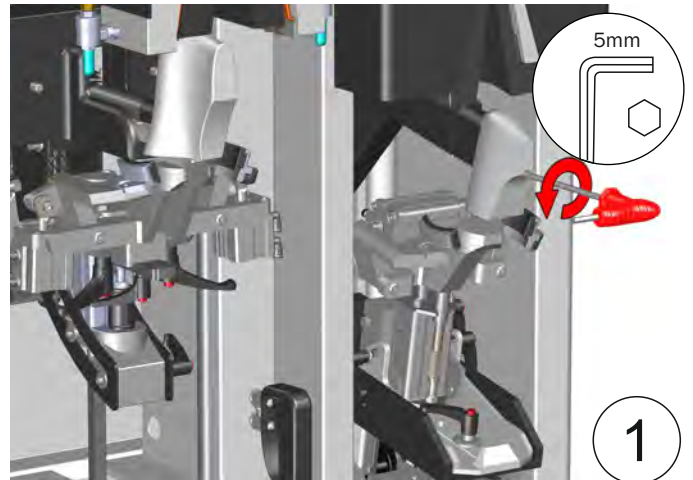


Use a 5mm allen key to loose screw.

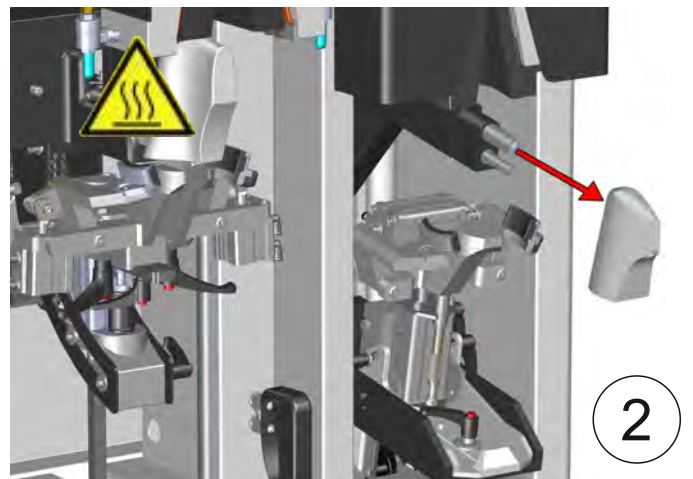


Be careful of the hot surface while removing the last.


Cold station's aluminum mould replacement

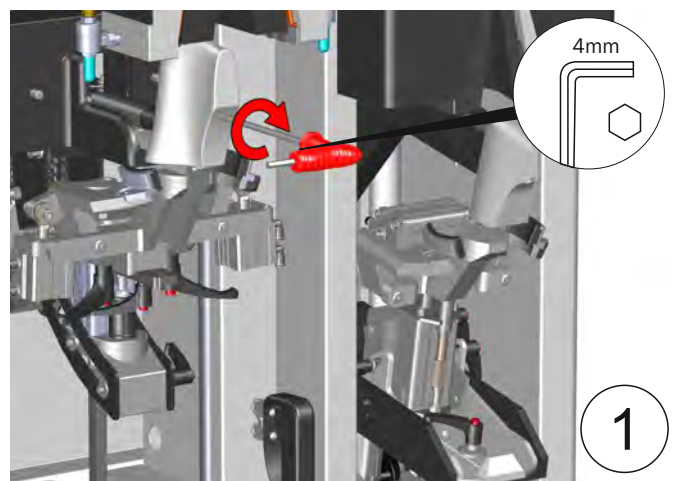

Use a 4mm allen key to loose screw.

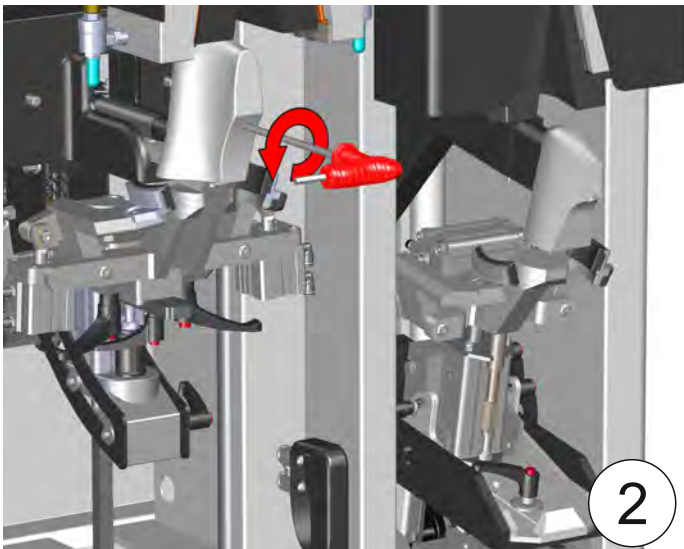


Cold Station P.U Mould Replacement

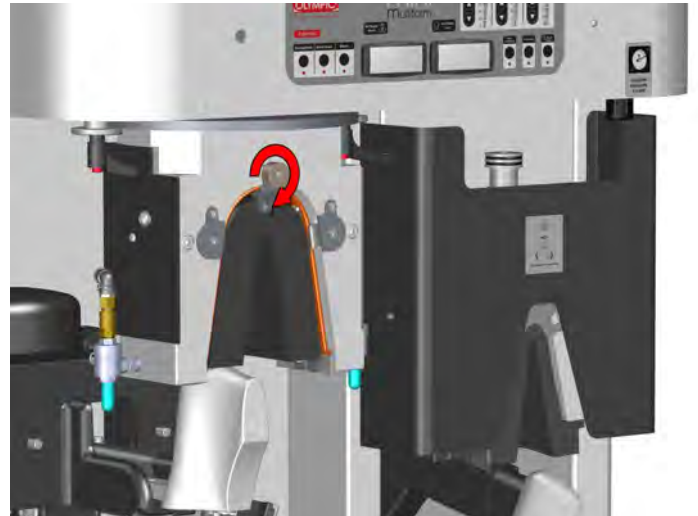


Loose the nut and pull slightly the mould support plate


Hot Station's Rubber Mould Replacement Mould release system (Optional)

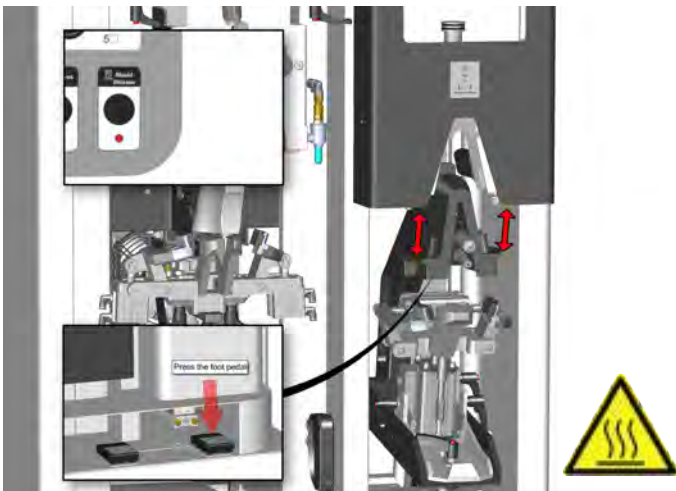


Standard mould change

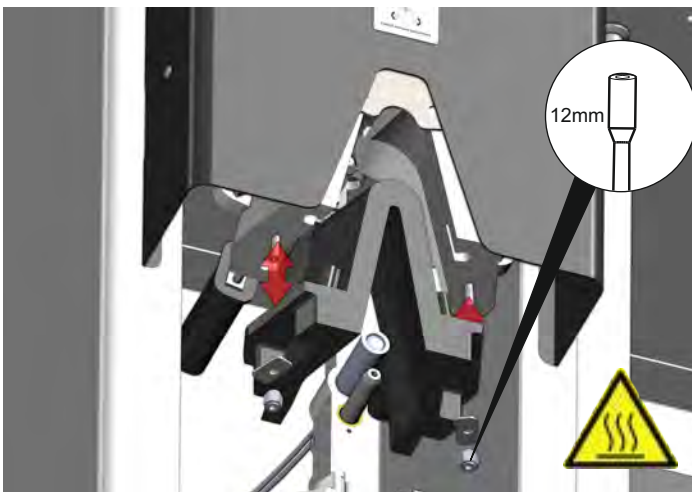

Use a 12mm wrench or nut to remove the mould

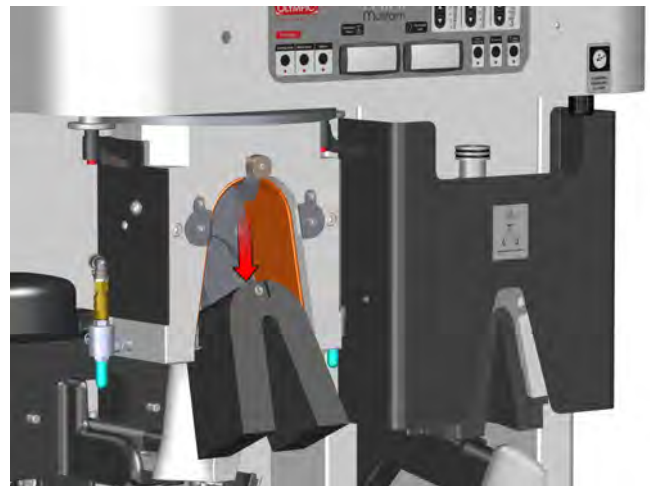


Remove the mould.

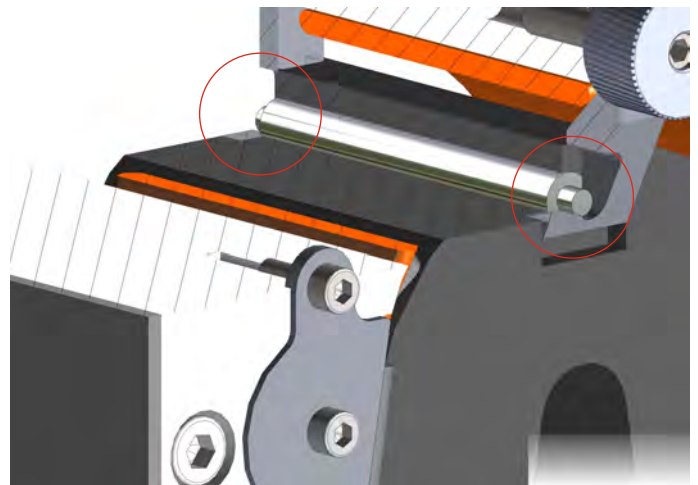


Important: During placement ensure that the pin is will be firmly placed between the two metal plates.


Cold station pincers adjustments

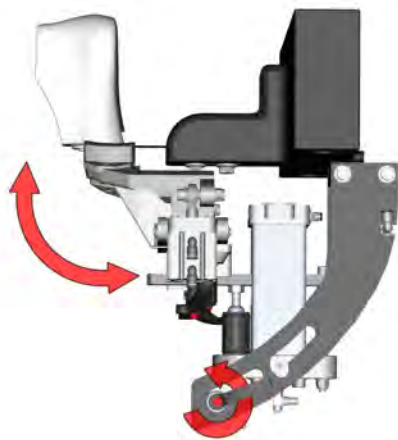


Loose the handle as shown above, and change inclination.

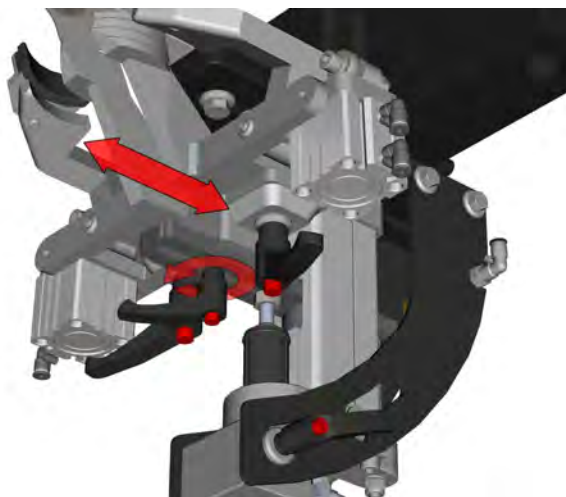

Release the handle as shown above, and move pincers inside-out.

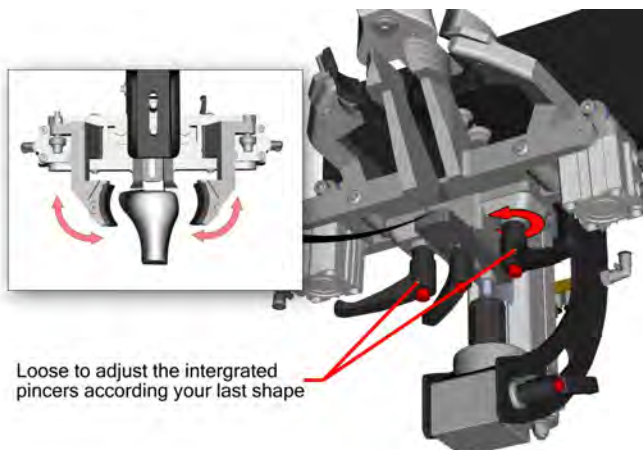

Loose to adjust the intergrated pincers according your last shape

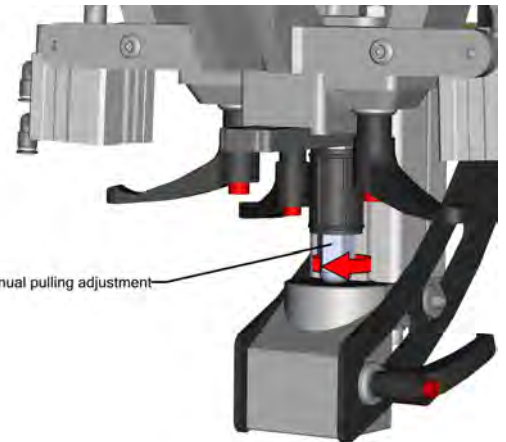


Secondary manual pulling adjustment

Manual pulling adjustment available also.


Extra adjustments

Cushion pressure adjustments (1 - 2,5 bar)

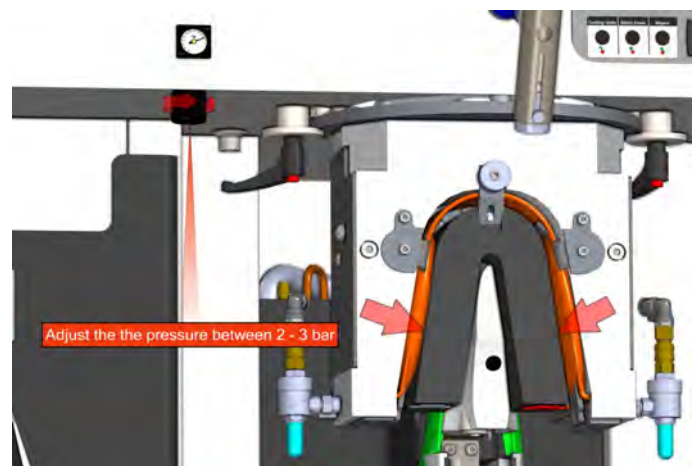

Adjust the the pressure between 2 - 3 bar

Wipers adjustments

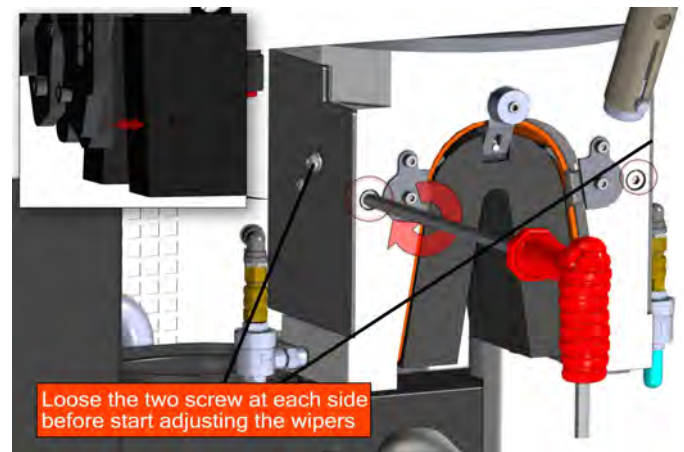


Loose the two screw at each side before start adjusting the wipers


Adjust the wipers by using a 6mm allen key as shown in the picture. Do not forget to loose the side mounted screws.

Cushion Rotation


When the cushion is rotated the machine can perform the below procedures

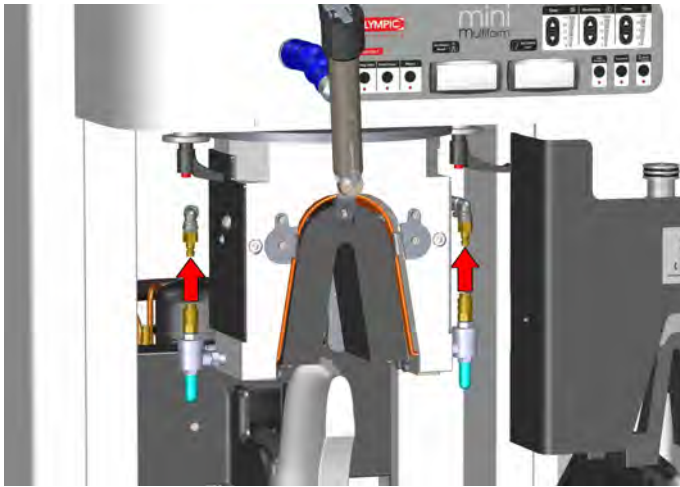

Unplug the side couplings.

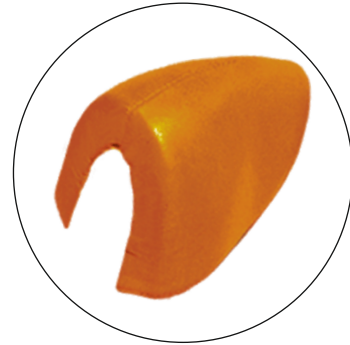


Mini - counter flanging

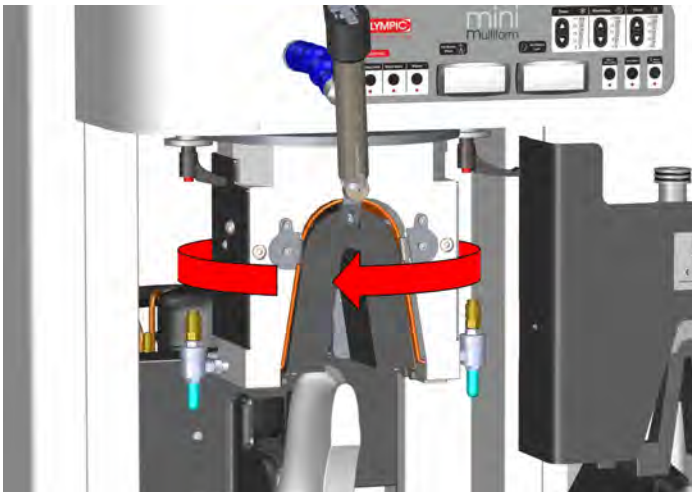

Loose the handles, and rotate the head 180°.



Mocassin attachment (ASM-00376) - ON DEMAND

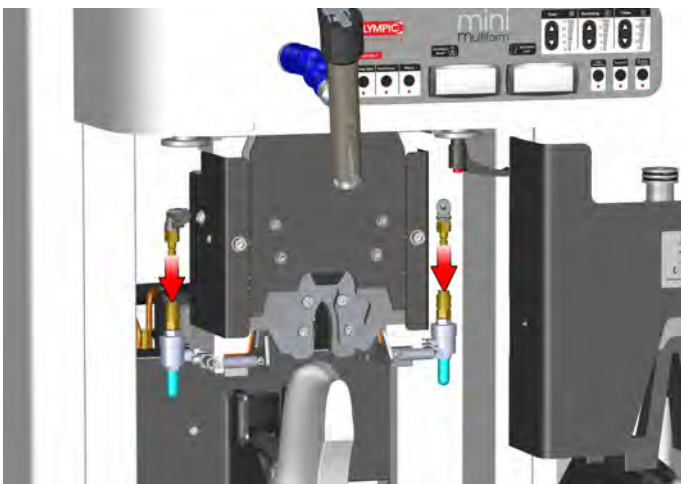

Tight the handles, and plug the couplings.




Check the accessories page


Mocassin Flanging
(On demand)

Panel Adjustments


Warning: when opening the general switch of the machine, wait for the indications on the display panel, to stop blinking.

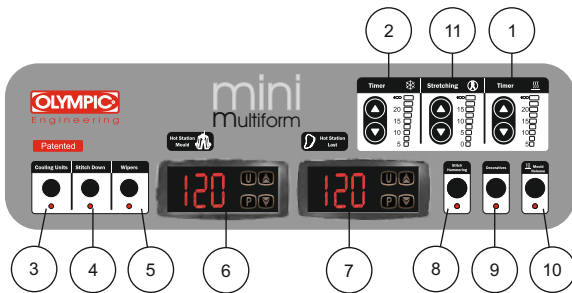


1. Adjust the cycle time of the hot station
2. Adjust the cycle time of the cold station
3. Cooling unit on/off
4. Press to execute the stitch down procedure. The optional stitch down attachment must be installed on the machine.
5. Activate / deactivate the wipers. Activate the wipers in order to succeed flanging in the back-part of the shoe upper.
6. Controls the temperature of silicon rubber in hot station. Range from 130 °C to 170 °C.
7. Controls temperature for aluminum (teflon coated) last in hot station. Range from 80 °C to 150 °C.
8. Stitch Hammering (optional): When activated creates a "hammering simulation" at the end of the hot station's cycle in order to better open the back seam of the upper. Ideal for ladies uppers.
9. Decoratives: When activated the cold station cushions are deactivated in order to avoid decoratives breaking. The upper remain pulled on the cold station pincers until the end of operation cycle.
10. Mould release (optional): Activate / deactivate the auto mould release system of the hot station. See the procedure below.
11. Stretching: adjusts electronically the cold station's pincers pulling. Avoid the repetitive puling of the upper by pressing the pedal and as soon as you press once use the over-stretching button to add extra pulling when necessary.

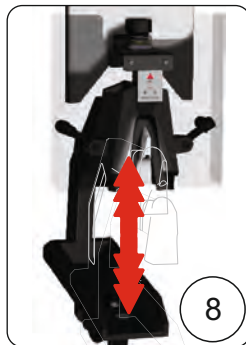


Mould release (optional)

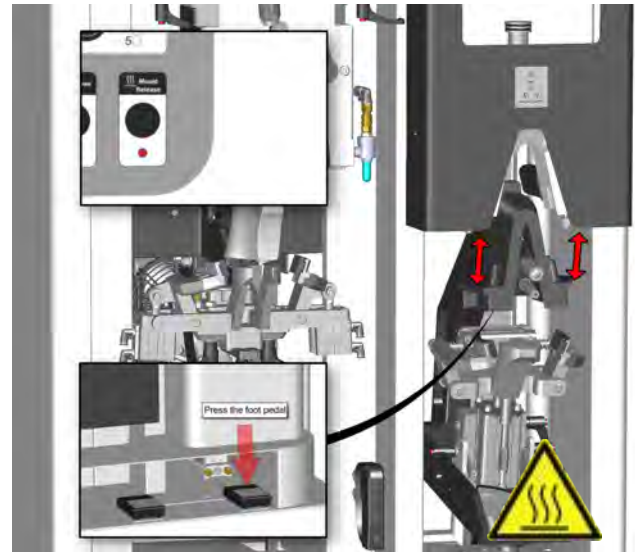

Press the pedal while you have activated the mould release function on the panel.

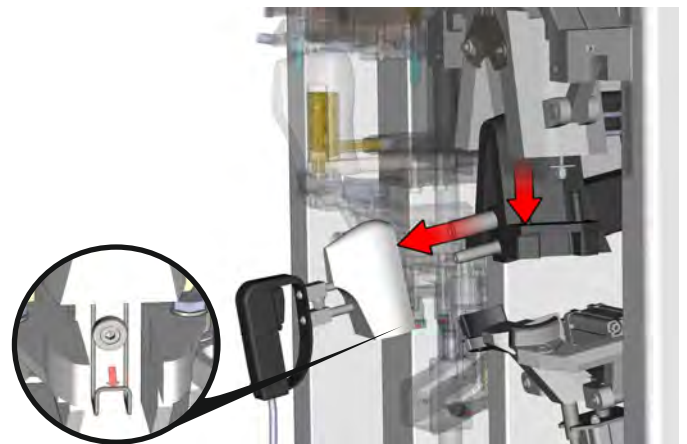


Use the special air gun as shown in the picture while in the same time pull the special wire of the last.

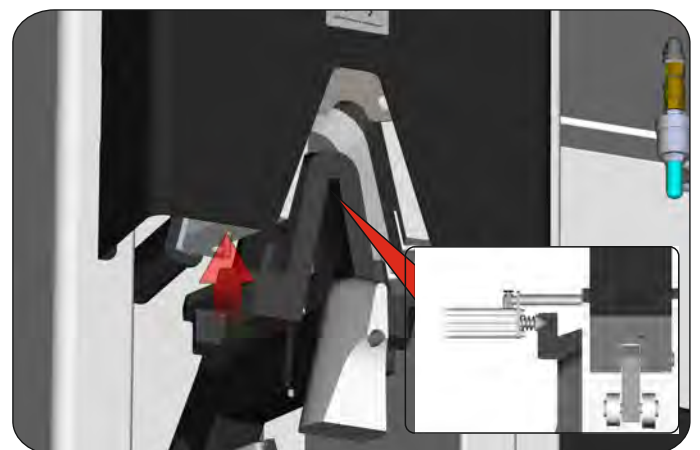

During mould placement ensure that the pin will get in the hole as shown

Projector adjustments

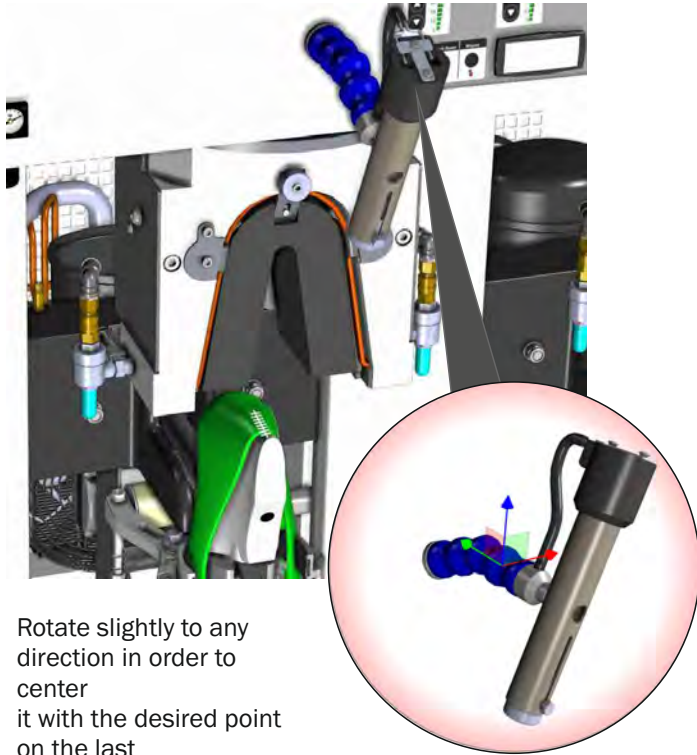

Maintenance of cooling unit

Clean the condenser (radiator) of the cooling unit once per month by using pressure.



COOLING UNIT SPECIFICATIONS

Cooling gas type	R404A
Cooling gas qty	330gr
Compressor Power	1 1/4 Hp

Lubrication


Keep the FRL (air-filter-regulator & lubricator) always filled with oil. We note that with 8 hours of work per day, the lubricator oil is consumed within 20-25 days approximately. If this does not occur, adjust the oil flow using the adjuster on upper part of lubricator. We recommend the use of pneumatic oil. Once per week lubricate all moving parts of the machine.



Lateral pressure adjustments


In case that there are metal decoratives on your uppers:

1. Use the Decoratives function on control panel.
2. In the hot station you can adjust the cushion movement as shown in the picture below.

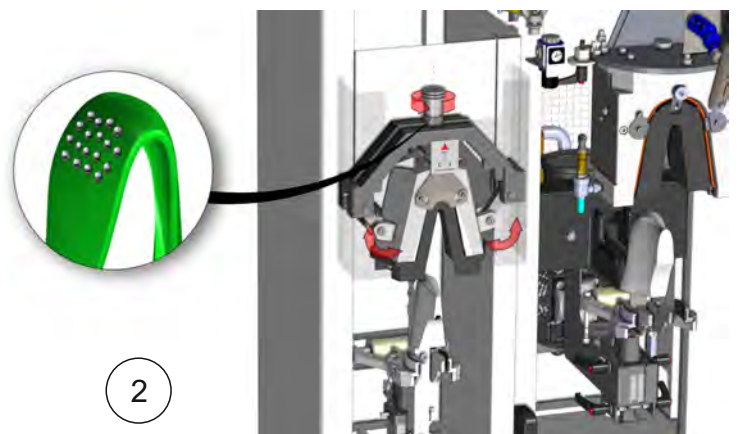

Operation

Cold Station

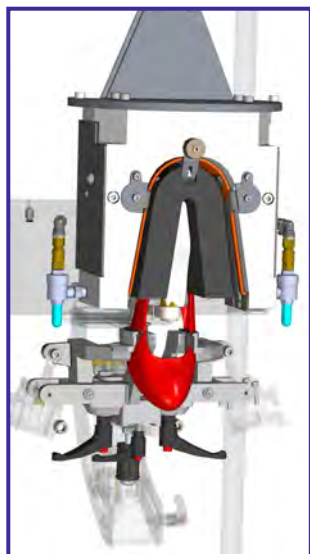

1. Press and keep your foot on the pedal to pull the upper



2. Press simultaneously in order to press the upper and complete the operation cycle




OVER STRETCHING

In case an upper needs pulling, use the OVERSTRETCHING JOYSTICK.

It stretches the upper 1mm every time is pressed


By using this method we avoid repetitive pulling of the upper which may cause upper deformation.

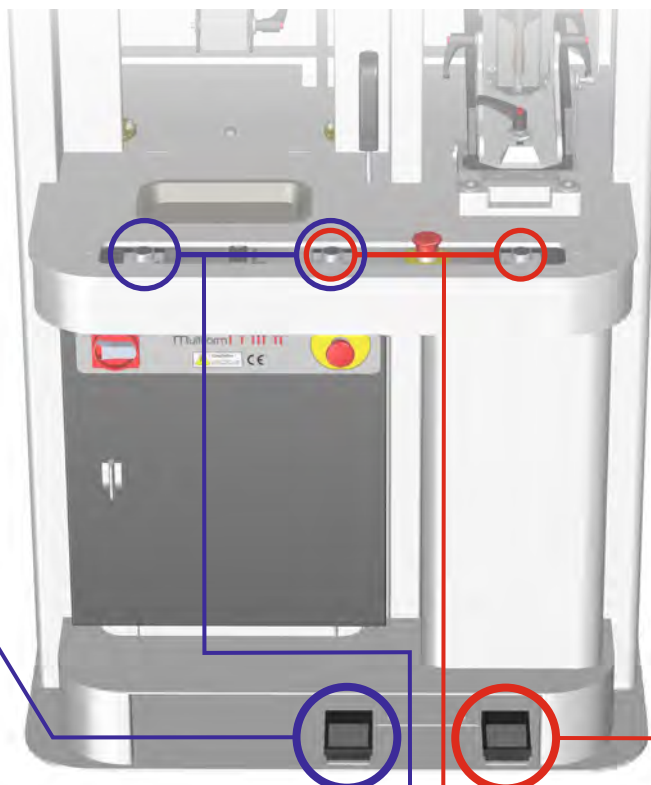

Hot Station



1. Press and keep your foot on the pedal to pull the upper

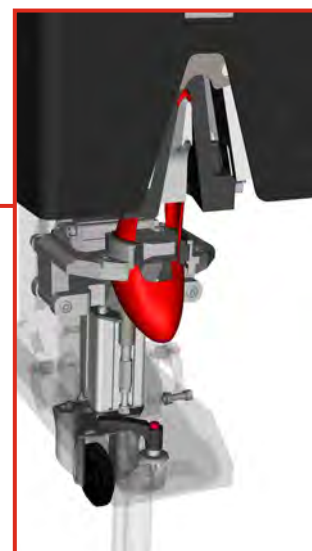

2. Press simultaneously in order to press the upper and complete the operation cycle

Final Result



In case of emergency press the emergency stop button

ASSEMBLING Multiform Mini

Hot Station Cushion with Support Base (Page 14)

Hot Station Pincers (Page 15)

Hot Station Mould Support (Page 16)

Cold Station Pincers (Page 17)


Cold Station Cylinder (Page 18)

Cold Station Cushion (Page 19)


Wipers (Page 20)

LED Projector (Page 21)

Pneumatics (Page 26)

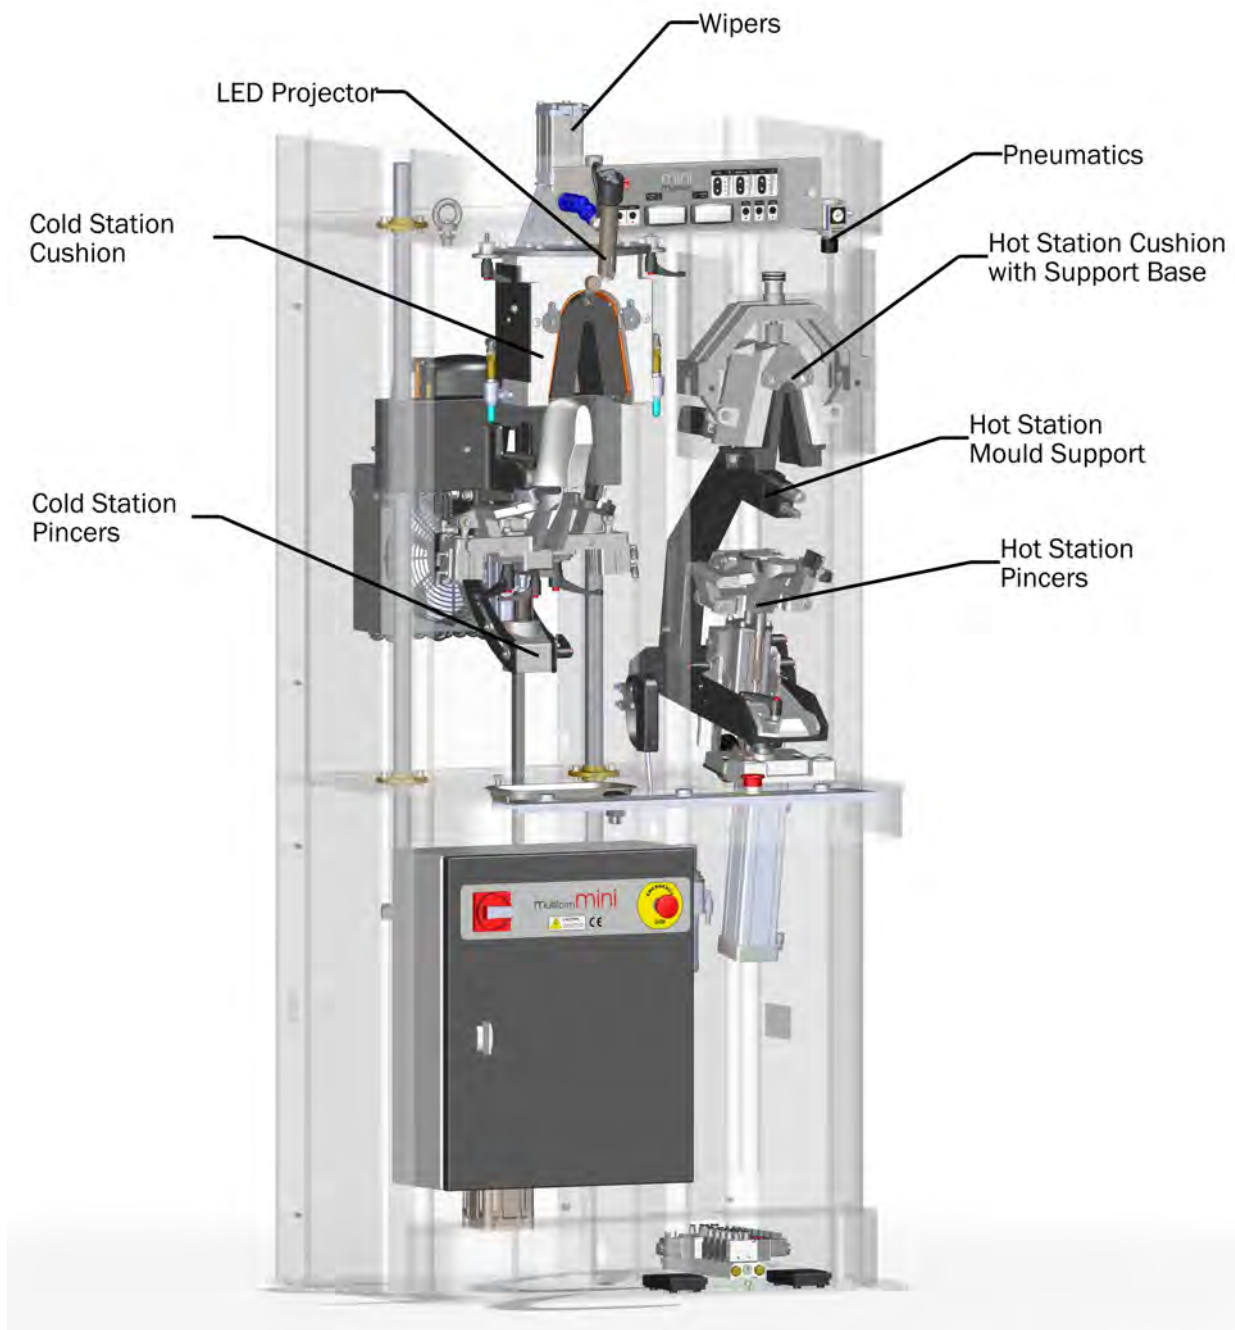

ASM-00479 (HOT STATION CUSHION WITH SUPPORT BASE)

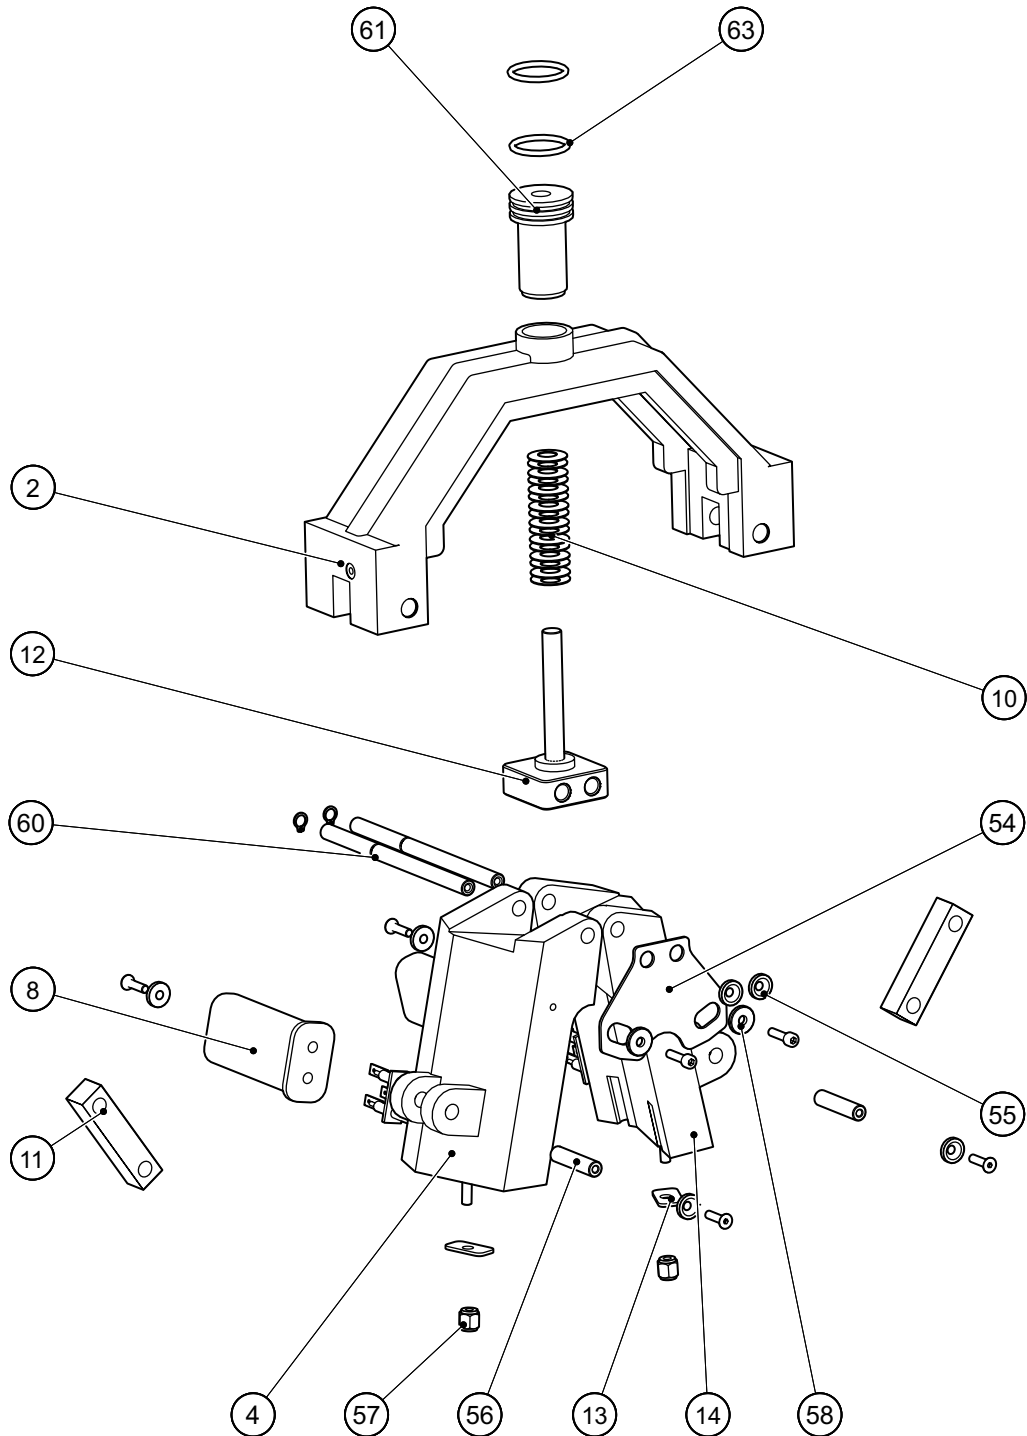


BOM ID	PartNo	Description	Qty
2	CAS-00102	CUSHION SUPPORT	1
4	ASM-00476	HEATED CUSHION (LEFT), MF-3 & MF-4	1
8	ELE-00016	ELECTRIC ELEMENT ISOLATOR	2
10	FAS-00003	WASHER, SPRING, DIN9023, 28X12.2X1	16
11	GEN-00245	BRACKET	2
12	ASM-00434	GUIDE	1
13	LAS-00051	WASHER RECTANGULAR $\Phi 7 \times 16$	2
14	ASM-00475	HEATED CUSHION (RIGHT), MF-3 & MF-4	1
54	LAS-00453	HOT CUSHION COVER	1

BOM ID	PartNo	Description	Qty
55	REV-00029	$\Phi 5$ WASHER FOR CUSHION PINS	6
56	REV-00067	PIN	2
57	REV-00074	NUT, CUSTOM, M6	2
58	REV-00078	WASHER, CUSTOM, FLAT, $\Phi 6$	2
60	REV-00245	AXLE	2
61	REV-00255	STROKE ADJUSTER	1
63	RUB-00089	ORING, NBR, 35x3.5	2


HOT STATION PINCERS

BOM ID	PartNo	Description	Qty
1	CAS-00017	PINCER	2
2	CAS-00050	CASTED ARM BODY (LEFT)	1
3	CAS-00051	CASTED ARM BODY (RIGHT)	1
4	CAS-00069	CBS PISTON CAP, FRONT, Ø40	2
5	CAS-00082	CYLINDER SLIDING BASE	1
6	CAS-00083	SLIDING PINCER'S BASE	1
8	RUB-00072	BRAKE, FRONT, Ø40	1
9	RUB-00068	BRAKE RUBBER, BACK, Ø40	1
10	CBSXX-99	BRASS RING FOR ØXX CAP	2
11	CYL-00027	CYLINDER Ø50X115	1
13	CYL-00029	CYLINDER Ø40 FOR PINCERS	1
14	GEN-00067	CL. LEVER, MALE, ELES, M6X20	2
16	GEN-00068	CL. LEVER, MALE, ELES, M8X20	1
48	GEN-00070	CL. LEVER, FEMALE, ELES, M8	1
49	GEN-00072	DKN Ø40	2
50	GEN-00175	PISTON SEAL RING 44.5x49.5x5.4	1
51	GEN-00226	OAK PISTON INTERNAL SEAL (MF)	1
52	GEN-00250	THREAD ROD M8	1
53	LAS-00159	Ø50 PISTON CAP	1
54	LAS-00160	Ø50 PISTON CAP	1
55	PNE-00028	FITTING, PARALLEL, 1/8 - Ø4	2
56	PNE-00030	FITTING, ANGLE, M5 - Ø4	1
57	PNE-00971	M5 BANJO STEM SINGLE LIGHT	1
58	PNE-00972	SINGLE BANJO BODY	1
59	REV-00028	MF88-99 BRACKET PINS	2
62	REV-00078	WASHER, CUSTOM, FLAT, Ø6	2
63	REV-00079	WASHER, CUSTOM, FOR Ø8	1
64	REV-00113	WASHER, CUSTOM	1
65	REV-00133	WASHER, CUSTOM, Ø14X2.5	4
66	REV-00136	NUT, CUSTOM, M8, CUT EDGES	2
67	REV-00138	CBS SCREW, M6	8
68	REV-00192	STEEL TUBE Ø10-Ø12	2
69	REV-00197	BRASS BEARING Ø50	1
70	REV-00198	PISTON	1
71	REV-00201	SPACER	2
72	REV-00202	ROD	2
73	REV-00234	PULLING REGULATOR	1
74	REV-00295	FITTING, CUSTOM	1
75	REV-00296	M10 THREADED PIN	2
76	RUB-00012	PISTON SEAL Ø50	2
77	RUB-00015	ROD WIPER	1
78	RUB-00062	ORING, NBR, 44X3	1
79	RUB-00092	PINCER RUBBER (v.2014)	2
80	SPR-00018	COMPRESSION SPRING	2
222	ASM-00316	CASTED PINCER SUPPORT	1

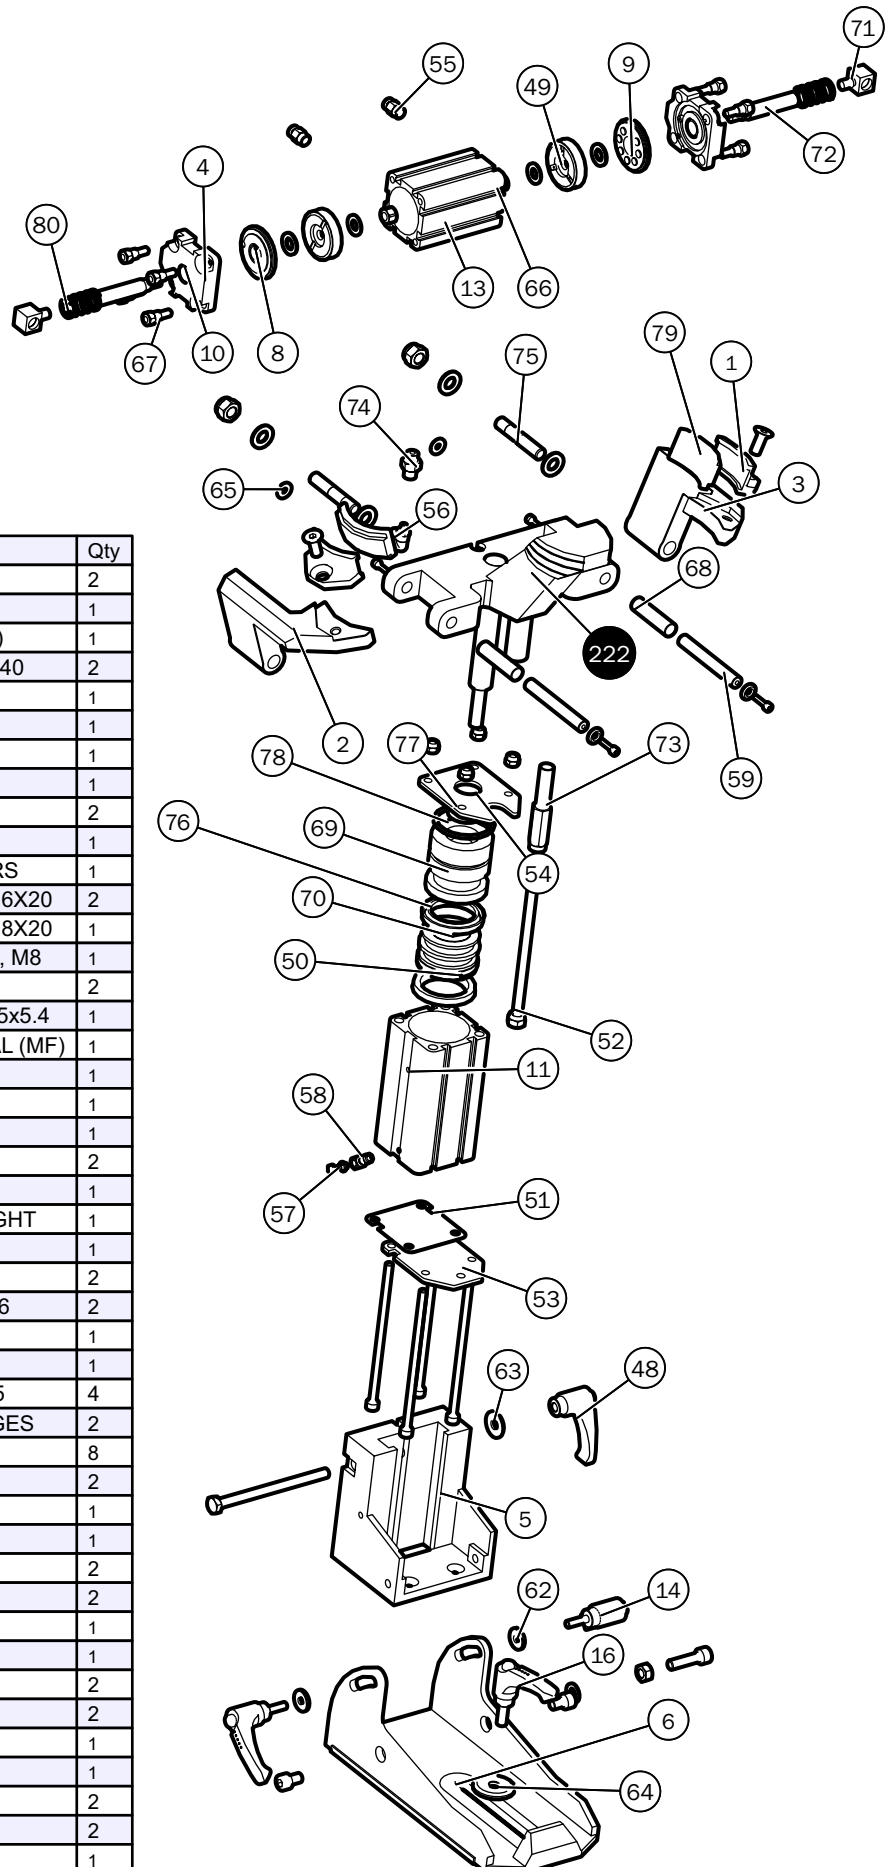


ASM-00354 (HOT STATION MOULD SUPPORT)

BOM ID	PartNo	Description	Qty
12	REV-00054	SPACER $\Phi 28 \times L23$	1
15	GEN-00225	AXLE $\Phi 10 \times 142$	1
81	CAS-00081	ARTICULATION	1
82	ASM-00325	WHEEL	1
83	ASM-00322	END CAP	1
84	CAS-00099	END CAP, $\Phi 63$	1
85	CYL-00028	CYLINDER $\Phi 63 \times 295$	1
86	ELE-00217	RESISTANCE $\Phi 16 \times 85$ 48V450W S400 M/M	1
91	ASM-00317	HOT STATION MOULD	1
92	GEN-00294	DKN $\Phi 63$, NORMAL	1
93	PNE-00043	FITTING, ELBOW, 1/4 - $\Phi 6$	1
94	PNE-00044	FITTING, ELBOW, 1/8 - $\Phi 6$	1
95	REV-00056	THERMISTOR BRACKET	1
97	REV-00076	WASHER	1
98	REV-00113	WASHER, CUSTOM	2
99	REV-00193	WASHER, CUSTOM, TAPER, $\Phi 23 \times \Phi 10 \times 5$	1
100	RUB-00005	PISTON RUBBER $\Phi 63$	1
101	RUB-00018	RUBBER	1
102	RUB-00019	STOPPER	1
103	RUB-00060	SHOCK ABSORBING RUBBER	2


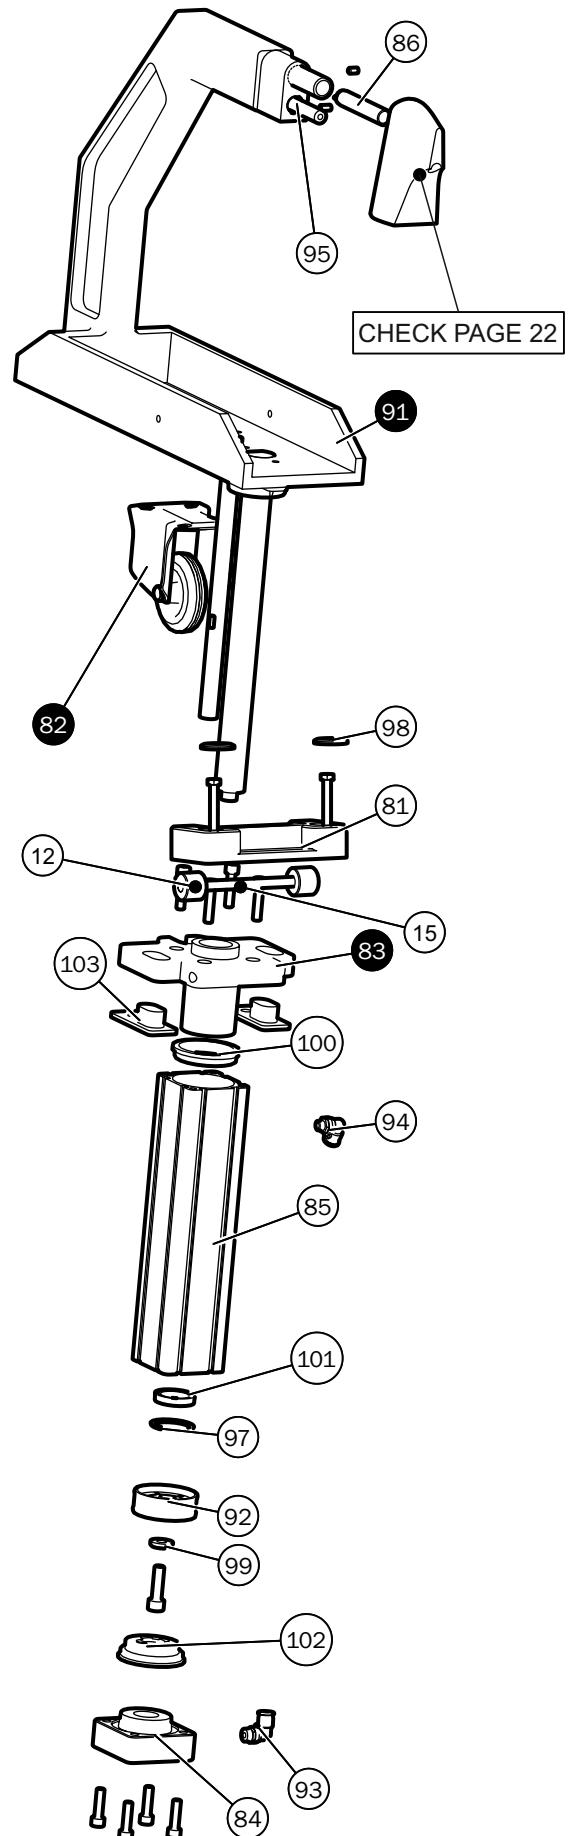


COLD STATION PINCERS

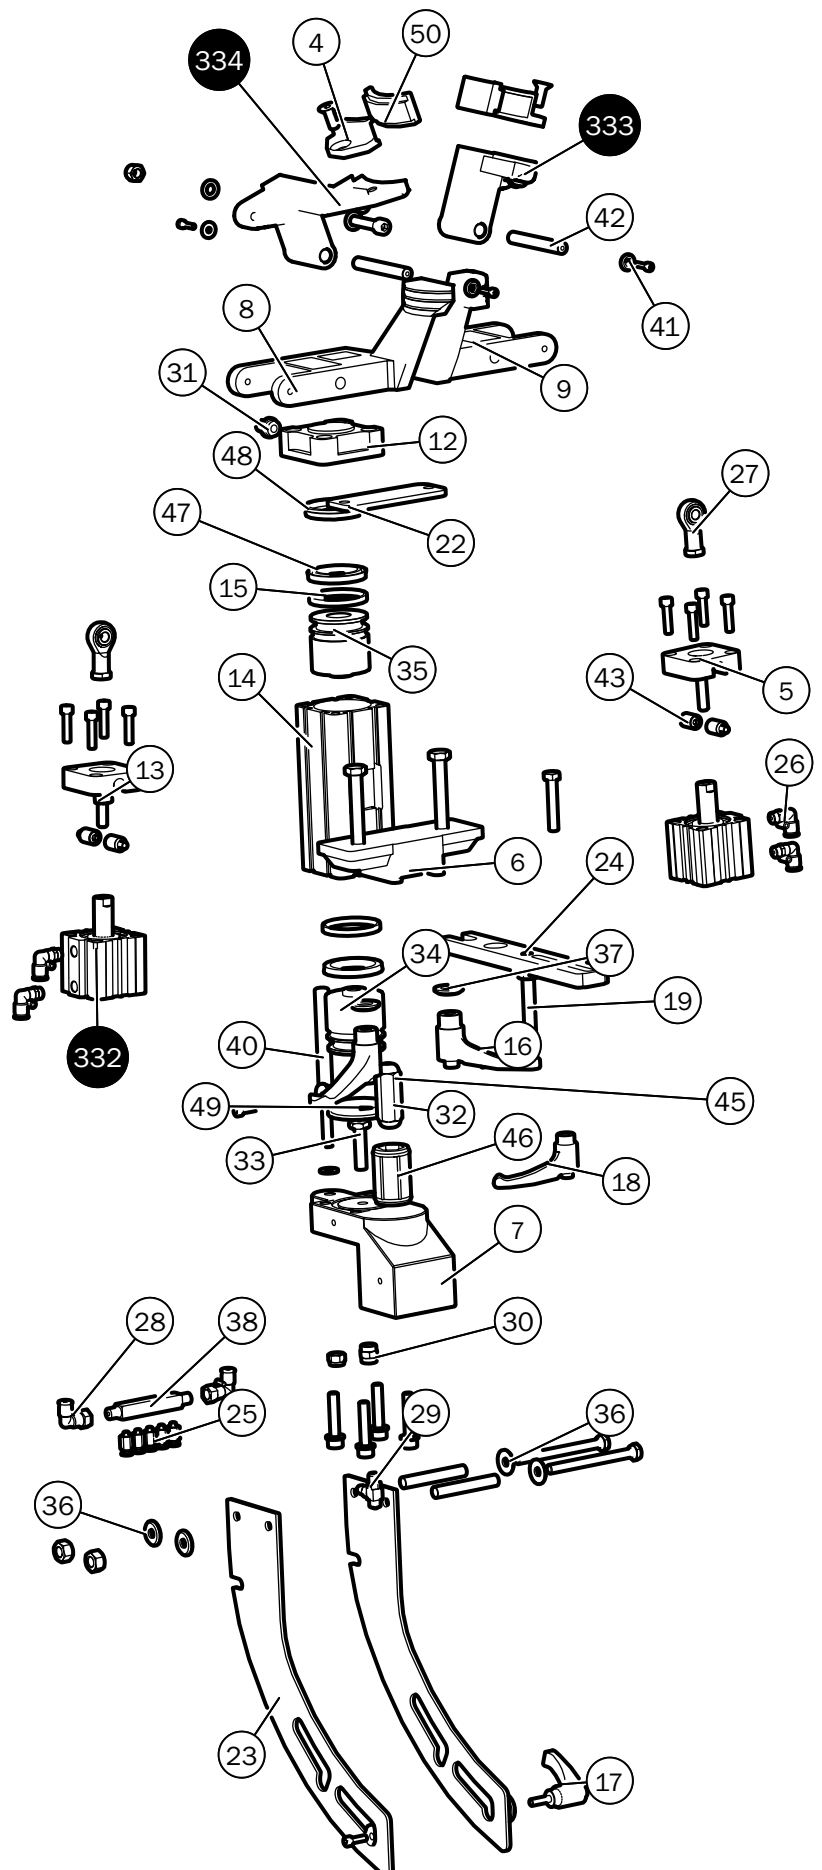


BOM ID	PartNo	Description	Qty
4	CAS-00017	PINCER	2
5	CAS-00039	TOP CAP PLATE	2
6	CAS-00040	BASE	1
7	CAS-00041	CAS-00041	1
8	CAS-00042	BRACKET SUPPORT (LEFT)	1
9	CAS-00043	PINCER BRACKET SUPPORT (RIGHT)	1
12	CAS-00054	PISTON END CAP Ø63	1
13	CBSXX-99	BRASS RING FOR ØXX CAP	1
14	CYL-00013	CYLINDER Ø50 X 144	1
15	GEN-00013	PISTON SEAL RING 45.2x50.1x5.37	2
16	GEN-00066	CL. LEVER, FEMALE, ELES, M10	2
17	GEN-00067	CL. LEVER, MALE, ELES, M6X20	1
18	GEN-00070	CL. LEVER, FEMALE, ELES, M8	1
19	GEN-00076	THREADED ROD M10	1
22	LAS-00142	PINCER MOUNTING PLATE (FASTENING PLATE)	1
23	LAS-00148	BRACKET INOX REAR FLANGE	2
24	LAS-00158	GUIDE BRACKET	1
25	PNE-00013	FITTING, STRAIGHT, M5 - Ø4	5
26	PNE-00029	FITTING, ELBOW, 1/8 - Ø4	4
27	PNE-00061	FISH, UNIVERSAL JOINT, M8	2
28	PNE-00078	FITTING, ELBOW, FEMALE, 1/8 - Ø4	2
29	PNE-00666	FLOW REGULATOR, ANGLE, 1/8 - Ø4	1
30	PNE-00713	SLEEVE, 1/8 (F) - 1/8 (F)	1
31	PNE-00084	FITTING, STRAIGHT, 1/4 - Ø6, SMALL HEXAGON	1
32	REV-00023	REGULATOR	1
33	REV-00063	SCREW, CUSTOM, BRASS, HEX16L42 BRASS	1
34	REV-00065	Multiform dia 50mm cylinder back cap	1
35	REV-00072	UPPER PISTON	1
36	REV-00079	WASHER, CUSTOM, FOR Ø8	4
37	REV-00080	WASHER, CUSTOM, FOR Ø10	2
38	REV-00130	5-INPUTS DISTRIBUTION FITTING	1
40	REV-00132	GUIDE	1
41	REV-00133	WASHER, CUSTOM, Ø14X2.5	4
42	REV-00028	MF88-99 BRACKET PINS	2
43	REV-00137	ROTATION RING	4
45	REV-00275	MOUNTING BRACKET'S WASHER	3
46	RUB-00009	REGULATOR COVER	1
47	RUB-00012	PISTON SEAL Ø50	2
48	RUB-00032	Ø50 STOPPER	1
49	RUB-00066	PISTON RUBBER Ø50	1
50	RUB-00092	PINCER RUBBER (v.2014)	2
332	ASM-00417	PISTON Ø40X20	2
333	ASM-00301	PINCER BRACKET (RIGHT)	1
334	ASM-00300	PINCER BRACKET (LEFT)	1

ASM-00364 (COLD STATION CYLINDER)

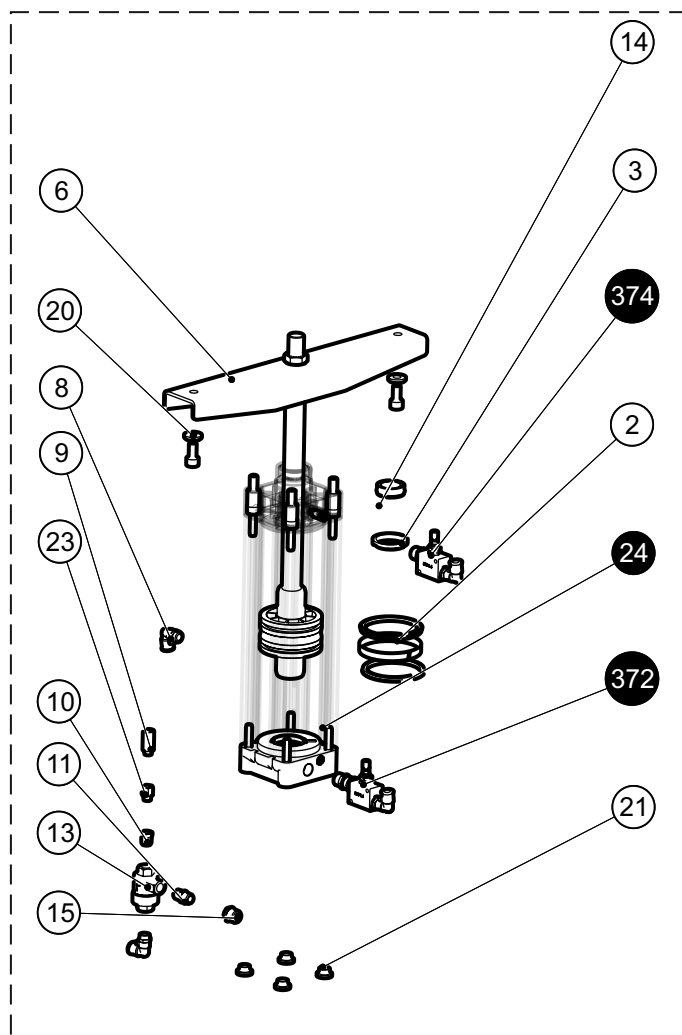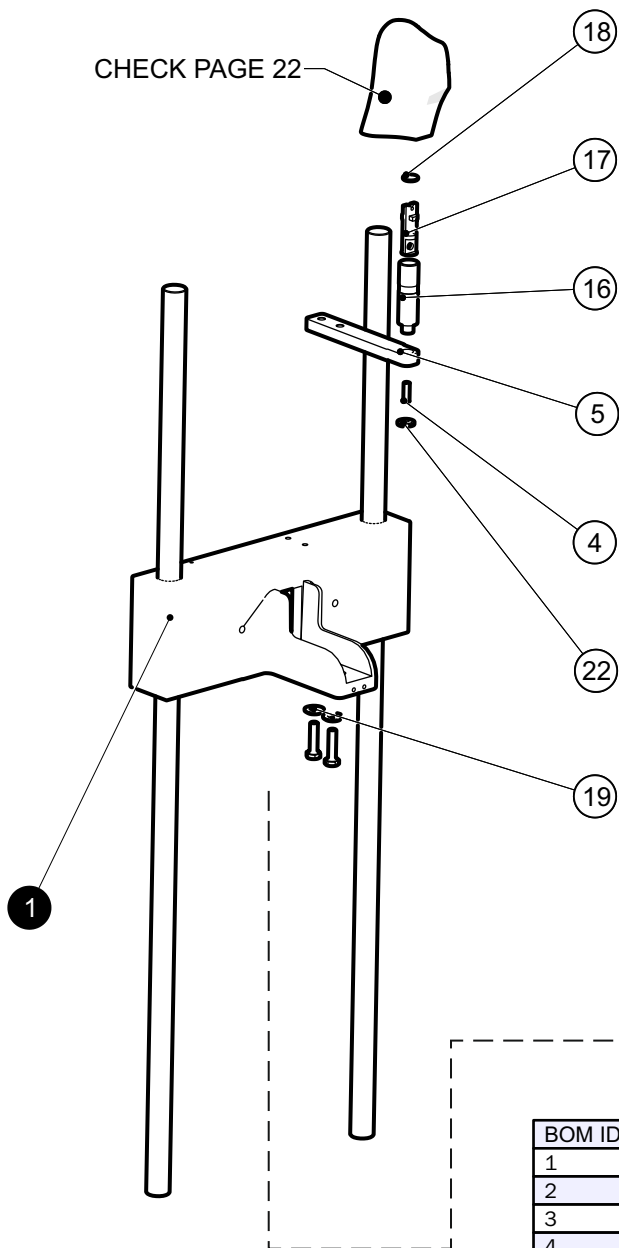

BOM ID	PartNo	Description	Qty
1	ASM-00364	MAIN SUPPORT, MF3 & MF4	1
2	RUB-00101	PISTON SEAL FOR Ø80	2
3	RUB-00099	CAP SEAL FOR PISTON Ø80	1
4	GEN-00295	THREADED ROD, INOX, M8X25	1
5	LAS-00140	COOLING PIPE MOUNTING BASE	1
6	LAS-00385	TOP PISTON MOUNTING BASE, COLD STATION	1
8	PNE-00008	FITTING, ELBOW, 1/4 - Ø8	2
9	PNE-00018	SILENCER, 1/8, PLASTIC, BLUE	1
10	PNE-00037	ADAPTOR, 1/4(M) - 1/8(F)	1
11	PNE-00059	NIPPLE, TAPER, 1/4 (M) - 1/4 (M)	1
13	PNE-00089	QUICK EXHAUST VALVE, 1/4	1
14	RUB-00100	AXLE SEAL FOR Ø80	1
15	PNE-00895	ADAPTOR, TAPER, 3/8-1/4	1
16	REV-00019	84N MALE METAL MOLD SHAFT	1
17	REV-00020	84N EVAPORATOR INSERT	1
18	REV-00021	FRIDGE SHAFT CAP	1
19	REV-00080	WASHER, CUSTOM, FOR Ø10	2
20	REV-00193	WASHER, CUSTOM, TAPER, Ø23xØ10x5	2
21	REV-00254	CYLINDER WASHER	4
22	REV-00281	WASHER, CUSTOM, FOR PIPE MOUNTING BASE	1
23	REV-00298	ADAPTOR MALE G1/8 - FEMALE G1/4 - HOLE Ø2 (FLOW REDUCTOR)	1
24	ASM-00416	CYLINDER Ø80x250	1
372	ASM-00824	FLOW REGULATOR WITH PNEUMATIC COMPONENTS	1
374	ASM-00825	FLOW REGULATOR WITH PNEUMATIC COMPONENTS	1


ASM-00179 (COLD STATION CUSHION, AIRBAG)

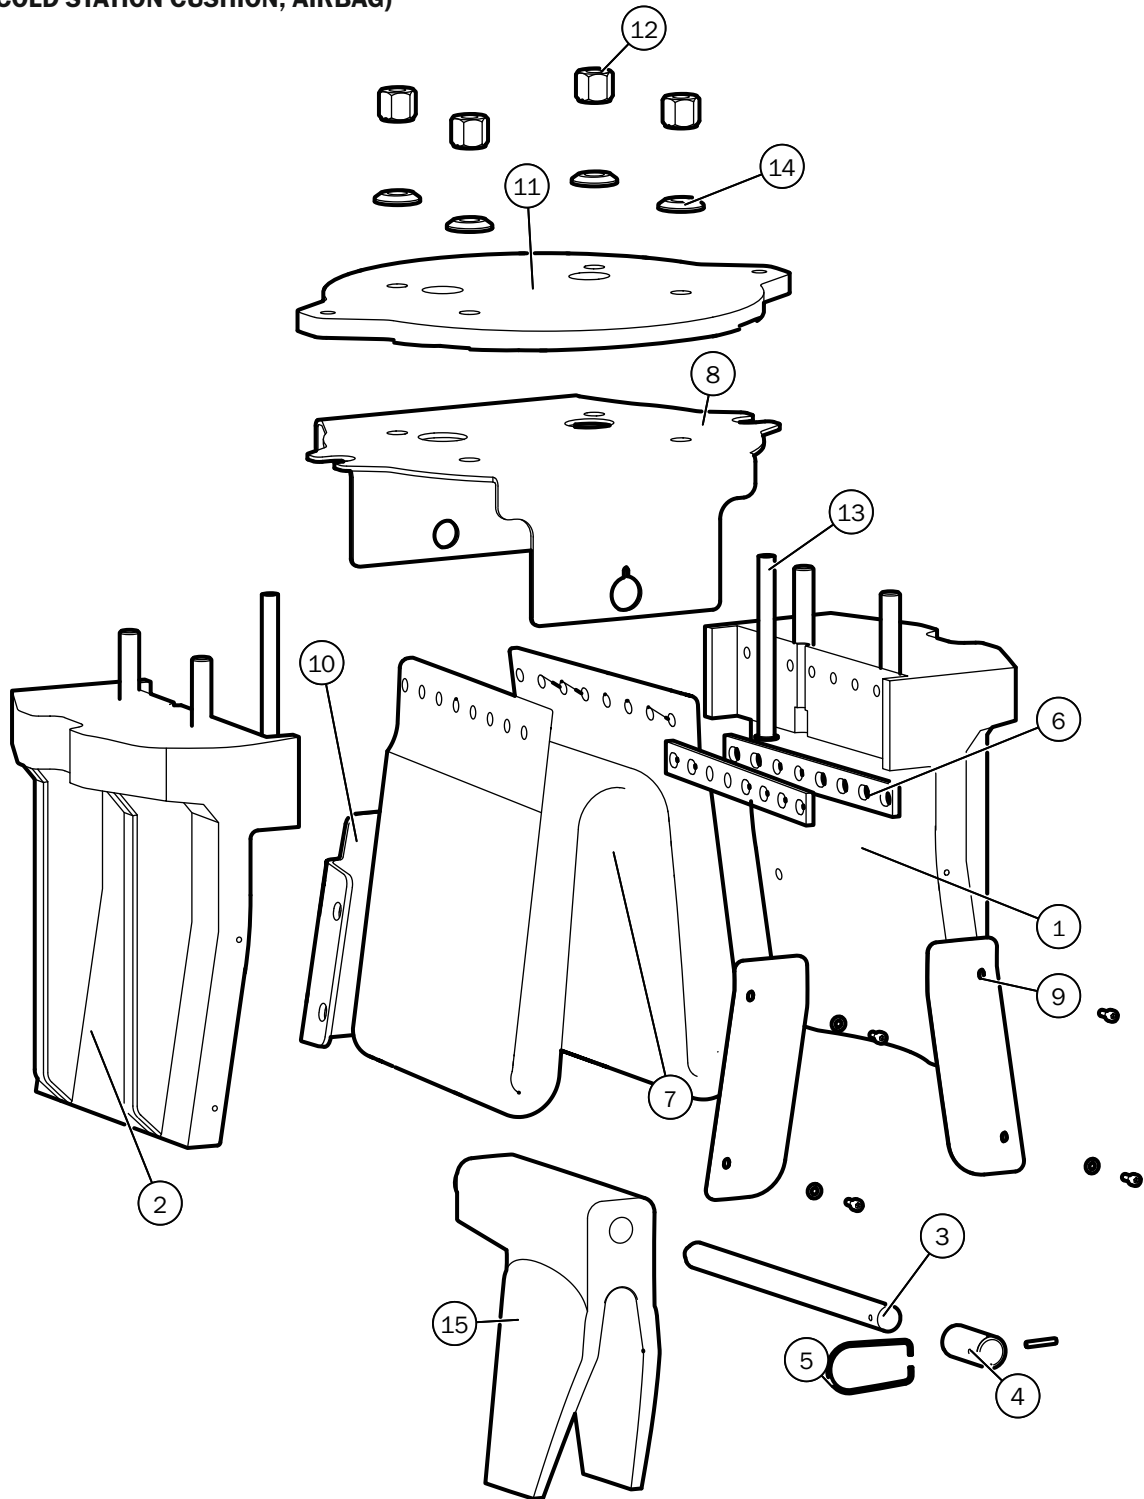

BOM ID	PartNo	Description	Qty
1	CAS-00052	AIRBAG RIGHT CUSHION	1
2	CAS-00053	AIRBAG LEFT CUSHION	1
3	GEN-00060	HEAD'S CENTRAL PIN	1
4	GEN-00061	BRASS MOUNTING ROD	1
5	GEN-00062	CENTRAL PIN PULL-OUT RING	1
6	GEN-00063	TUBULAR PLATE SUPPORT	2
7	GEN-00078	TUBOLAR	1
8	LAS-00044	SUPPORT PLATE BASE	1

BOM ID	PartNo	Description	Qty
9	LAS-00146	PLATE	2
10	LAS-00166	PROTECTION FLANGE	1
11	LAS-00167	SUPPORT PLATE	1
12	REV-00125	M12 CUSTOM NUT	4
13	REV-00126	BRASS ROD	2
14	REV-00147	WASHER, CUSTOM, TAPER, Ø28xØ12.1x5	4
15	RUB-00058	MOULD, SILICON	1


WIPERS

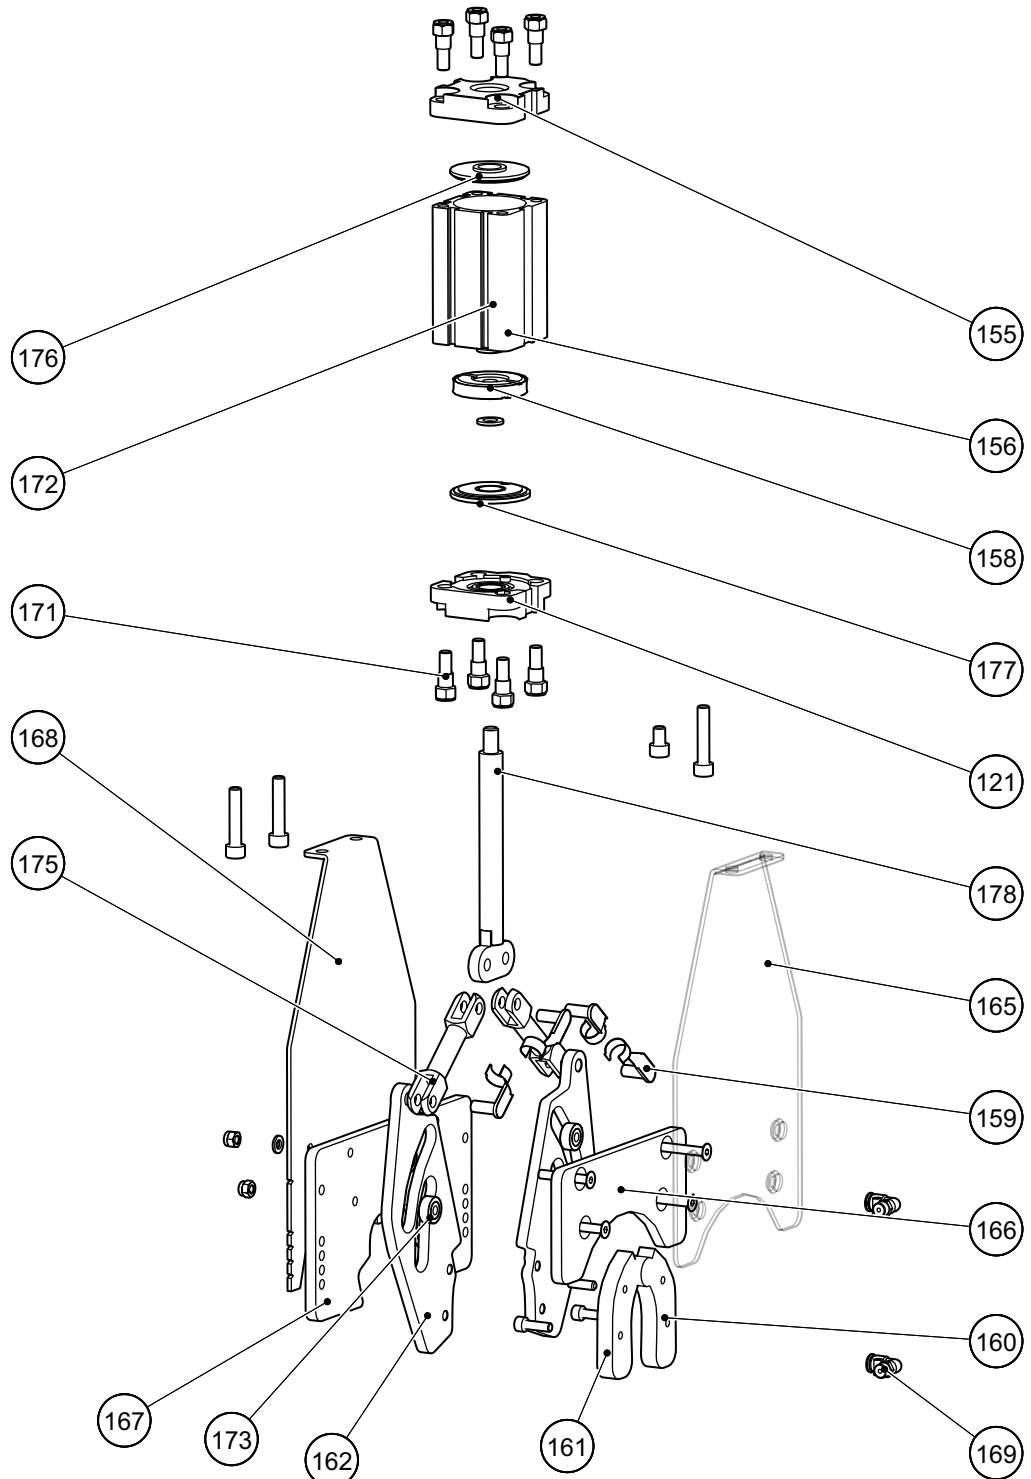

BOM ID	PartNo	Description	Qty
121	CAS-00070	CBS PISTON CAP, FRONT, Ø50	1
155	CAS-00078	CBS PISTON CAP, BACK, Ø50	1
156	CYL-00030	CYLINDER Ø50X95	1
158	GEN-00229	DKN Ø50	1
159	GEN-00230	JOINT PIN	4
160	LAS-00151	PINCER, NORMAL, (MALE PART)	1
161	LAS-00152	PINCER, NORMAL, (FEMALE PART)	1
162	LAS-00154L	WIPER PLATE, LEFT	1
165	LAS-00227	OUTER FRONT PLATE	1
166	LAS-00356	INNER FRONT PLATE	1
167	LAS-00442	HEAD INNER REAR PLATE, MF3 & MF4	1

BOM ID	PartNo	Description	Qty
168	LAS-00466	OUTER REAR PLATE	1
169	PNE-00007	FITTING, ELBOW, 1/8 - Ø4	2
171	REV-00206	M8 CBS SCREW	8
172	REV-00207	NUT, CUSTOM, M10, CUT EDGES	1
173	REV-00238	RING	4
175	REV-00282	FORK JOINT	2
176	RUB-00069	BRAKE RUBBER, BACK, Ø50	1
177	RUB-00073	BRAKE RUBBER, FRONT, Ø50	1
178	ASM-00321	MOVEMENT ROD ASSEMBLY	1

ASM-00492 (LED PROJECTOR)

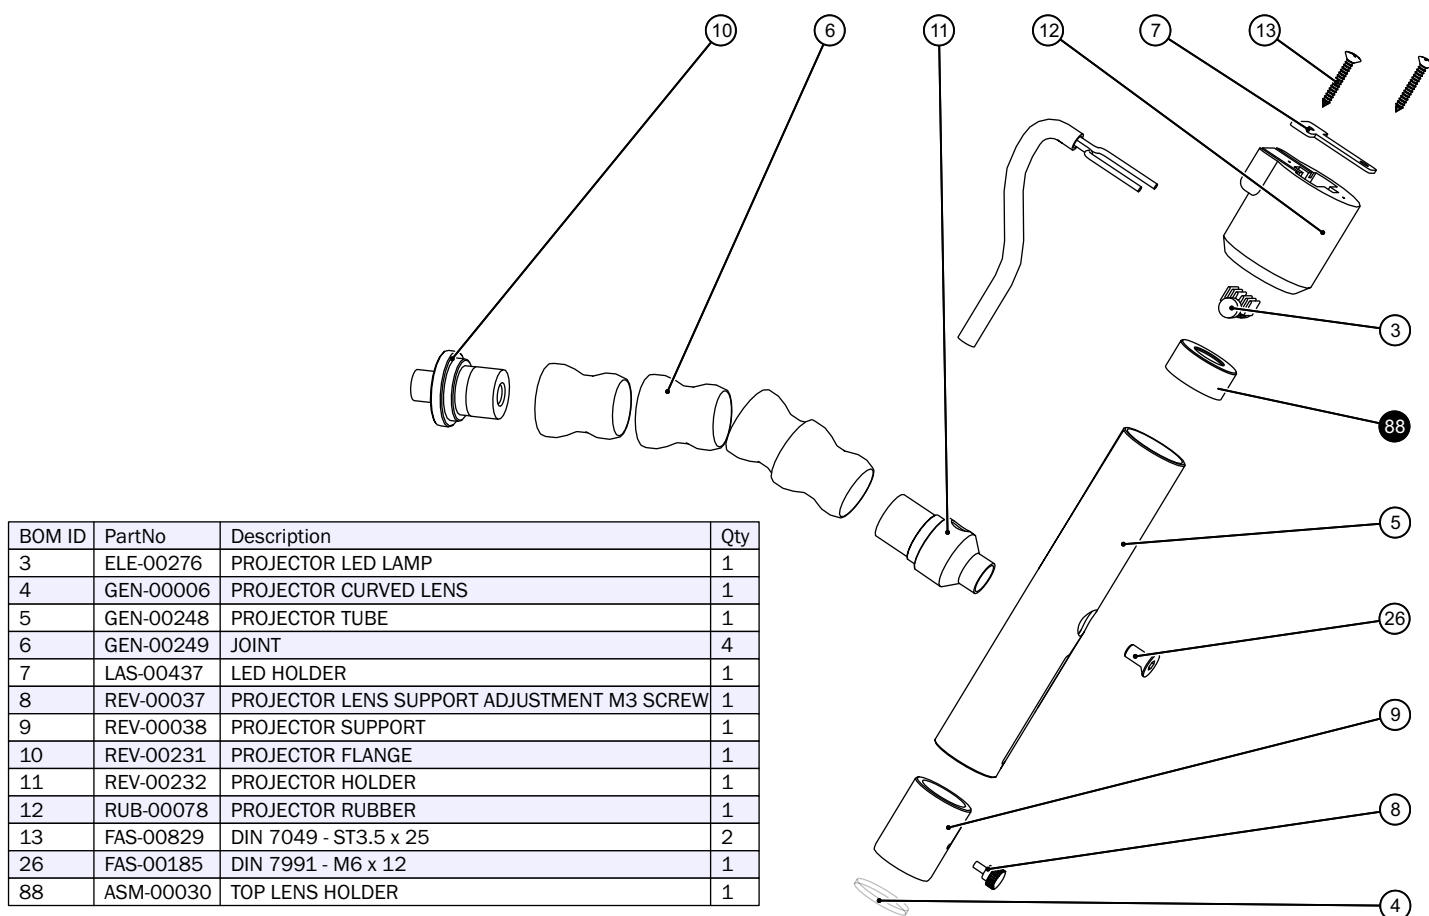

EXTRA HOT STATION MOULDS - ON DEMAND

	LADIE'S HIGH HEEL	BOOTS - STITCH DOWN	MEN'S	PREMOULDED COUNTERS	UNIVERSAL	MEDIUM, LOW BOOTS
AUTO RELEASE	 STL-00085 (No15)	 STL-00086 (No02)	 STL-00081 (No22)	 STL-00079 (No14)	 STL-00078 (No11)	 STL-00080 (No13)
STANDARD MOULDS	 STL-00016 (No15)	 STL-00020 (No02)	 STL-00083 (No22)	 STL-00014 (No14)	 STL-00015 (No11)	 STL-00017 (No13)
	 STL-00027 (No15)	 STL-00023 (No02)	 STL-00082 (No22)	 STL-00026 (No14)	 STL-00025 (No11)	 STL-00029 (No13)

Multiform Mini Accessories

Baby attachment - ON DEMAND



Goodyear attachment (ASM-00389) - ON DEMAND



Mocassin attachment (ASM-00376) - ON DEMAND




Pincer mini counter attachment (ASM-00391) - ON DEMAND



Stitch down attachment - ON DEMAND (Half pair)



Blower (for uppers with decoratives)

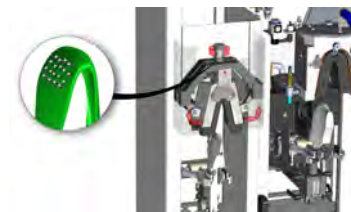


Blower for the cold station cushion.
Ideal for uppers with decoratives.
It is installed on the cushion and blows the upper when the "decoratives" operation is chosen



ASM-00504



Mini Counter parts

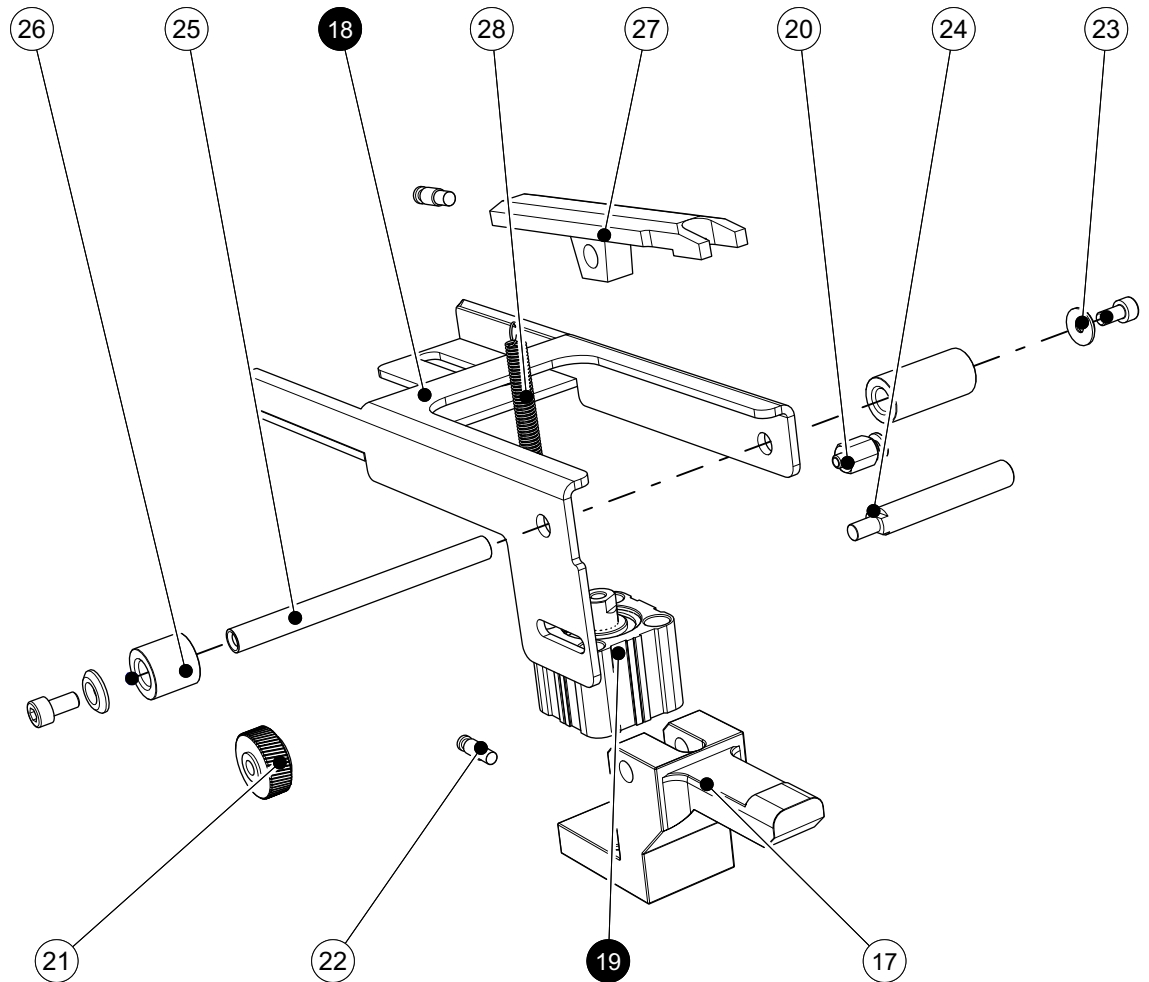


BOM ID	PartNo	Description	Qty
18	ASM-00392	MINI COUNTER BASE	1
19	ASM-00497	CYLINDER ACQ25X10 FOR MINI COUNTER	1
17	CAS-00106	BASE FOR MINI COUNTER'S PISTON & Pincer	1
20	PNE-00013	FITTING, STRAIGHT, M5 - Ø4	1
21	REV-00024	HANDLE	1
22	REV-00032	WIPER SPRING PIN	2
23	REV-00133	WASHER, CUSTOM, Ø14X2.5	2

BOM ID	PartNo	Description	Qty
24	REV-00247	PIN	1
25	REV-00248	INTERNAL PIN	1
26	REV-00250	SPACER	2
27	REV-00283	MINI COUNTER Pincer	1
28	SPR-00021	SPRING, MINI COUNTER TILTING Pincer	1


MULTIFORM MINI PNEUMATIC DIAGRAM

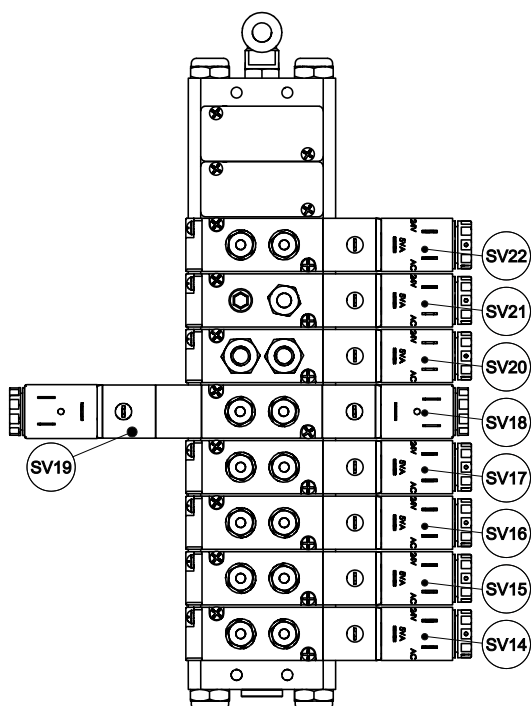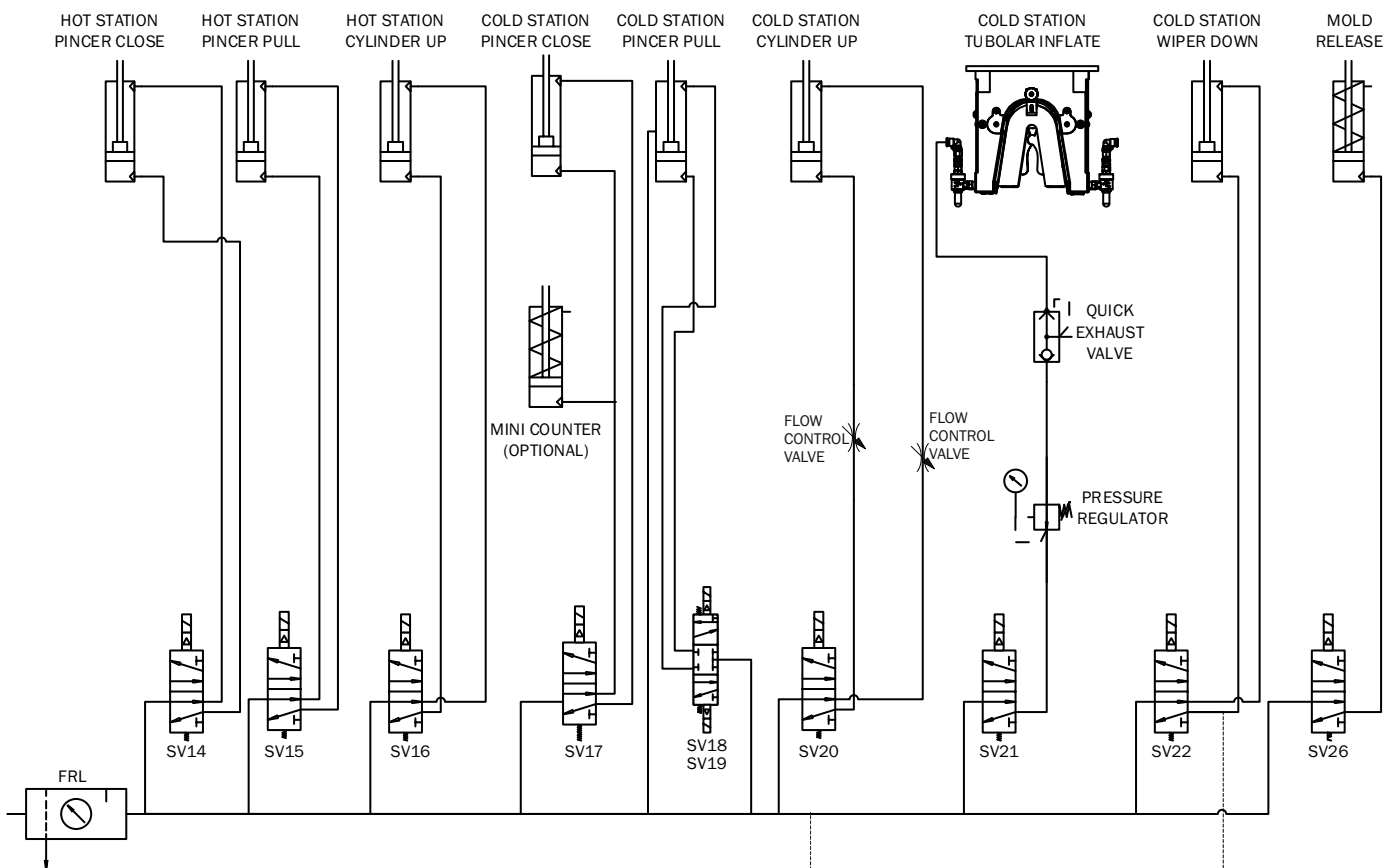


MULTIFORM-4 STITCH DOWN DEVICE PNEUMATIC DIAGRAM

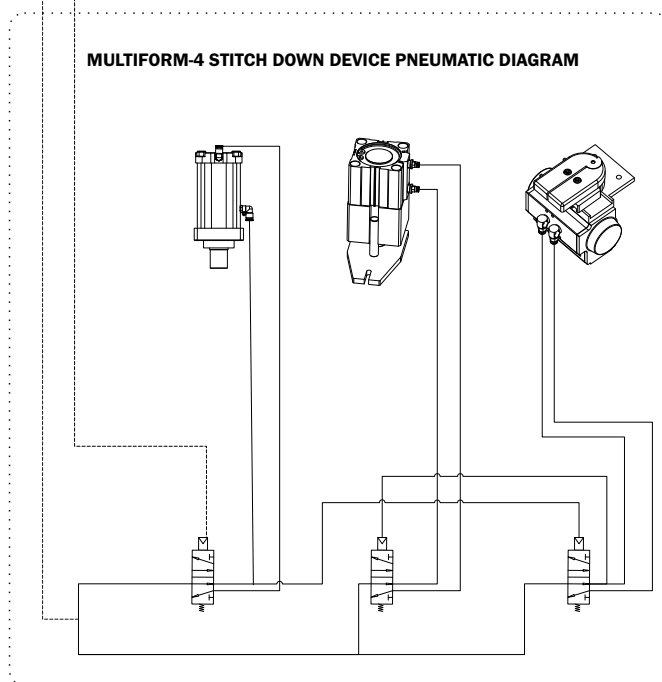

MULTIFORM MINI MAIN PNEUMATIC DIAGRAM (INFLATABLE CUSHION)

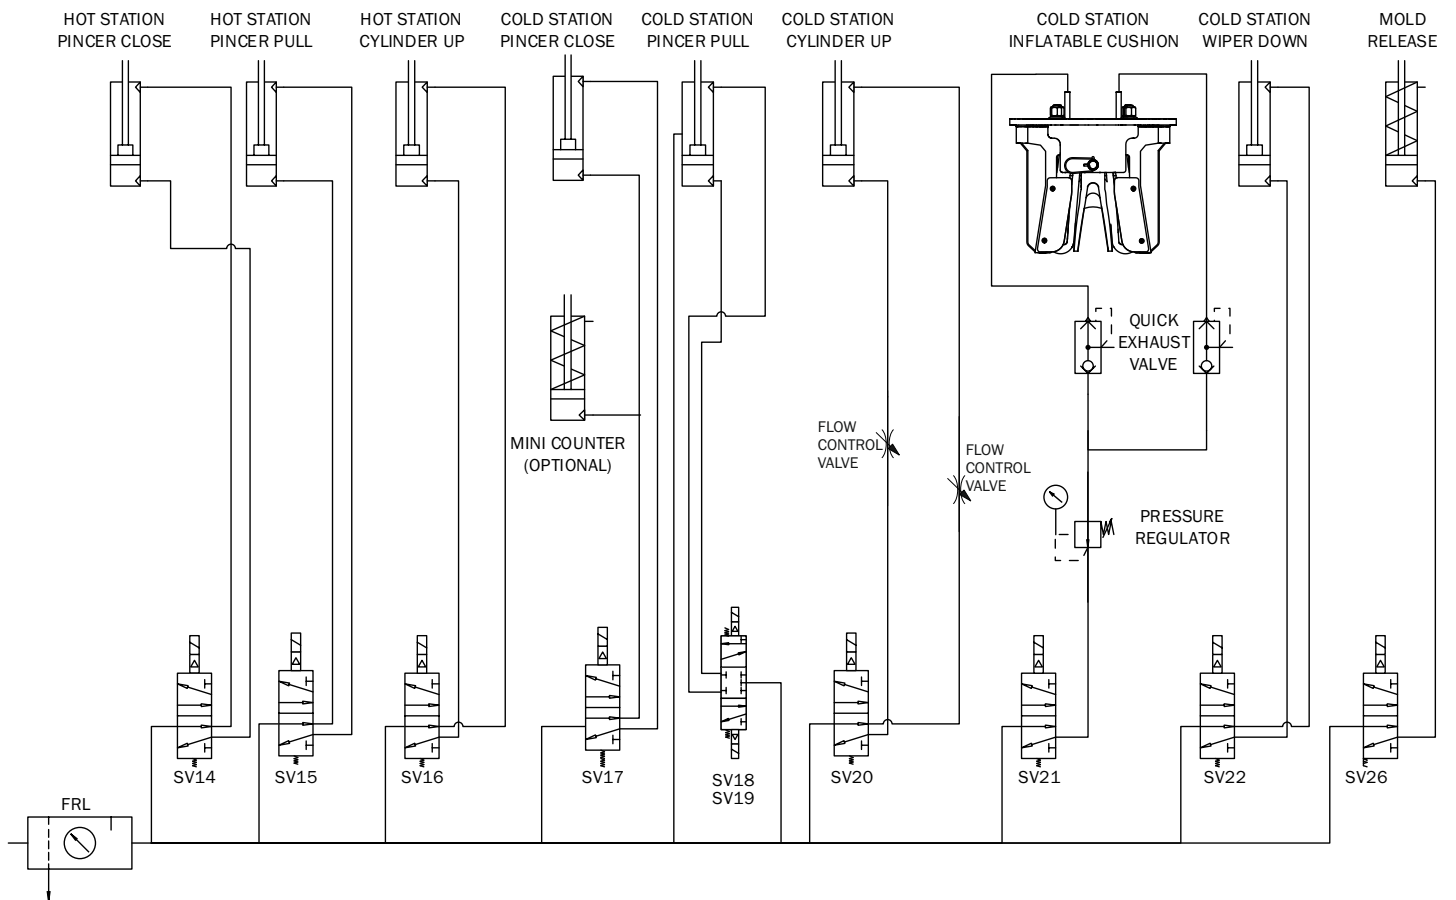

Pneumatics

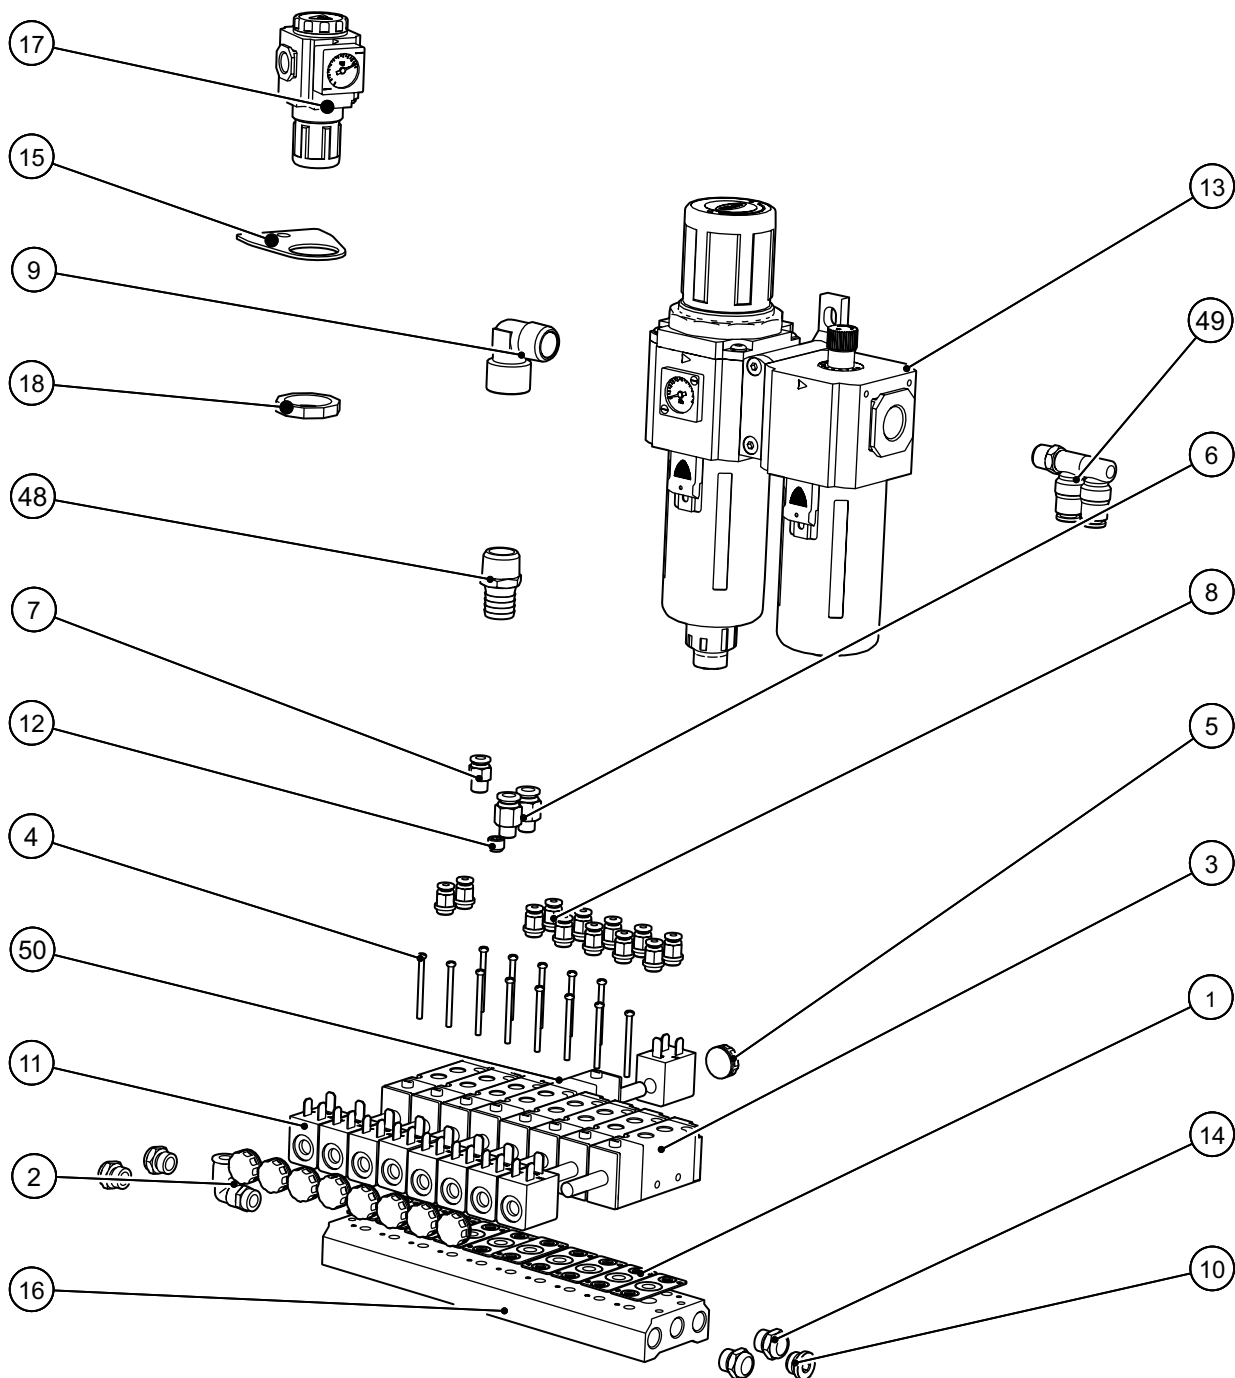

NOTICE:


Rest of pneumatic components can be found in the previous assembly pages.

BOM ID	PartNo	Description	Qty
1	GEN-00093	RUBBER BOTTOM	11
15	GEN-00253	REGULATOR MOUNTING BASE	1
2	PNE-00008	FITTING, ELBOW, 1/4 - Ø8	1
12	PNE-00009	CAP 1/8	1
3	PNE-00016	VALVE BODY ELECTRIC PILOT 5/2 G1/8, NO COIL	8
4	PNE-00016C	SCREW M3 FOR 5/2 VALVE	20
5	PNE-00021	COIL NUT, G1/8	9
6	PNE-00027	FITTING, PARALLEL, 1/8 - Ø8	2
7	PNE-00039	FITTING, STRAIGHT, MALE, 1/8 - Ø6	1
8	PNE-00084	FITTING, STRAIGHT, 1/8 - Ø4, SMALL HEXAGON	13
9	PNE-00201	FITTING, ANGLE, 1/2 (M) - 1/2 (F)	1

BOM ID	PartNo	Description	Qty
10	PNE-00213	CAP ALLEN, +OR 1/4	1
17	PNE-00543	PRESSURE REGULATOR 1/4	1
18	PNE-00543B	REGULATOR NUT	1
11	PNE-00752	COIL Ø9 - 24VAC, 5W	9
13	PNE-00771	FRL G1/2 SIZE 400	1
14	PNE-00896	SILENCER 1/4	4
16	PNE-00898	MANIFOLD, 1/4, 10 STATION, 200M10F	1
48	PNE-00909	HOSE ADAPTER, RG, MALE, TAPER, 1/1 - Ø18	1
49	PNE-00973	FITTING, ELBOW, 2-TAPERED SWIVEL, 1/4 - Ø8	1
50	PNE-00976	VALVE BODY ELECTRIC PILOT 5/2 G1/8, WITH DOUBLE 24V COIL	1

MULTIFORM MINI ELECTRICAL DIAGRAM

MULTIFORM MINI VERSION 2016 ELECTRIC DIAGRAM

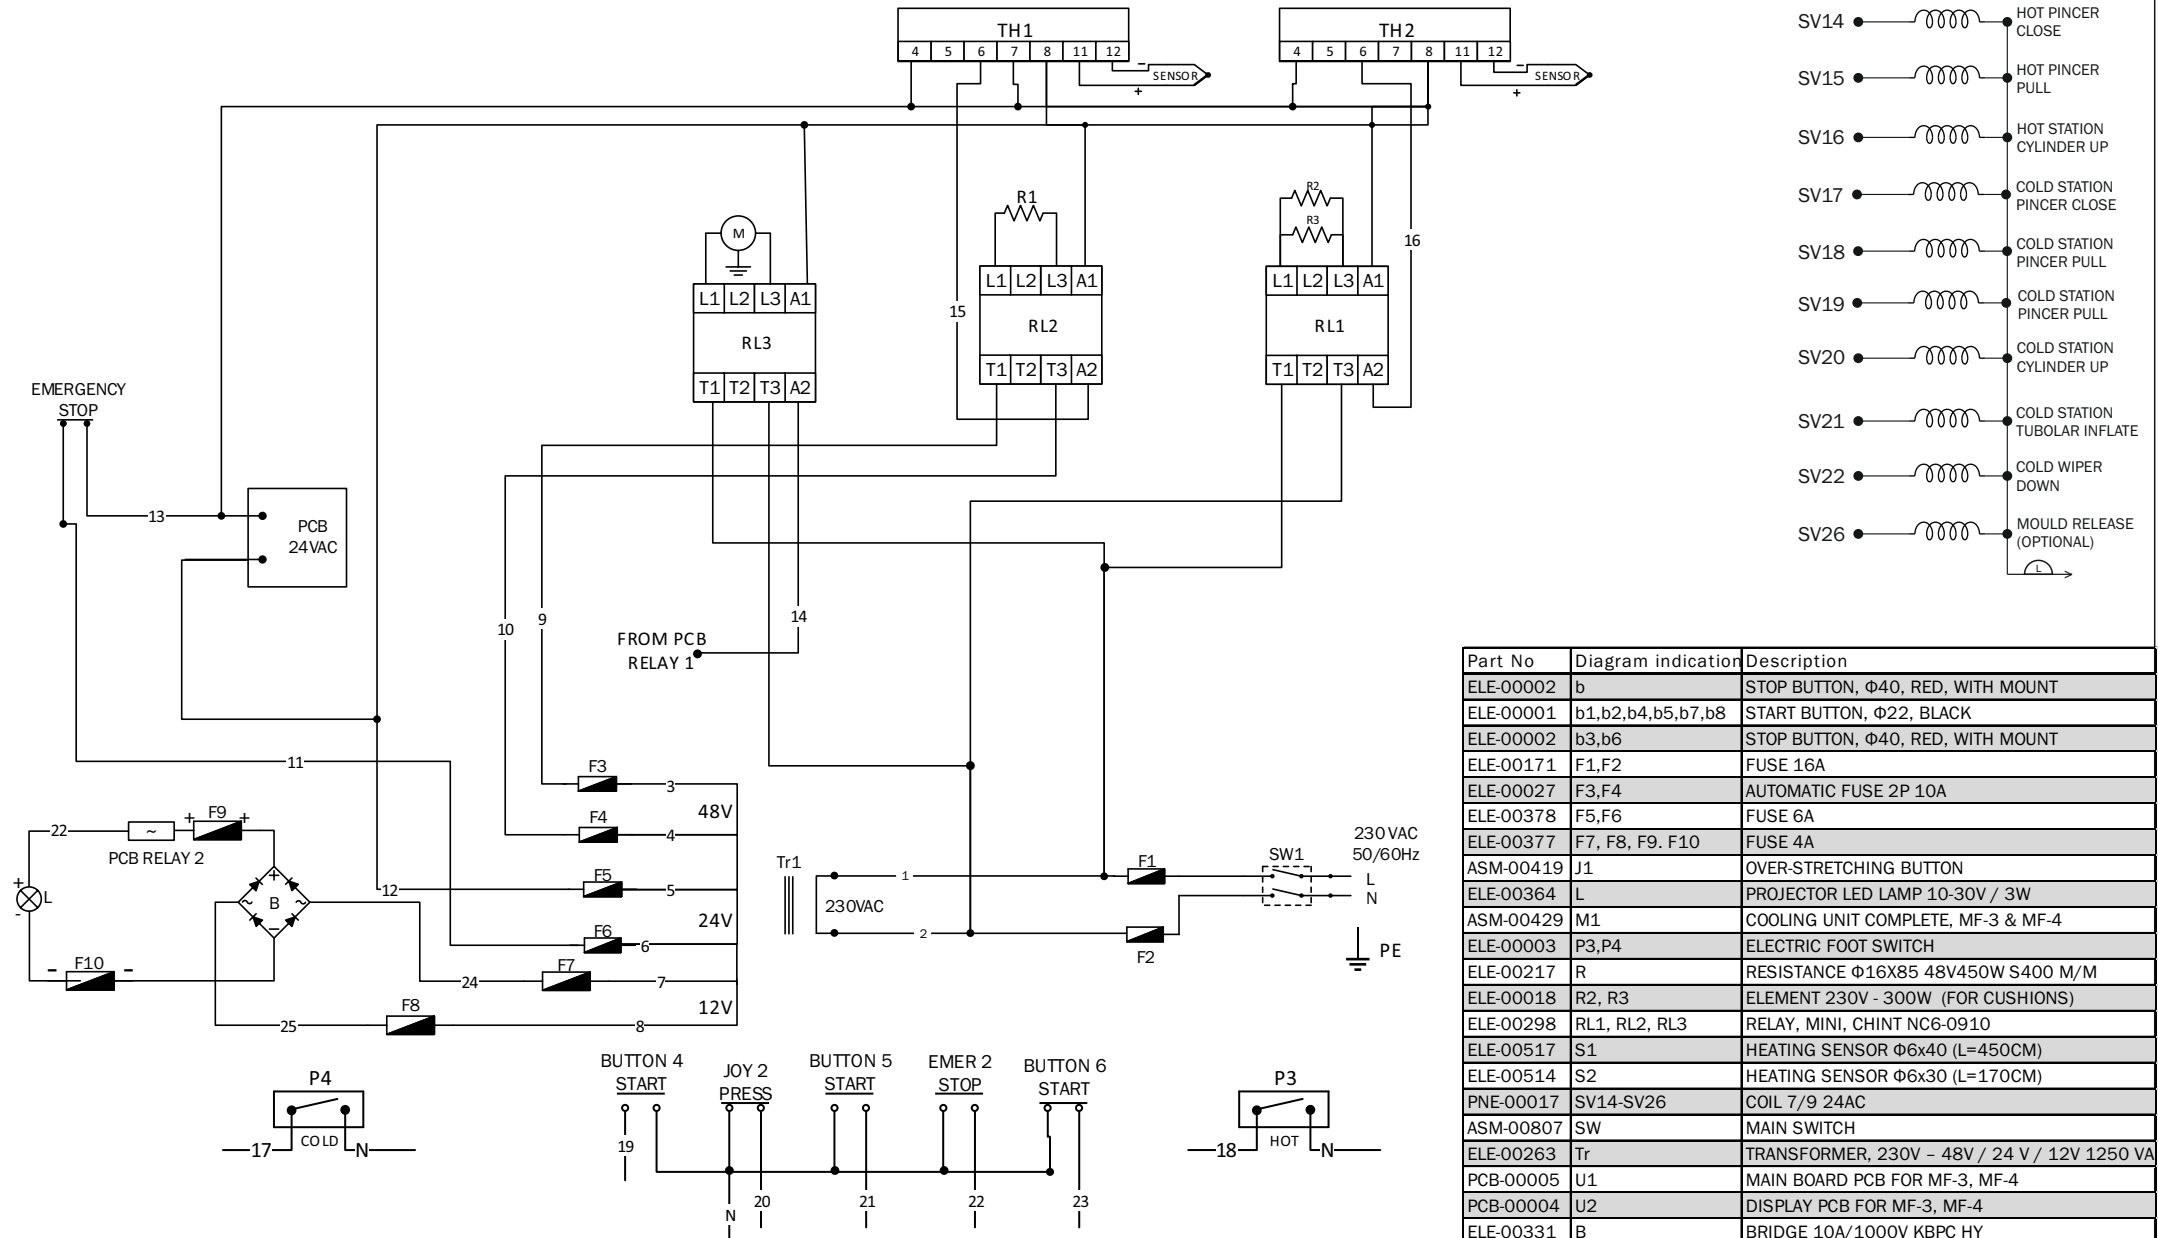


Pneumatics




PCB-00004: DISPLAY BOARD

ELE-00365
ETHERNET MAIN BOARD CONNECTION (MF-3, MF-4)

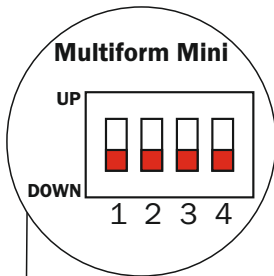

IMPORTANT:
THE SWITCHES MUST BE
STRICTLY SET AS SHOWN
(ALL DOWN)

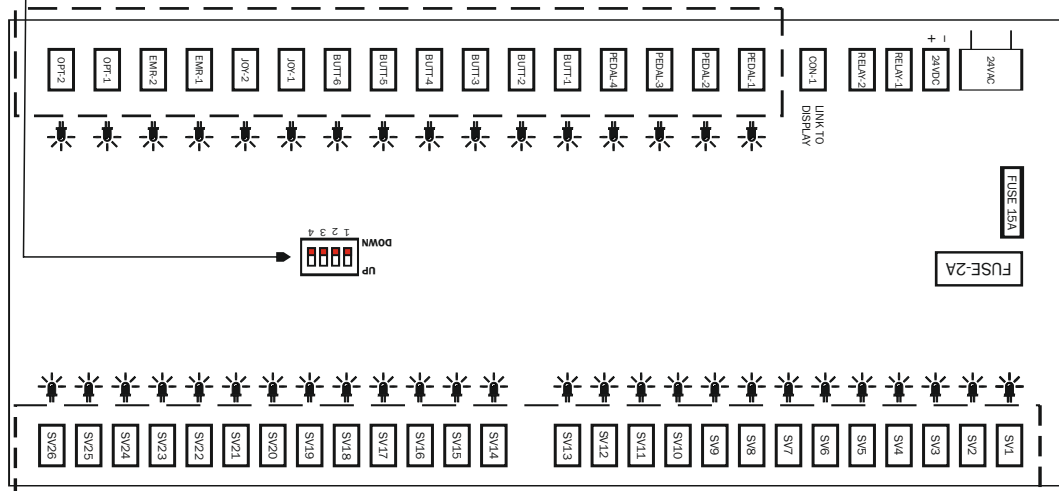

PCB-00005 : MAIN BOARD

INPUTS			
LEFT SIDE		RIGHT SIDE	
PEDAL1	<NOT USED>	PEDAL3	RIGHT HOT
PEDAL2	<NOT USED>	PEDAL4	RIGHT COLD
BUTTON1	<NOT USED>	BUTTON4	RIGHT COLD
BUTTON2	<NOT USED>	BUTTON5	RIGHT COLD & HOT
BUTTON3	<NOT USED>	BUTTON6	RIGHT HOT
JOY1	<NOT USED>	JOY2	RIGHT COLD
EMR1	<NOT USED>	EMR2	RIGHT CANCEL (HOT & COLD)
OPT1	<NOT USED>	OPT2	<NOT USED>

OUTPUTS	
LEFT SIDE	
SV1	<NOT USED>
SV2	<NOT USED>
SV3	<NOT USED>
SV4	<NOT USED>
SV5	<NOT USED>
SV6	<NOT USED>
SV7	<NOT USED>
SV8	<NOT USED>
SV9	<NOT USED>
SV10	
SV11	
SV12	
SV13	<NOT USED>
RELAY 1	COOLING UNIT
RELAY 2	AUX

RIGHT SIDE	
SV14	HOT STATION PINCER CLOSE
SV15	HOT STATION PINCER PULL
SV16	HOT STATION CYLINDER UP
SV17	COLD STATION PINCER CLOSE
SV18	COLD STATION PINCER PULL
SV19	COLD STATION PINCER PULL
SV20	COLD STATION CYLINDER UP
SV21	COLD STATION TUBULAR INFLATE
SV22	COLD STATION WIPER DOWN
SV23	
SV24	
SV25	
SV26	MOULD RELEASE

Troubleshooting

